


ROOF HEADLINING


COMPONENTS

(2005/11-2006/01)


w/ Curtain Shield Airbag

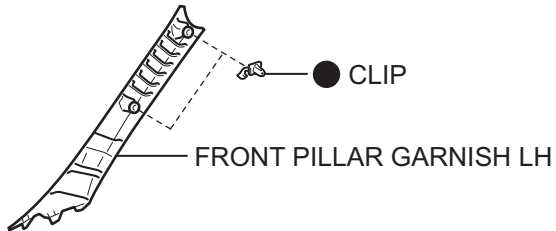

CENTER PILLAR GARNISH LH

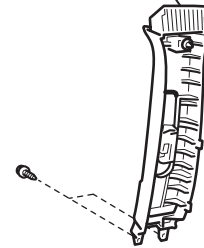


FRONT PILLAR GARNISH LH

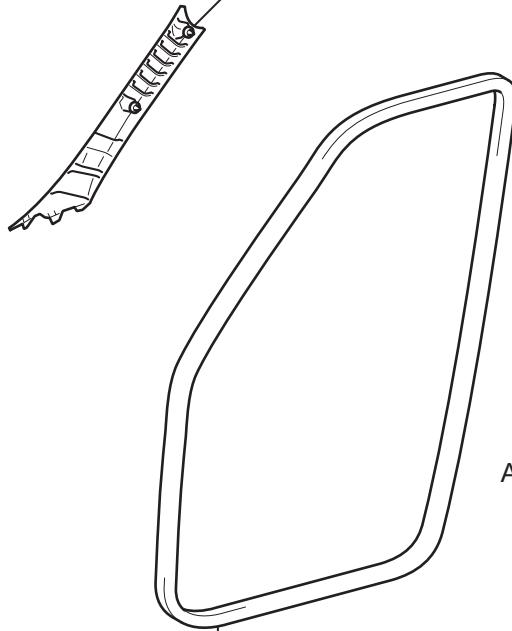

FRONT DOOR OPENING TRIM WEATHERSTRIP LH


42 (428, 31)

ANCHOR COVER

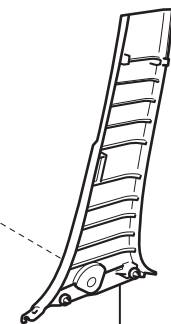

LOWER CENTER PILLAR GARNISH LH

FRONT SEAT OUTER BELT ASSEMBLY LH

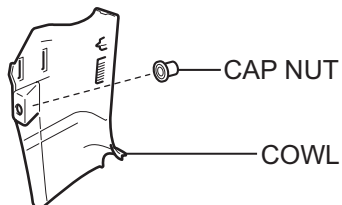

CAP NUT

COWL SIDE TRIM BOARD LH



FRONT DOOR SCUFF PLATE LH


[N*m (kgf*cm, ft.*lbf)] : Specified torque

● Non-reusable part



IR

IR


w/ Curtain Shield Airbag

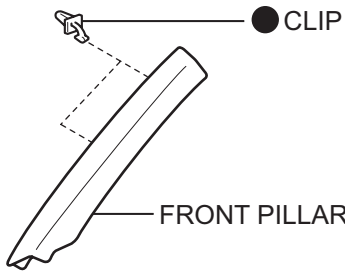

CENTER PILLAR GARNISH RH

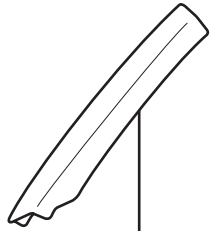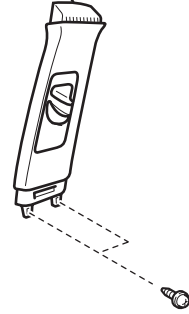


FRONT PILLAR GARNISH RH

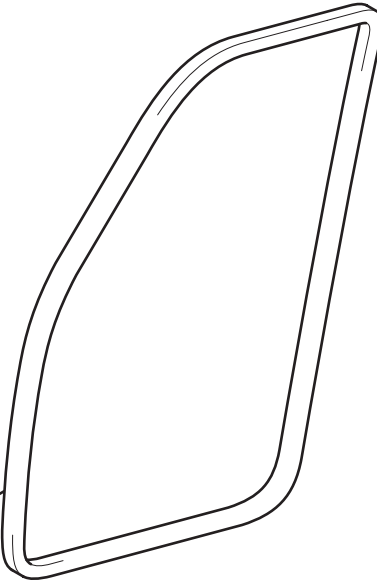

FRONT DOOR OPENING TRIM WEATHERSTRIP RH

LOWER CENTER PILLAR GARNISH RH

FRONT SEAT OUTER BELT ASSEMBLY RH

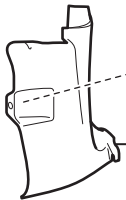

CAP NUT

COWL SIDE TRIM BOARD RH

42 (428, 31)

ANCHOR COVER




FRONT DOOR SCUFF PLATE RH

N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part


w/o Rear No. 2 Seat

IR

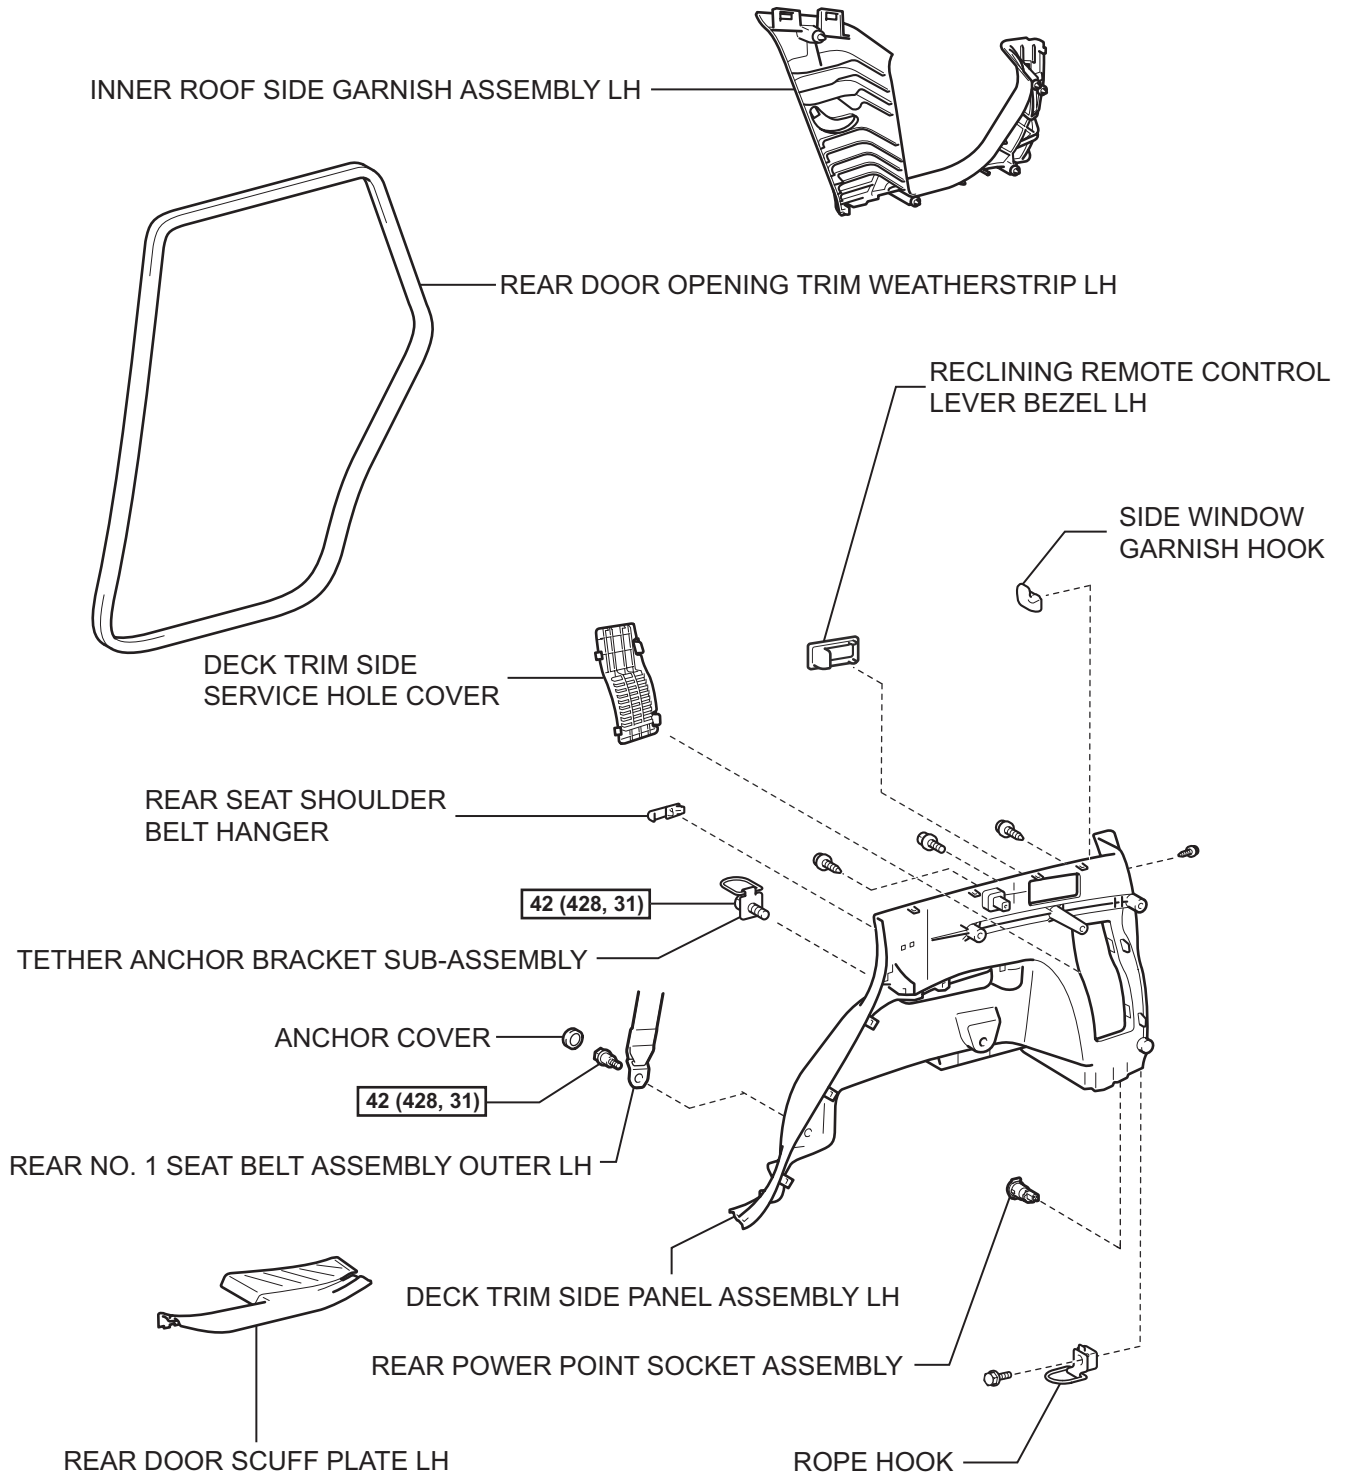


$\boxed{\text{N}\cdot\text{m (kgf}\cdot\text{cm, ft.}\cdot\text{lbf)}}$: Specified torque

w/ Rear No. 2 Seat

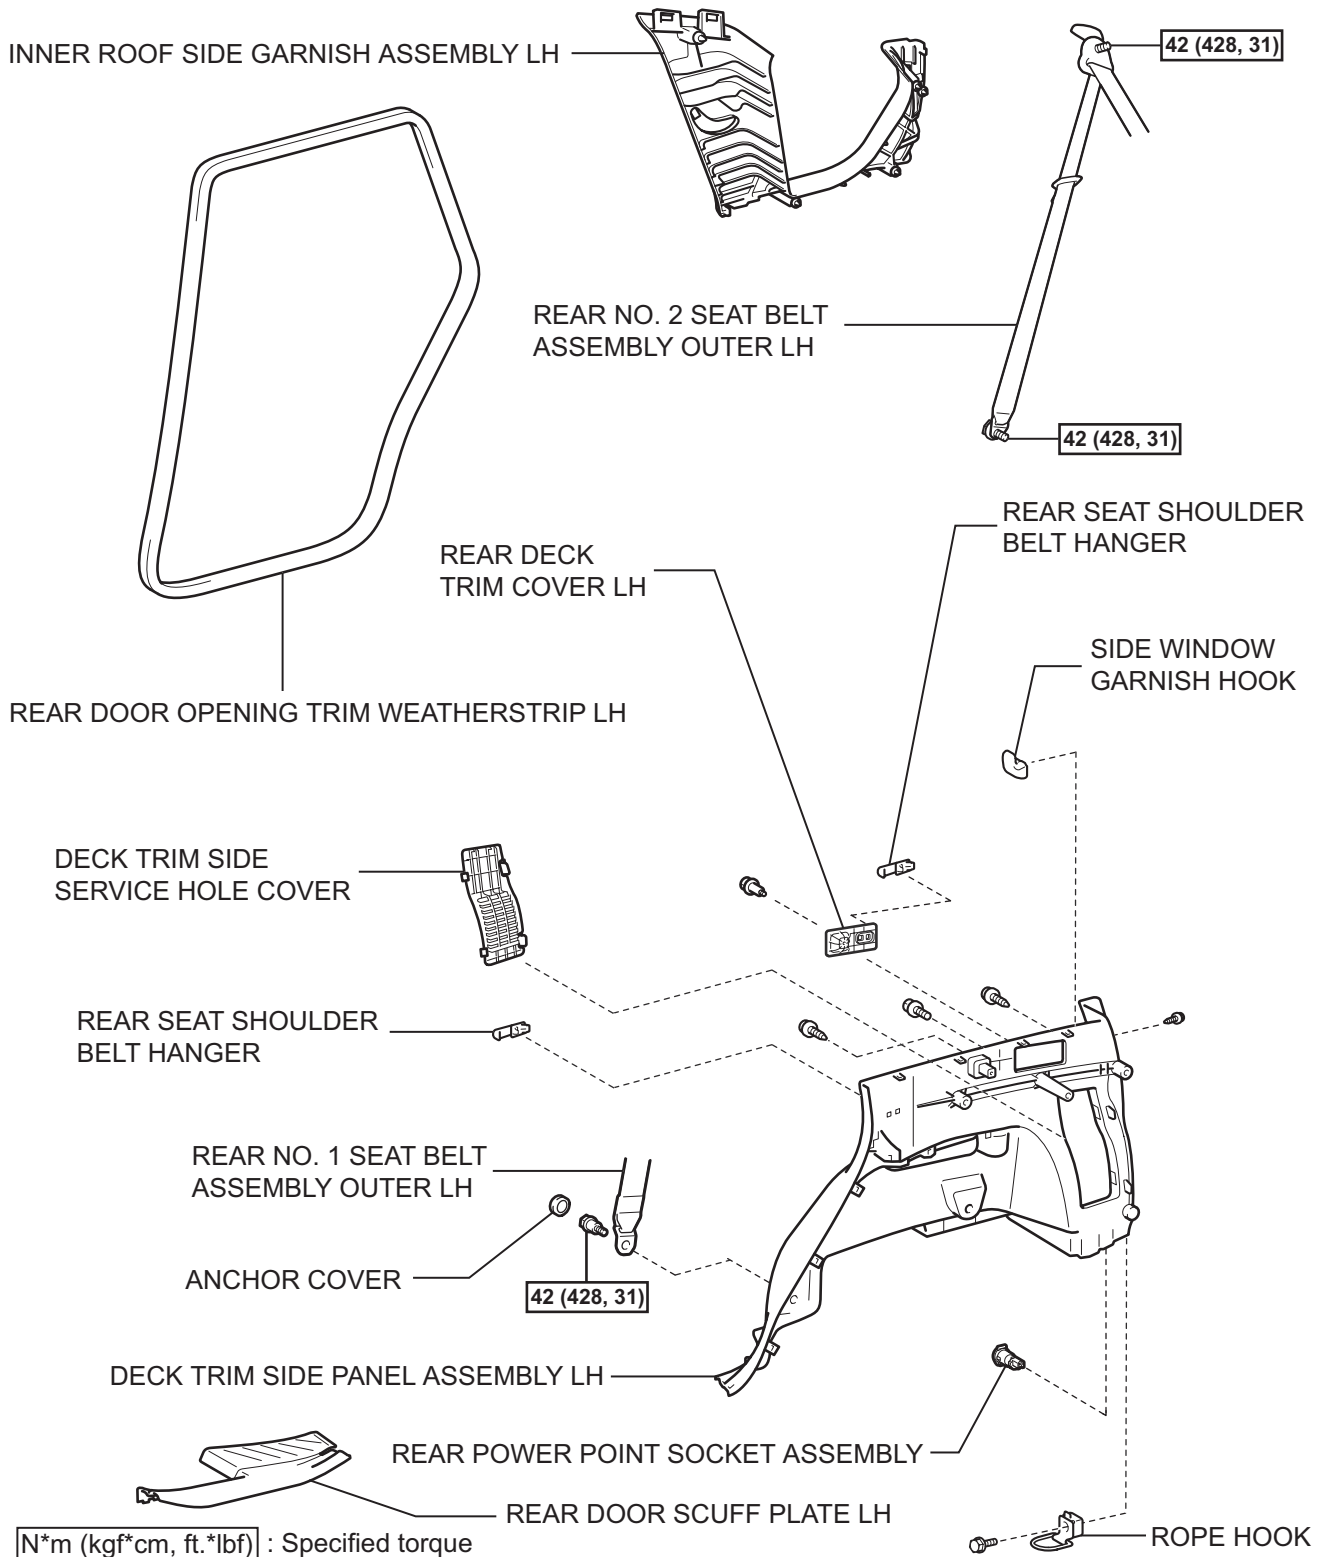


w/o Rear No. 2 Seat

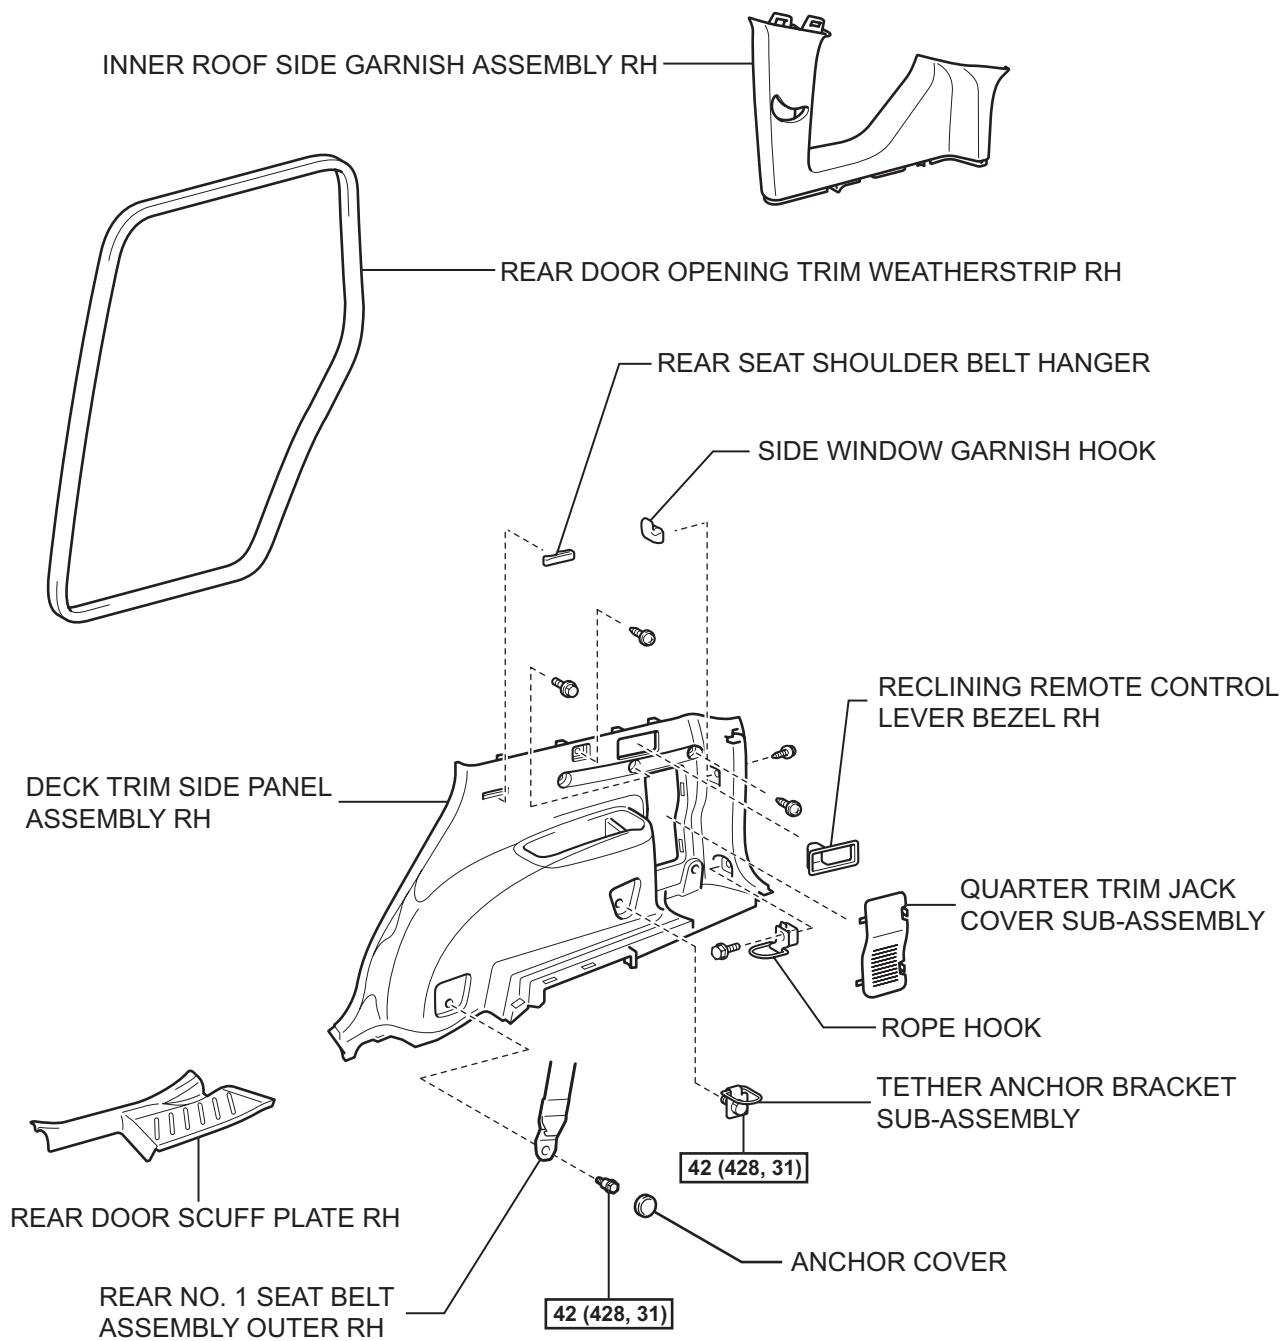

N*m (kgf*cm, ft.*lbf) : Specified torque


IR

w/ Rear No. 2 Seat

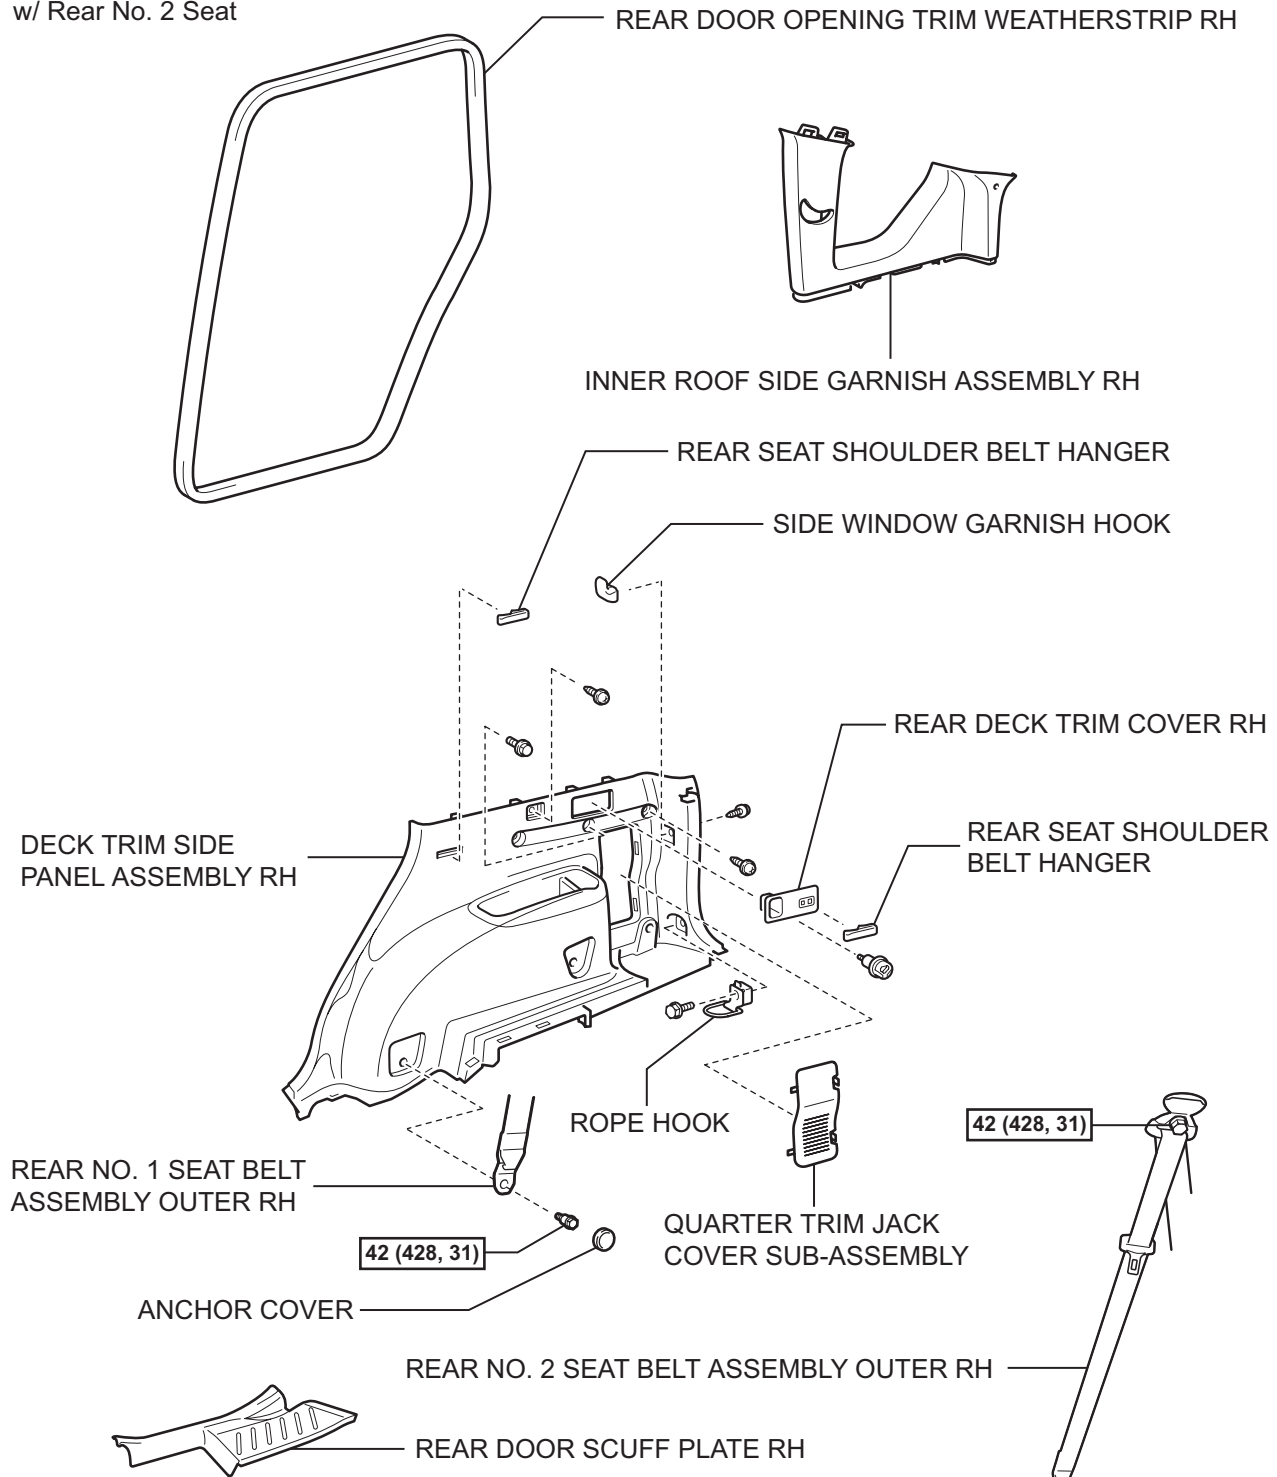

N*m (kgf*cm, ft.*lbf) : Specified torque


w/o Rear No. 2 Seat

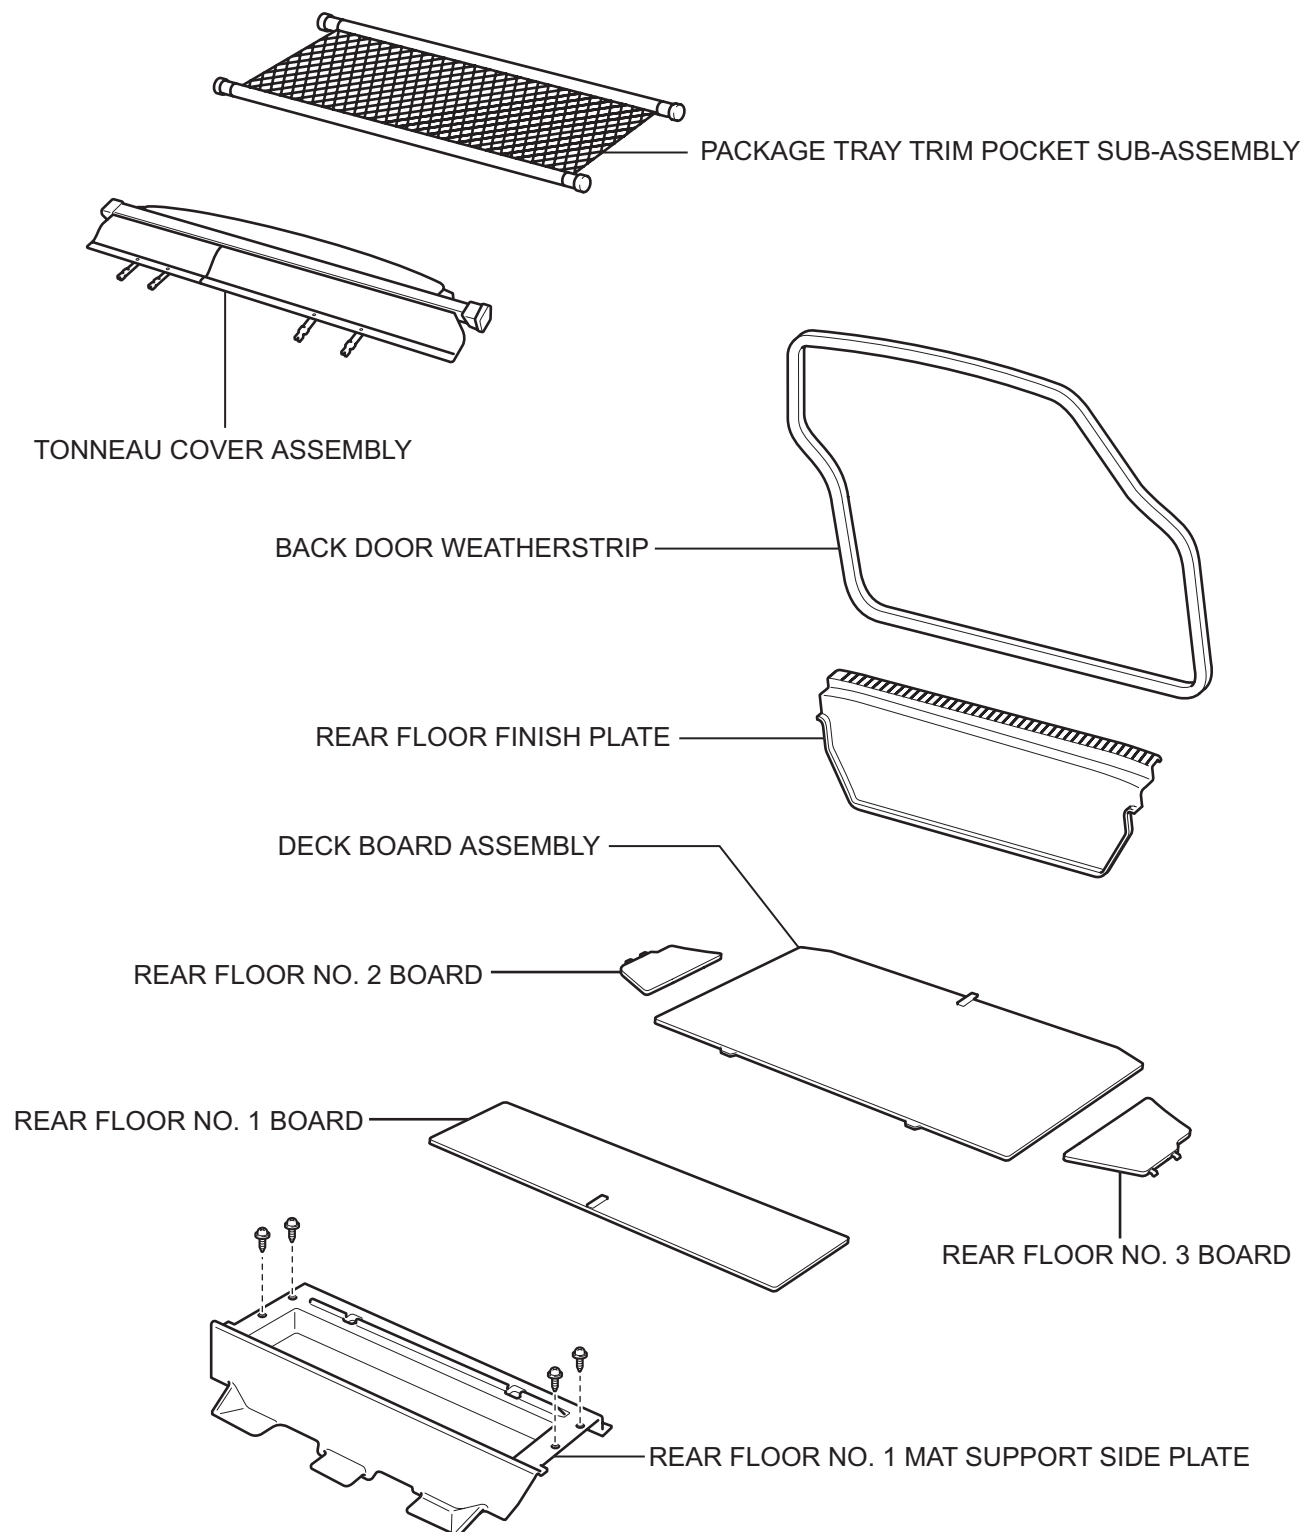


IR

IR


w/ Rear No. 2 Seat

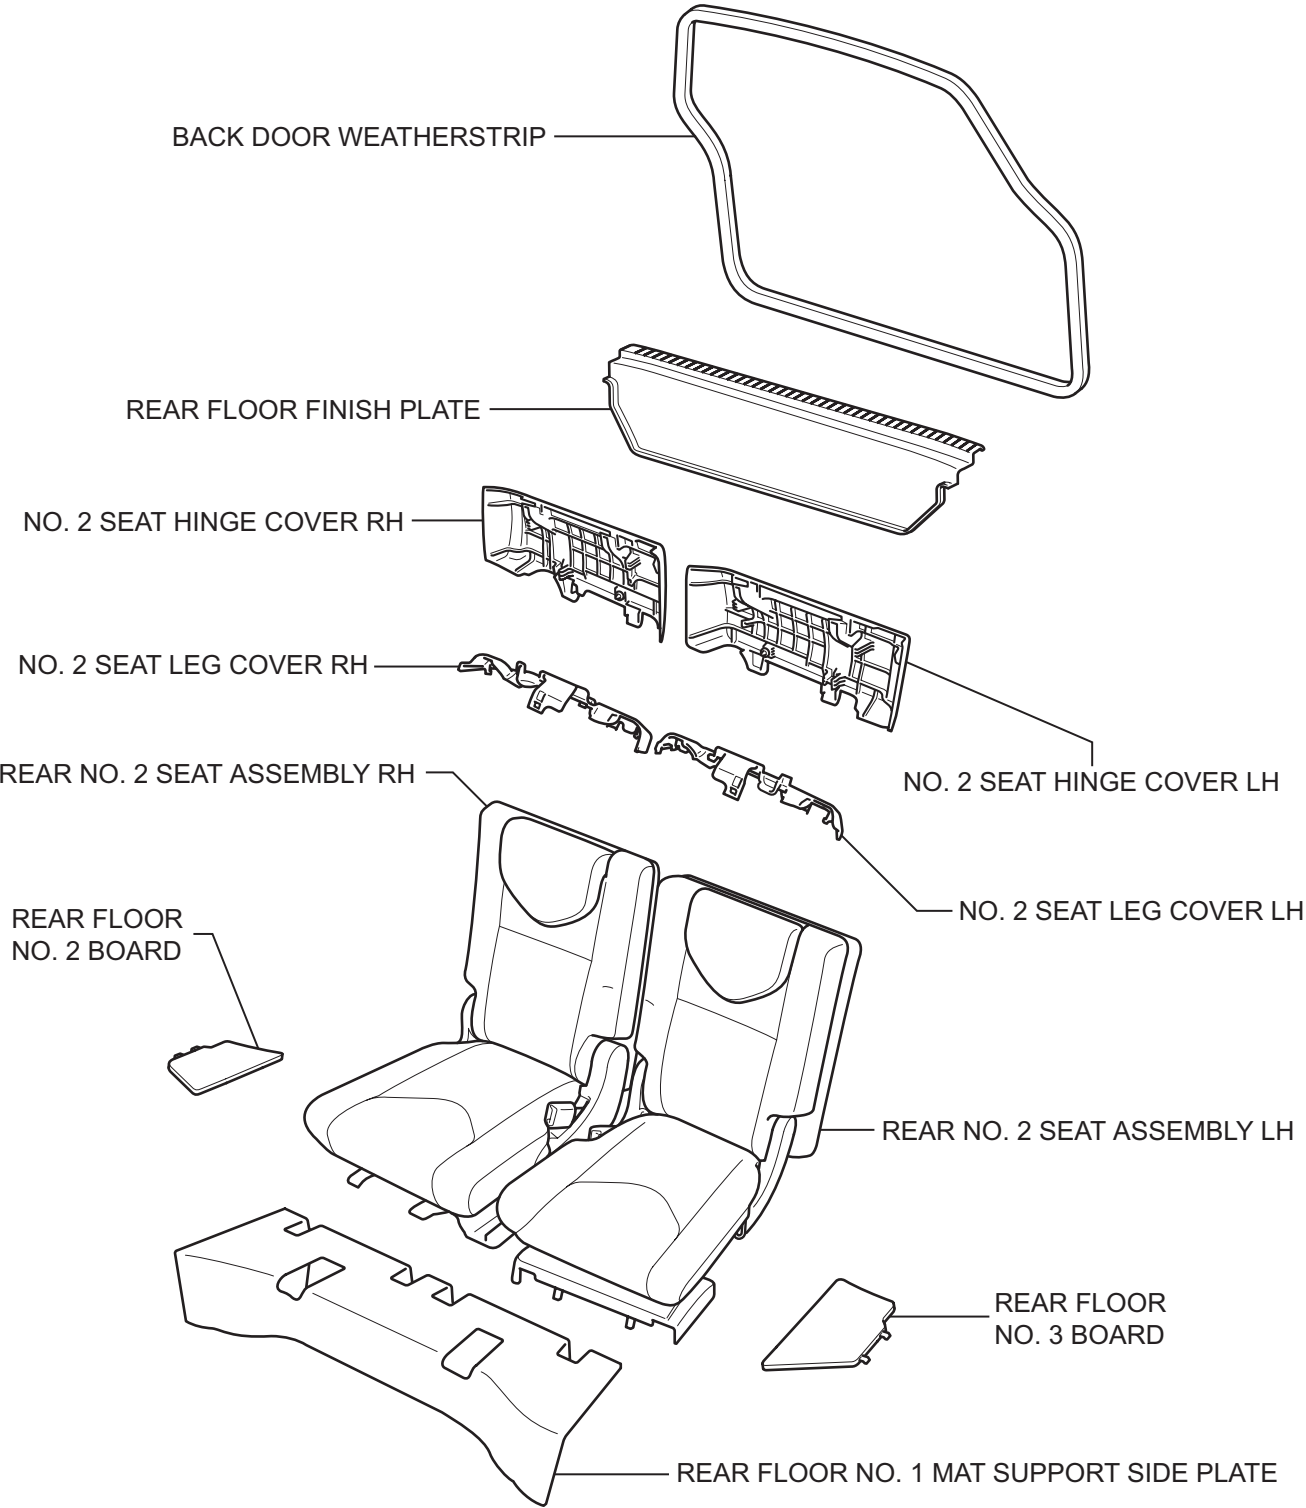

INSTRUMENT PANEL SUB-ASSEMBLY

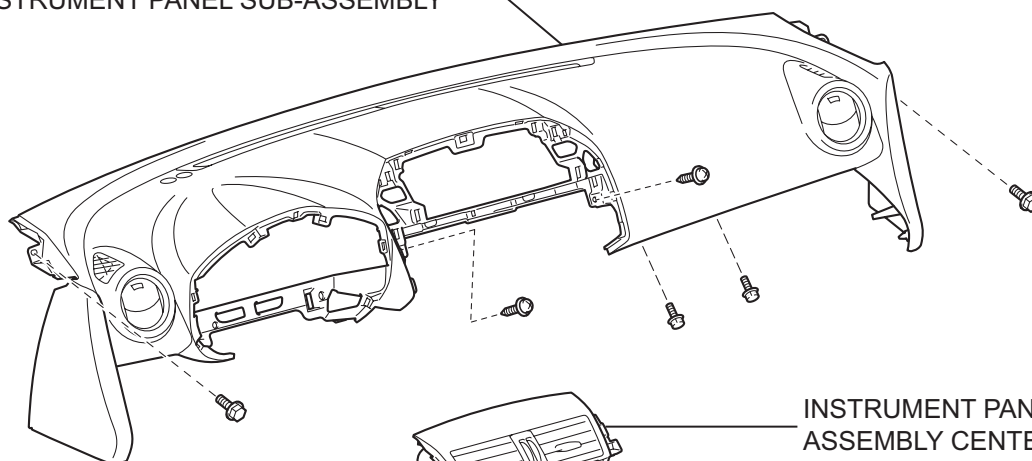


INSTRUMENT PANEL REGISTER
ASSEMBLY CENTER

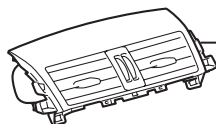


NO. 1 INSTRUMENT CLUSTER
FINISH PANEL CENTER



 
NO. 2 INSTRUMENT CLUSTER
FINISH PANEL CENTER




COMBINATION METER ASSEMBLY

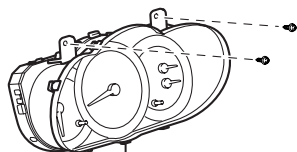

RADIO RECEIVER

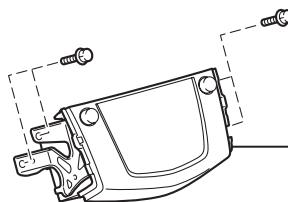


INSTRUMENT CLUSTER FINISH PANEL ASSEMBLY

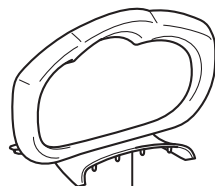


GLOVE COMPARTMENT DOOR
STOPPER SUB-ASSEMBLY






GLOVE COMPARTMENT
DOOR ASSEMBLY

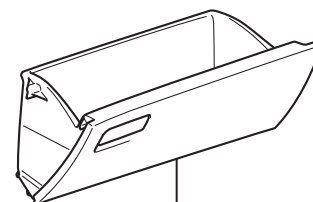

IR



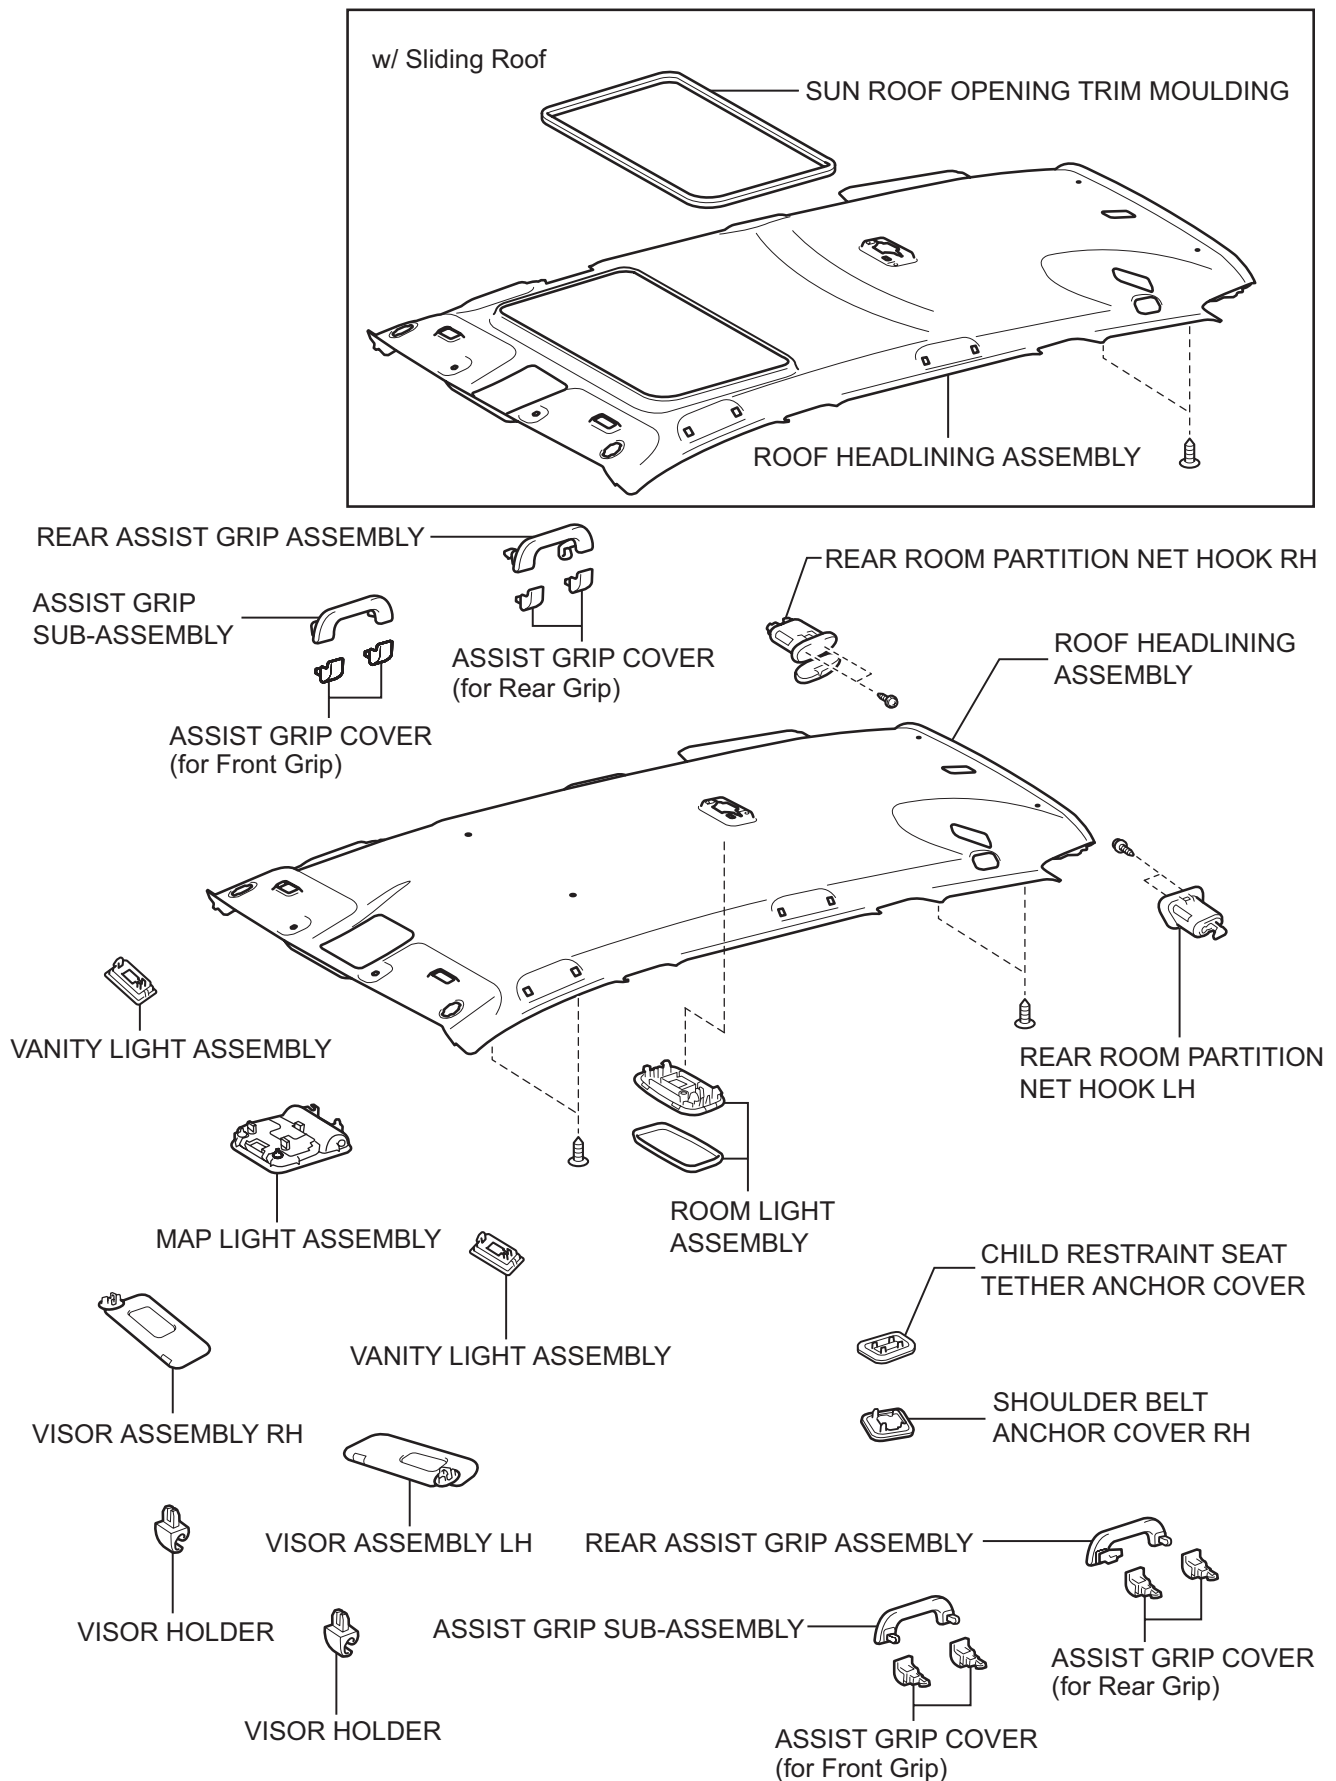


w/o Sliding Roof

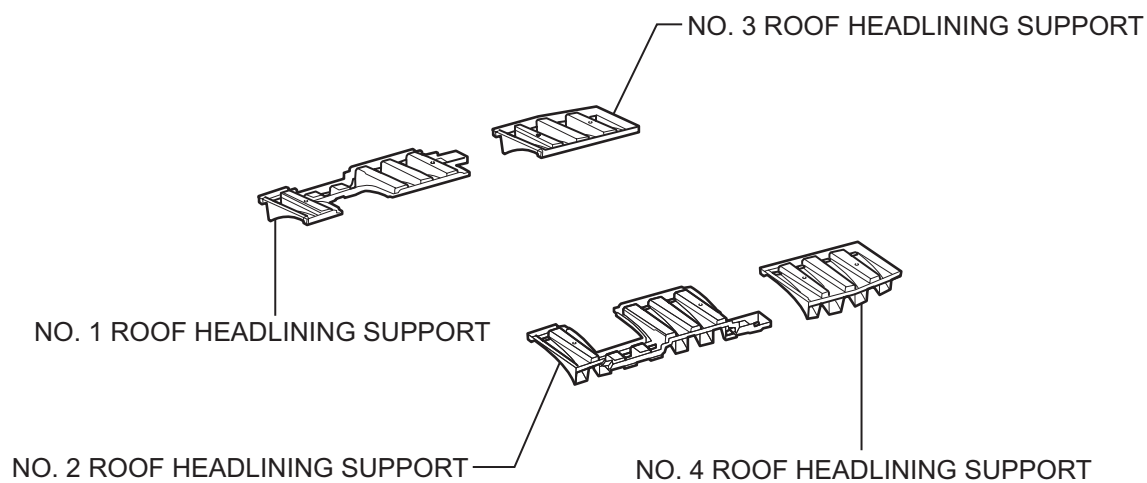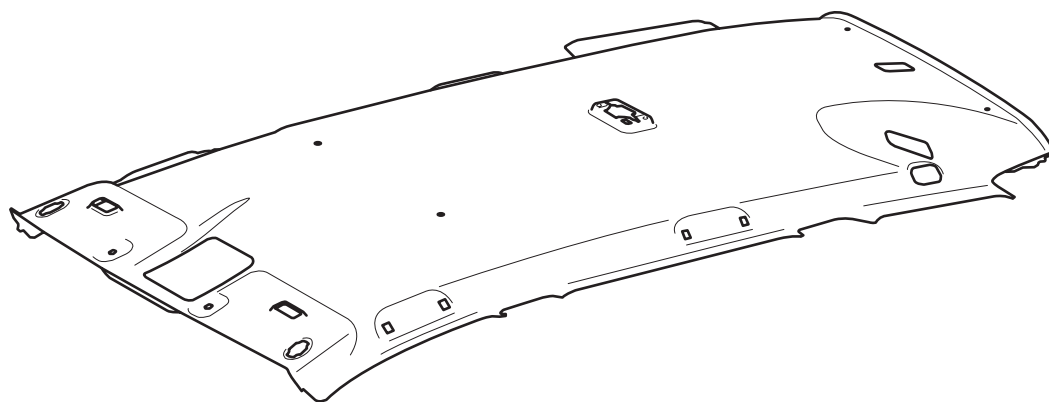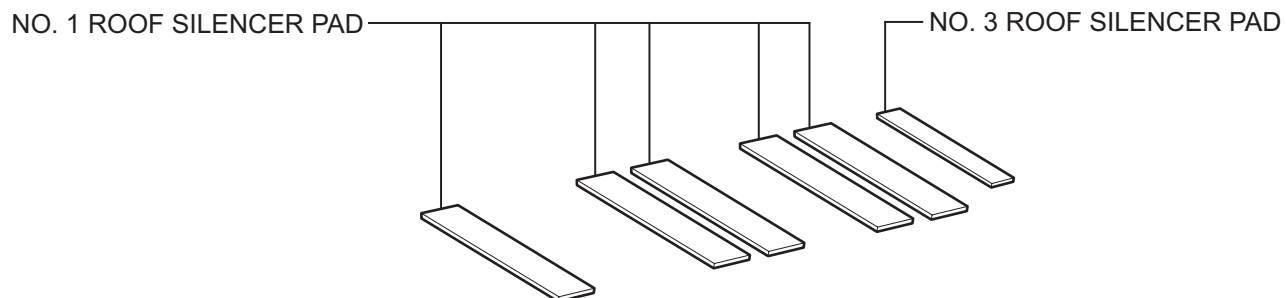

IR


w/ Sliding Roof

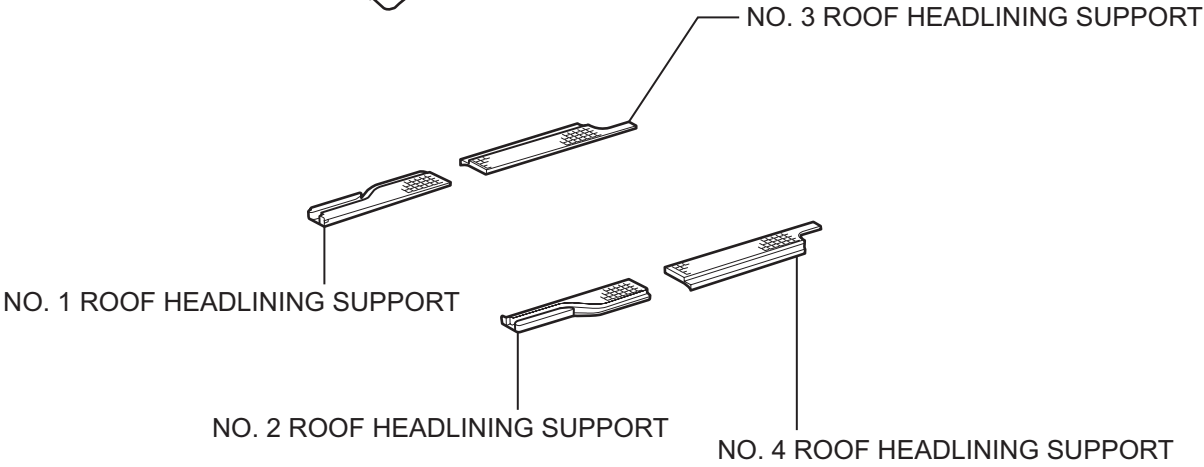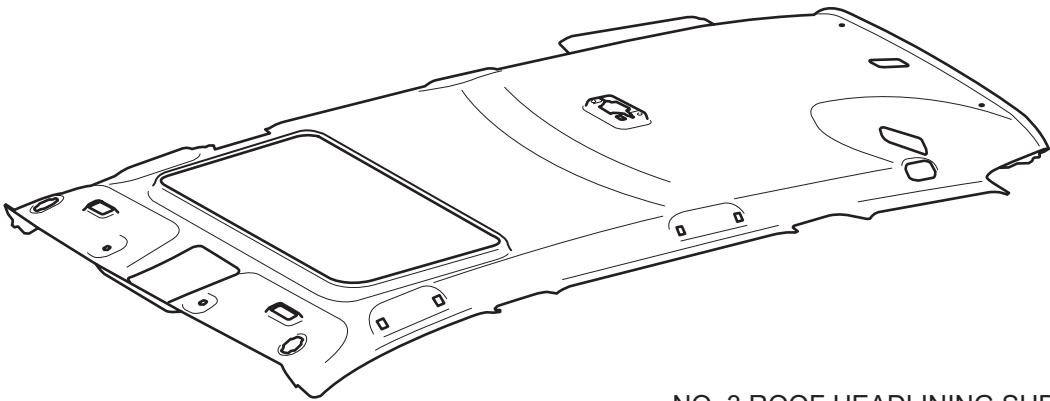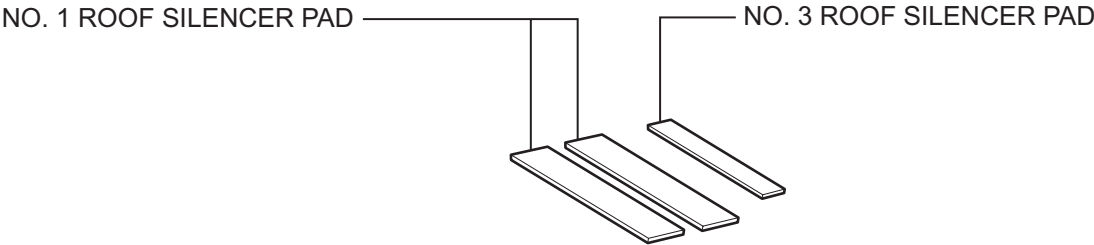


COMPONENTS

(2006/01-)


w/ Curtain Shield Airbag

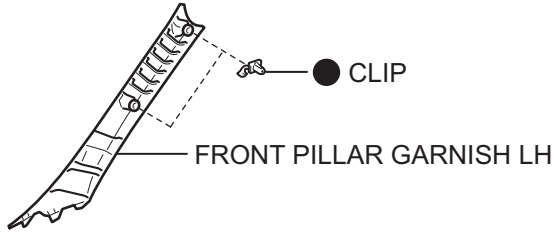

CENTER PILLAR GARNISH LH

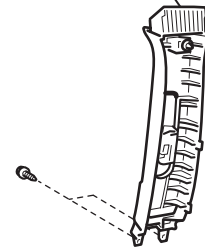


FRONT PILLAR GARNISH LH

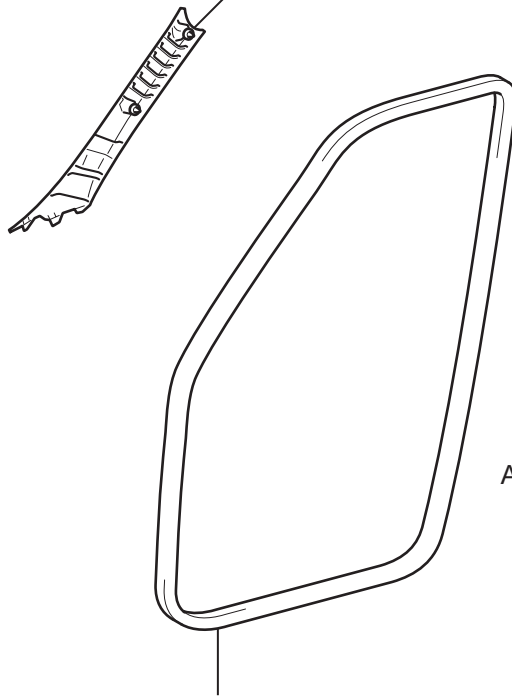

42 (428, 31)


ANCHOR COVER

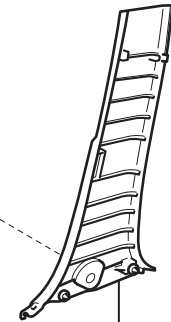

LOWER CENTER PILLAR GARNISH LH

FRONT DOOR OPENING TRIM WEATHERSTRIP LH

FRONT SEAT OUTER BELT ASSEMBLY LH

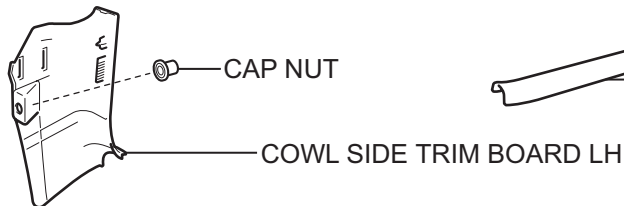

CAP NUT

COWL SIDE TRIM BOARD LH




FRONT DOOR SCUFF PLATE LH

[N*m (kgf*cm, ft.*lbf)] : Specified torque



● Non-reusable part

IR


w/ Curtain Shield Airbag

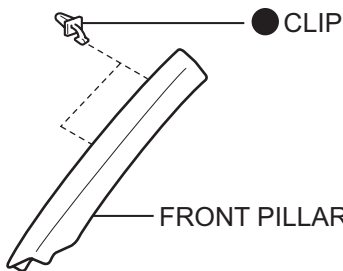

CENTER PILLAR GARNISH RH

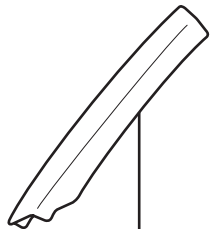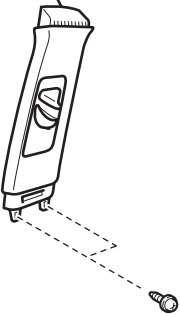


FRONT PILLAR GARNISH RH

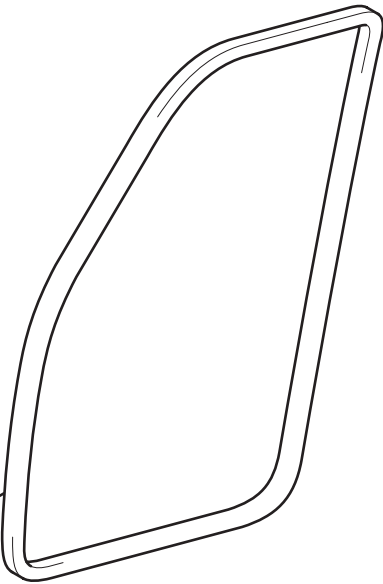

FRONT DOOR OPENING TRIM WEATHERSTRIP RH

LOWER CENTER PILLAR GARNISH RH

FRONT SEAT OUTER BELT ASSEMBLY RH

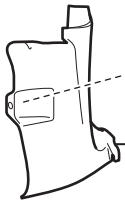

CAP NUT

COWL SIDE TRIM BOARD RH

42 (428, 31)

ANCHOR COVER


FRONT DOOR SCUFF PLATE RH

N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part


w/o Rear No. 2 Seat

IR

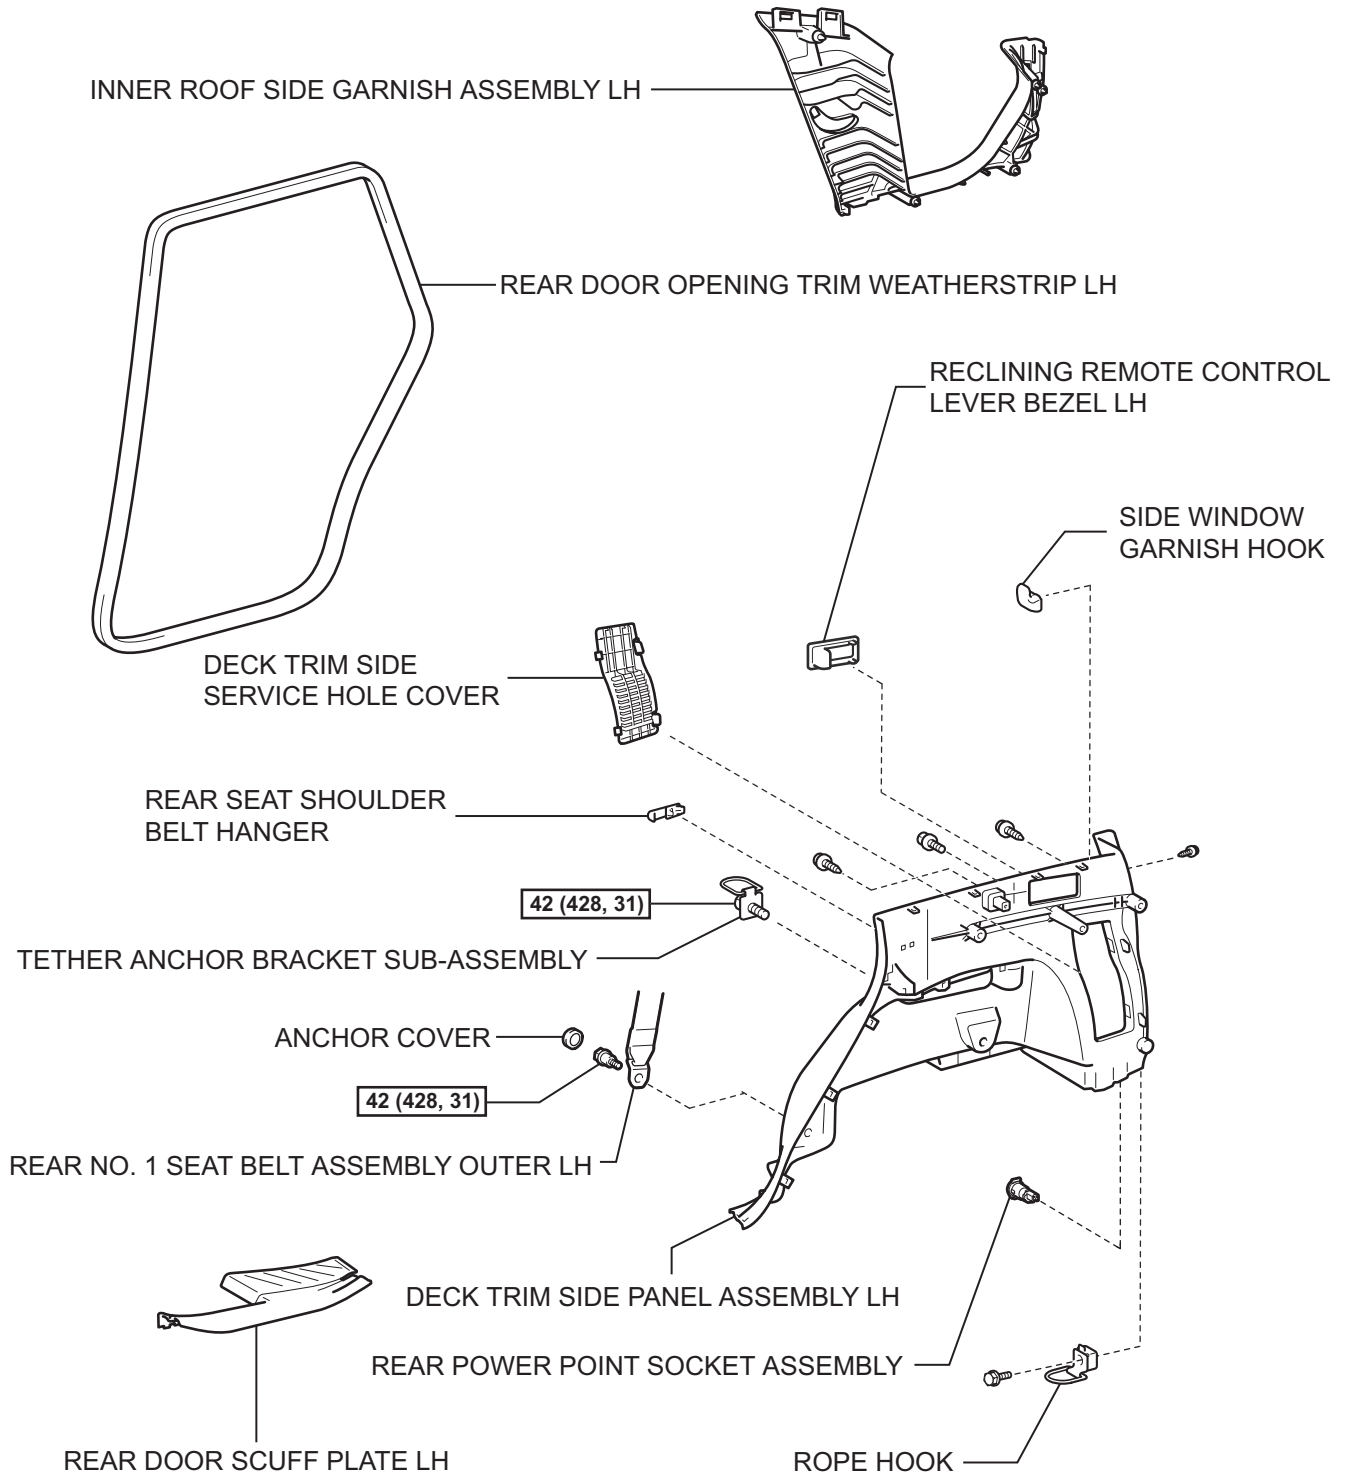


N*m (kgf*cm, ft.*lbf) : Specified torque

 INNER ROOF SIDE GARNISH ASSEMBLY LH




w/o Rear No. 2 Seat

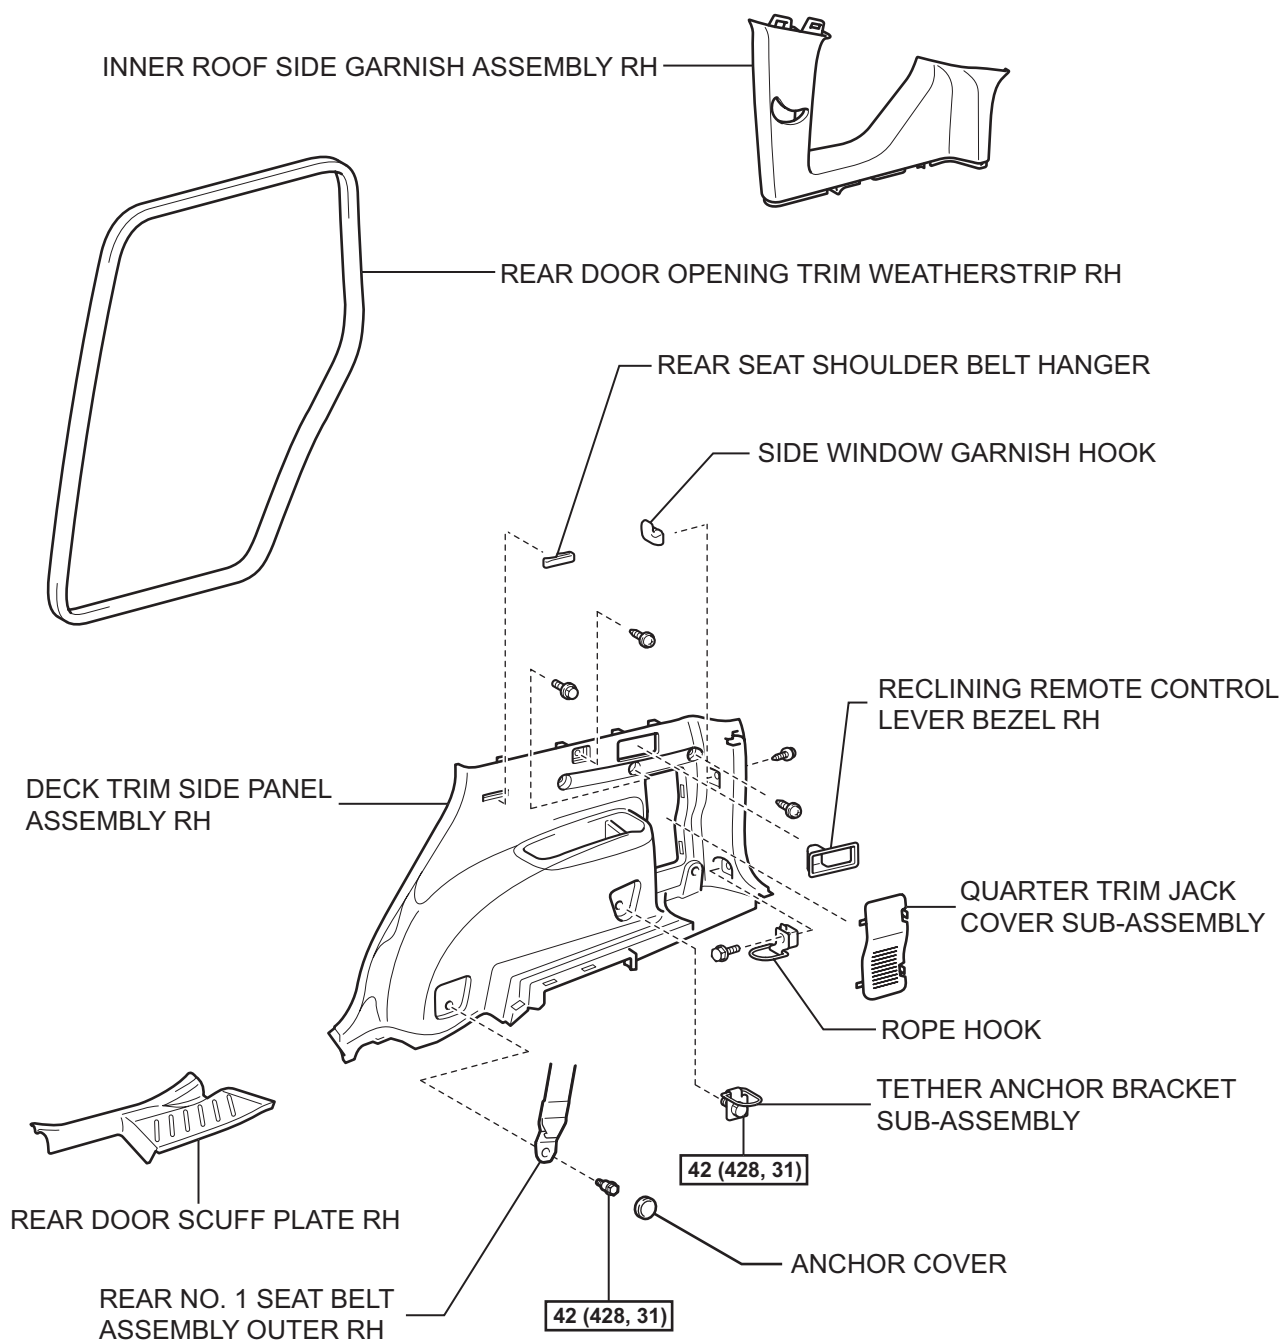

N*m (kgf*cm, ft.*lbf) : Specified torque


IR

w/ Rear No. 2 Seat

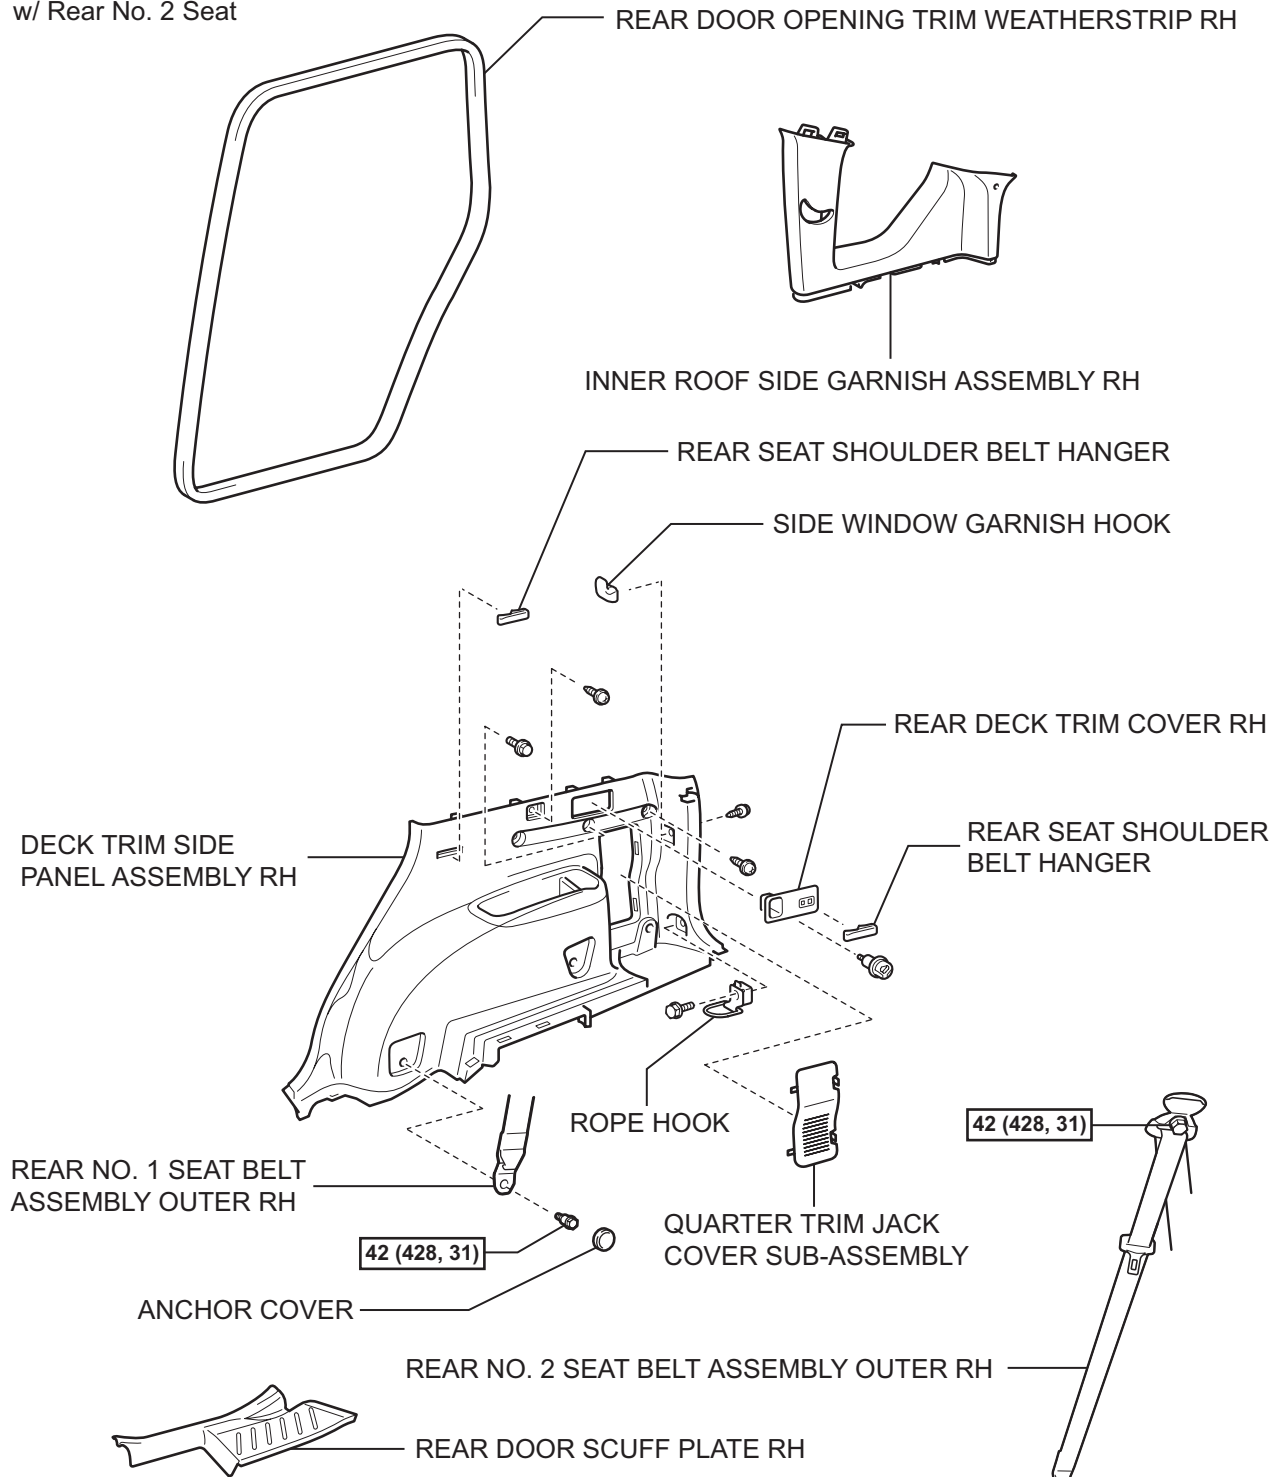

N*m (kgf*cm, ft.*lbf) : Specified torque


w/o Rear No. 2 Seat

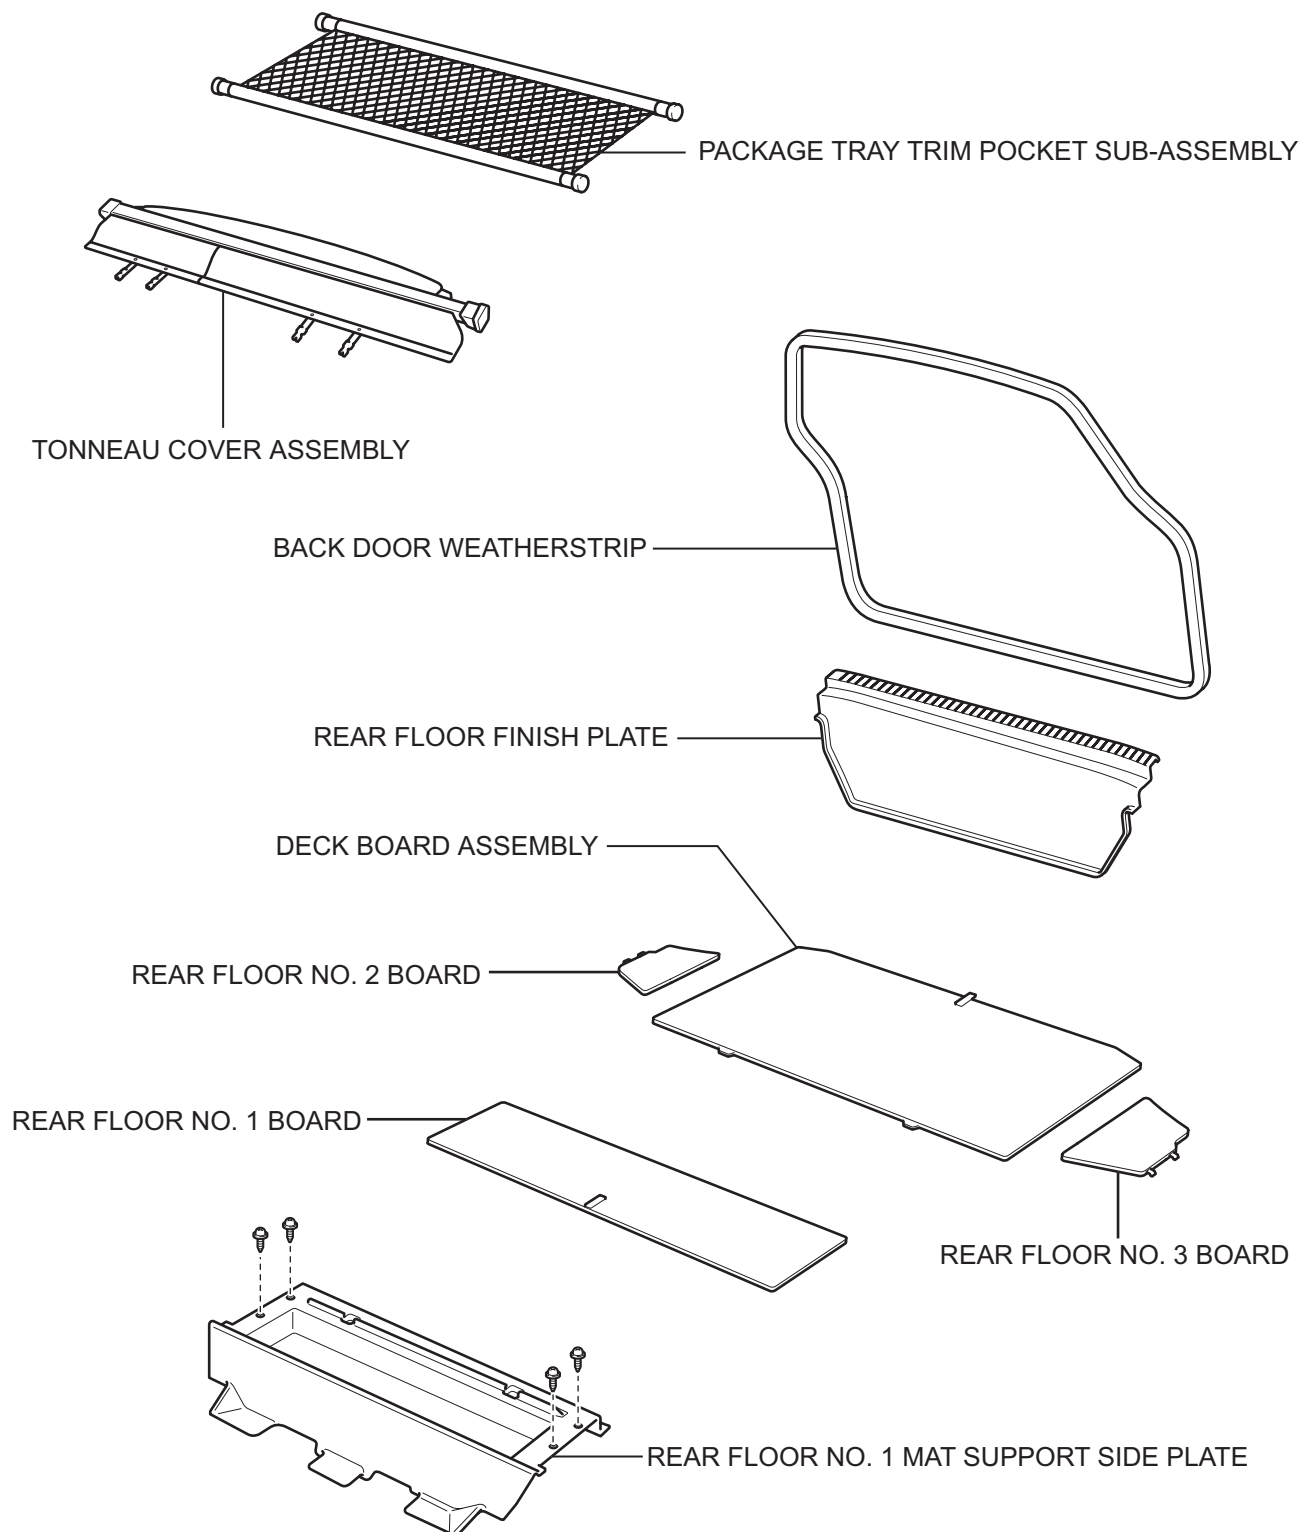


IR

IR


w/ Rear No. 2 Seat

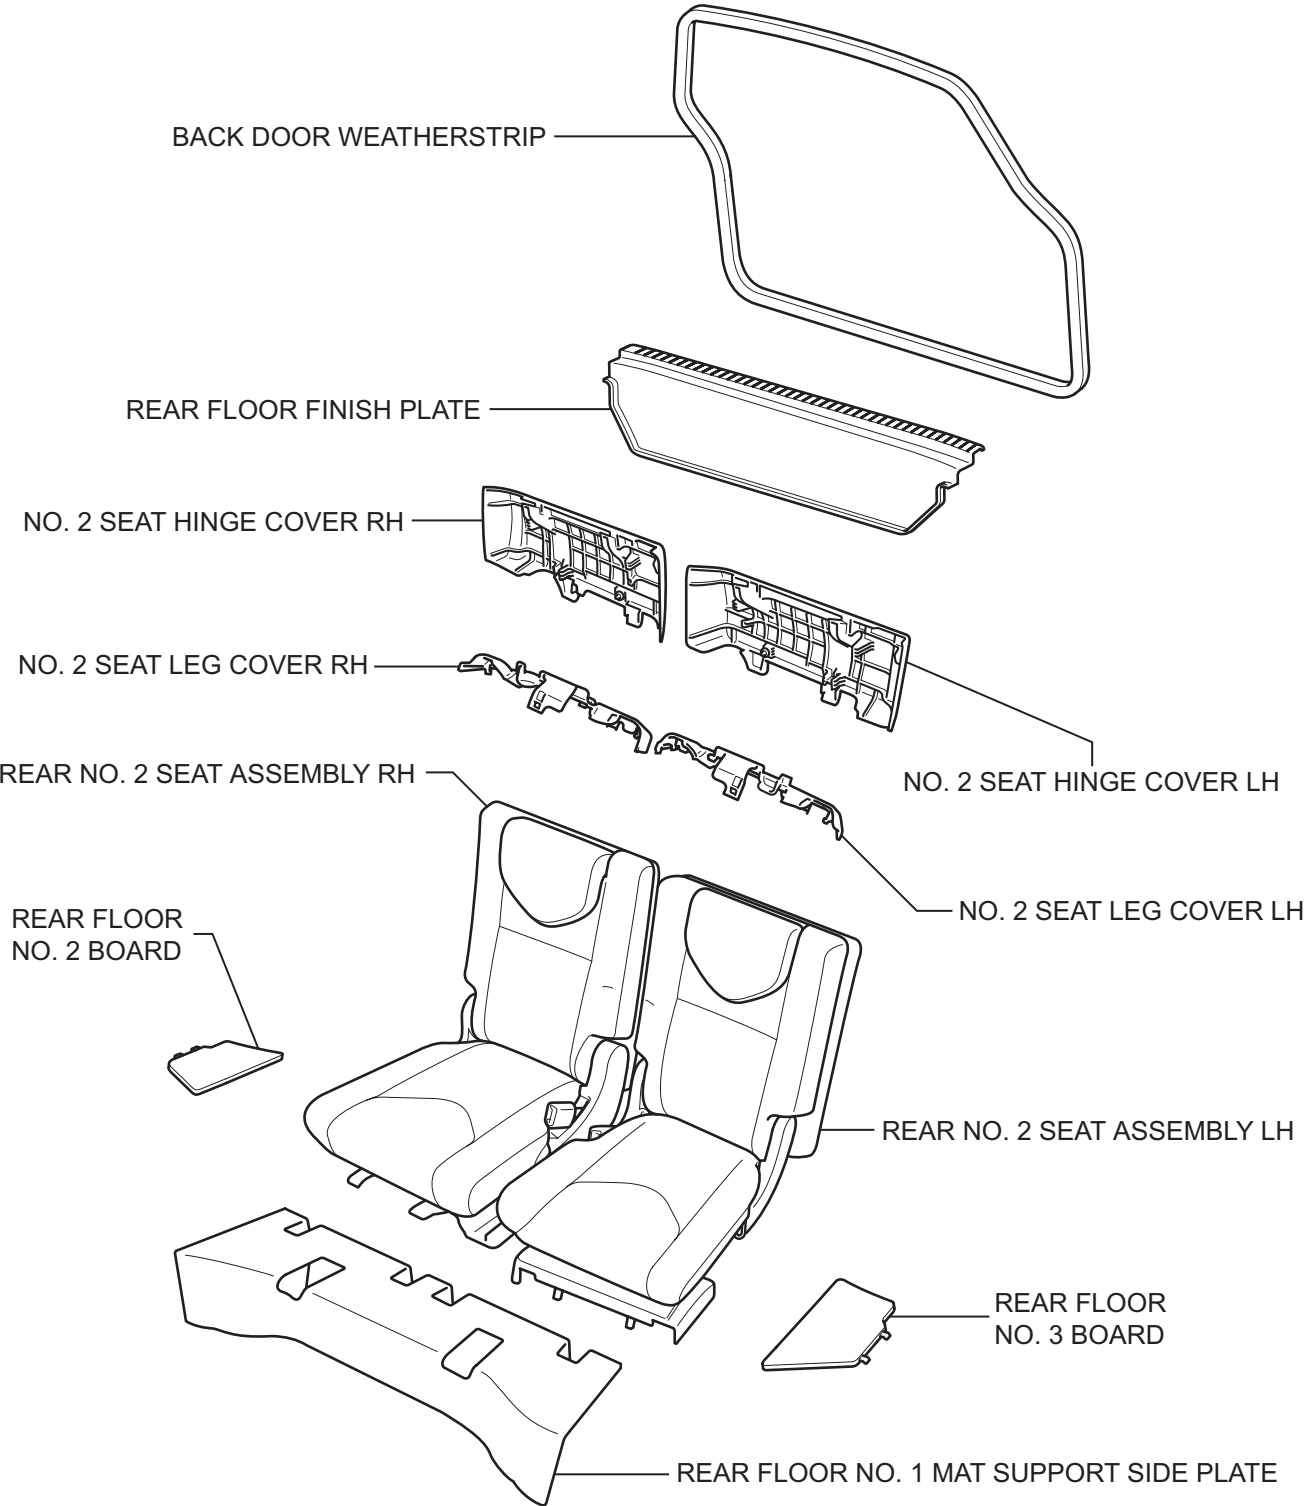

INSTRUMENT PANEL SUB-ASSEMBLY

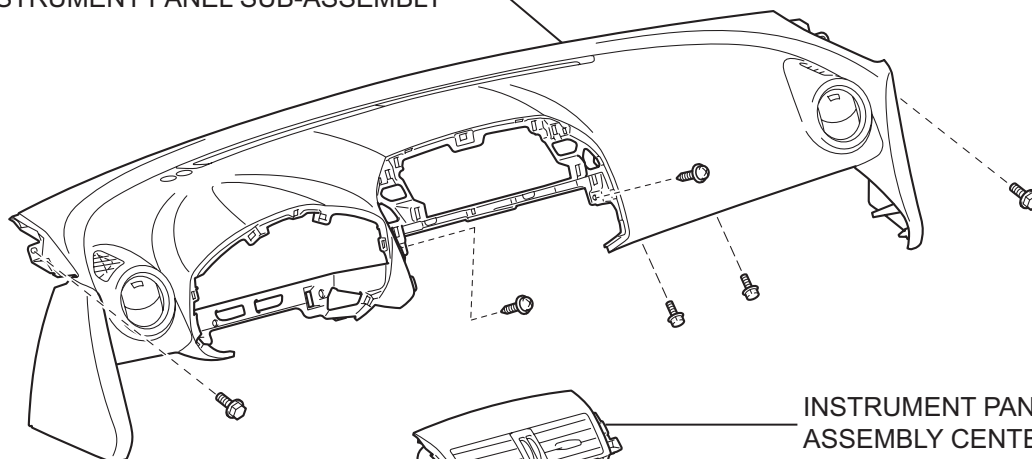



INSTRUMENT PANEL REGISTER
ASSEMBLY CENTER

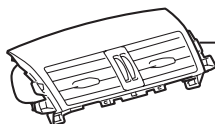


NO. 1 INSTRUMENT CLUSTER
FINISH PANEL CENTER



 
NO. 2 INSTRUMENT CLUSTER
FINISH PANEL CENTER

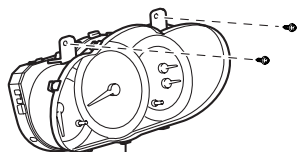

COMBINATION METER ASSEMBLY

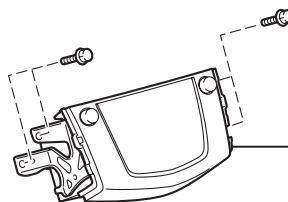


RADIO RECEIVER

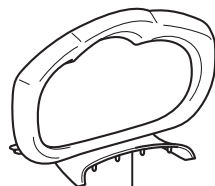


INSTRUMENT CLUSTER FINISH PANEL ASSEMBLY


GLOVE COMPARTMENT DOOR
STOPPER SUB-ASSEMBLY

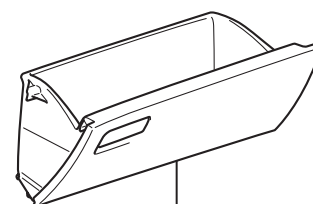


GLOVE COMPARTMENT
DOOR ASSEMBLY

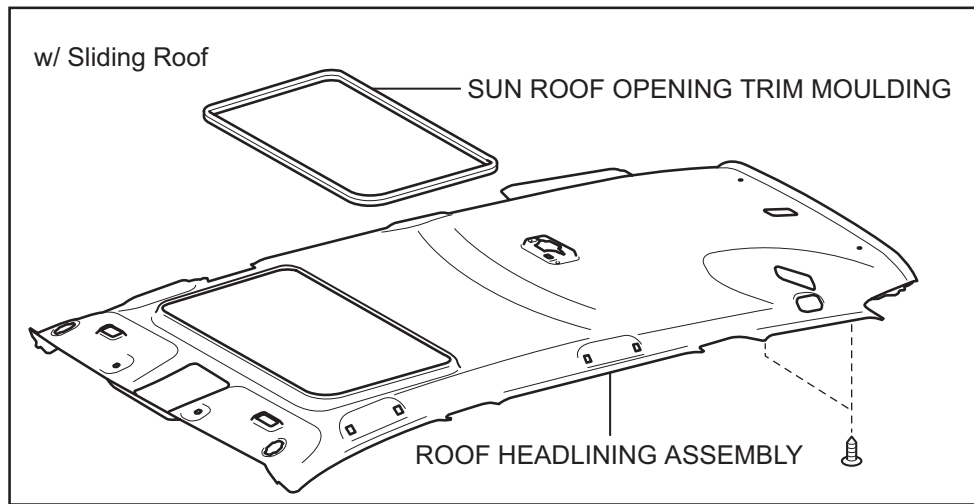

IR



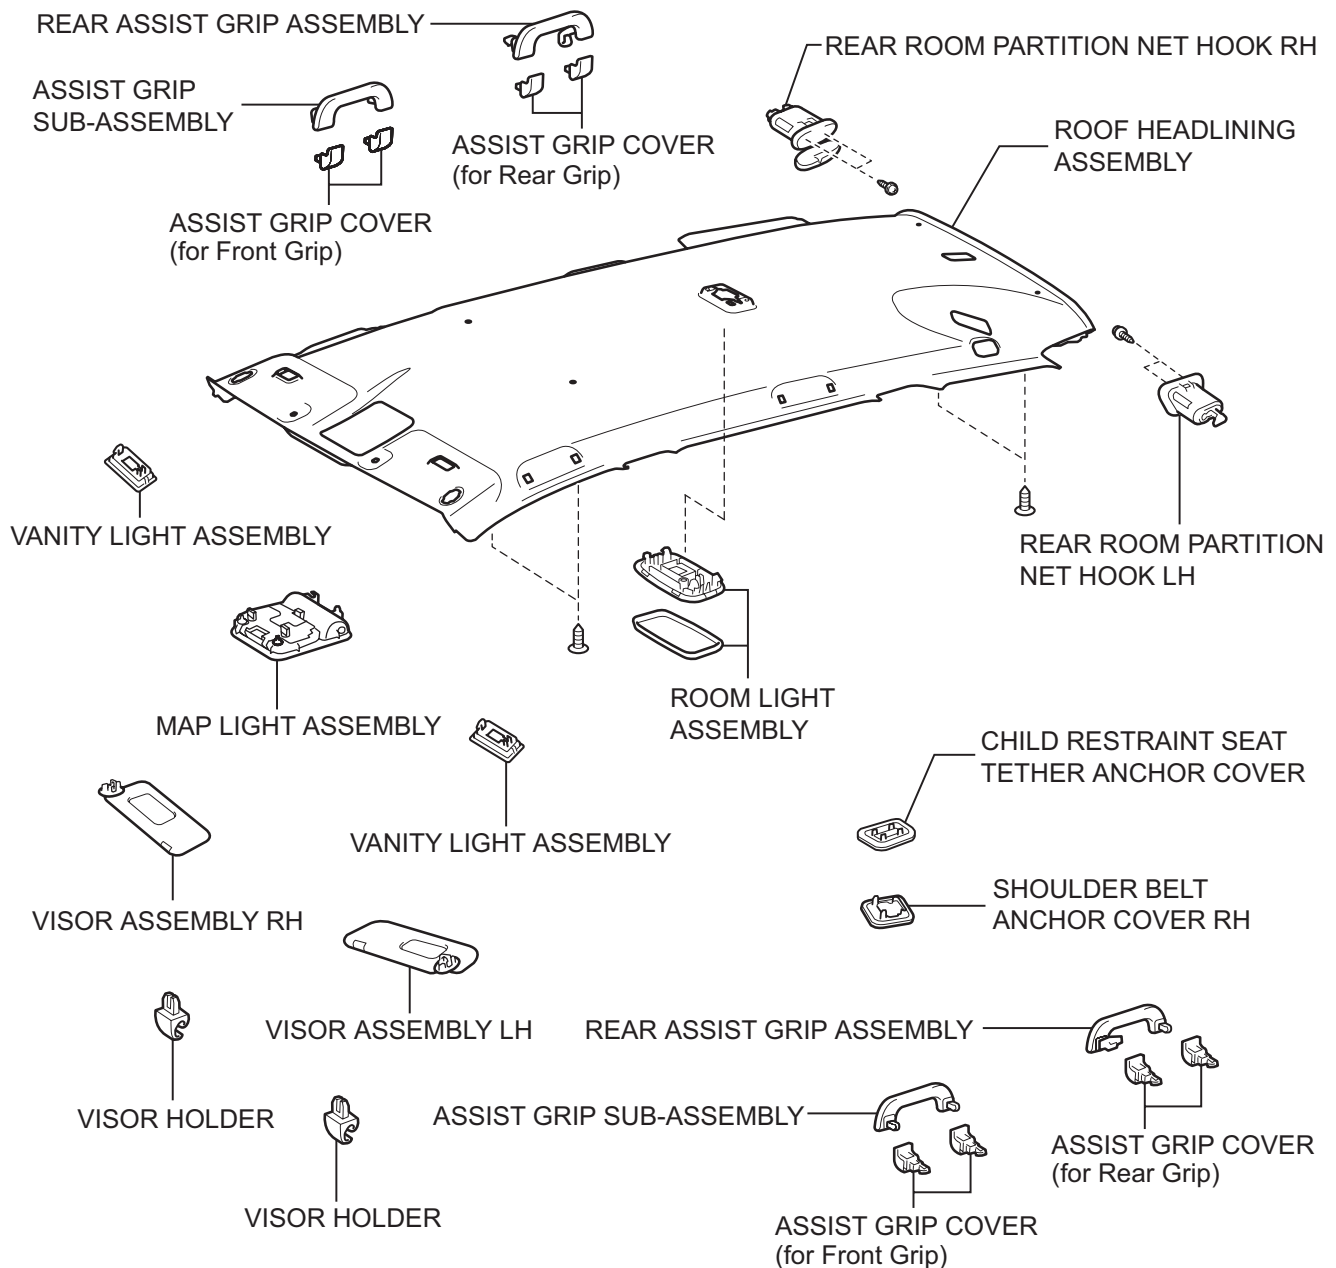


w/ Television Display

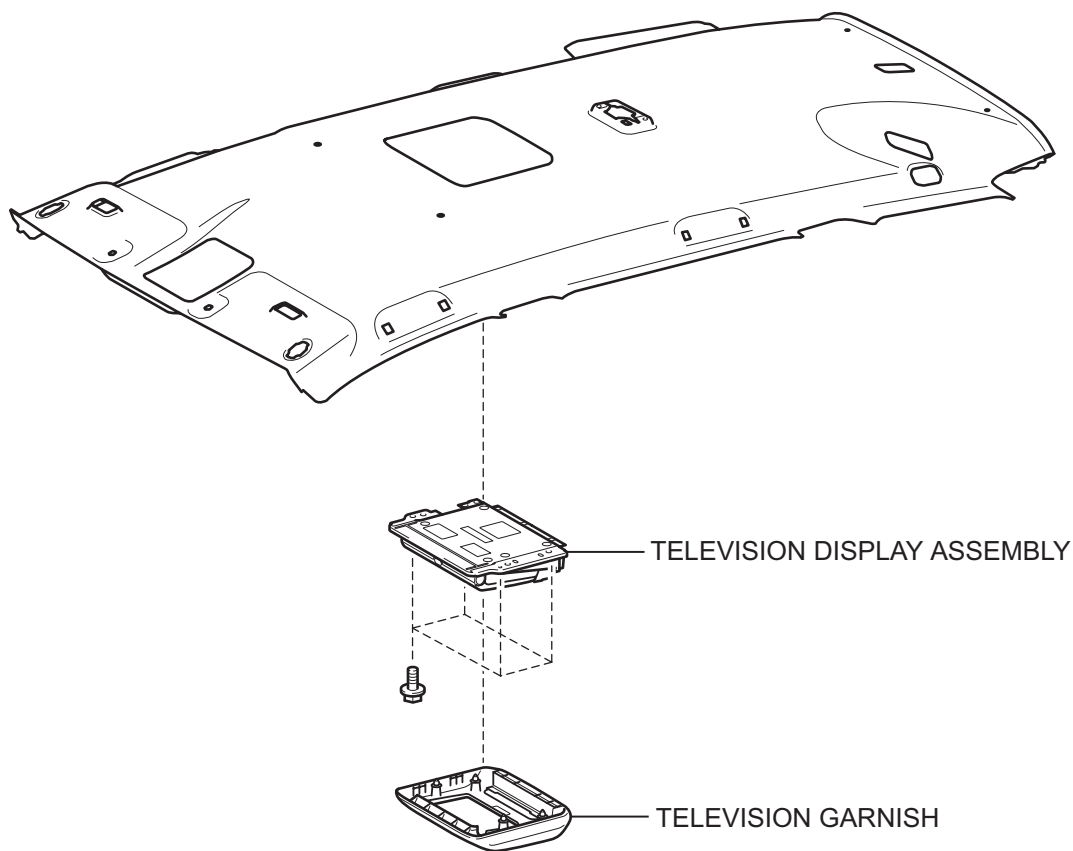


IR

w/o Sliding Roof

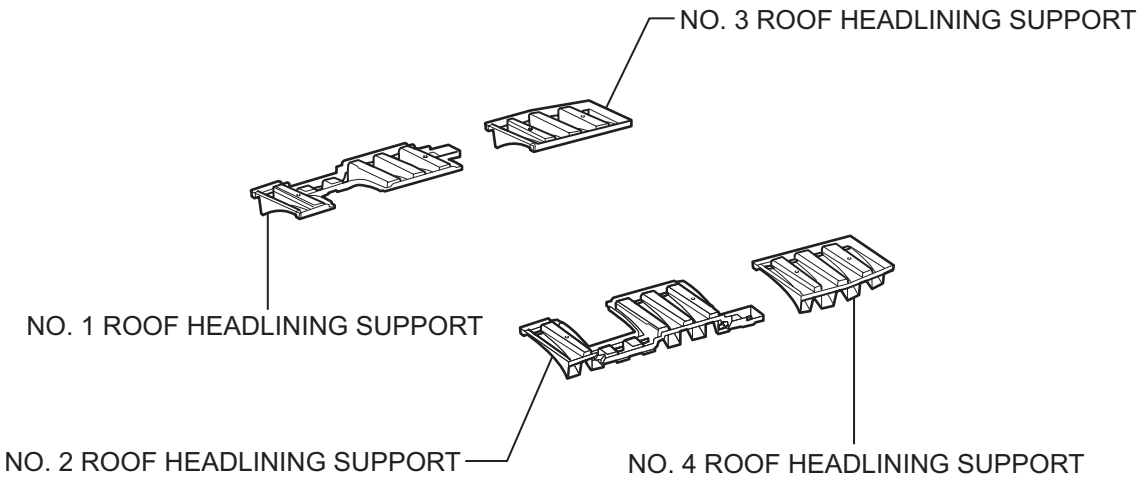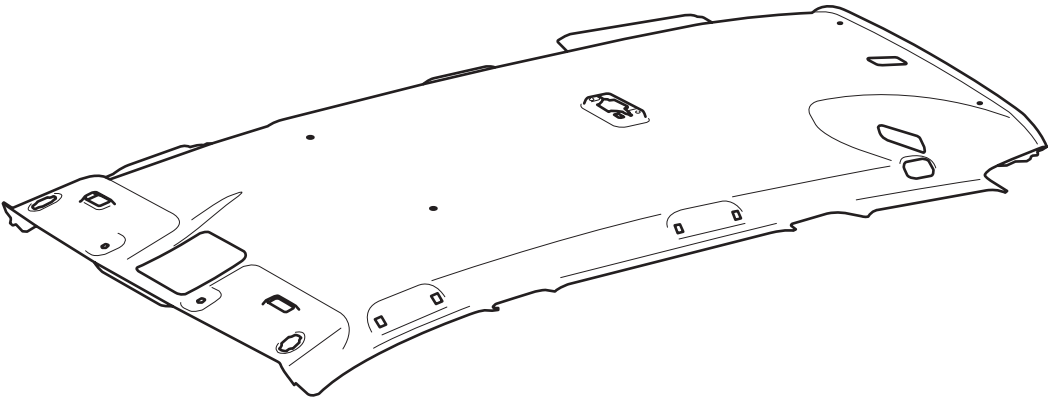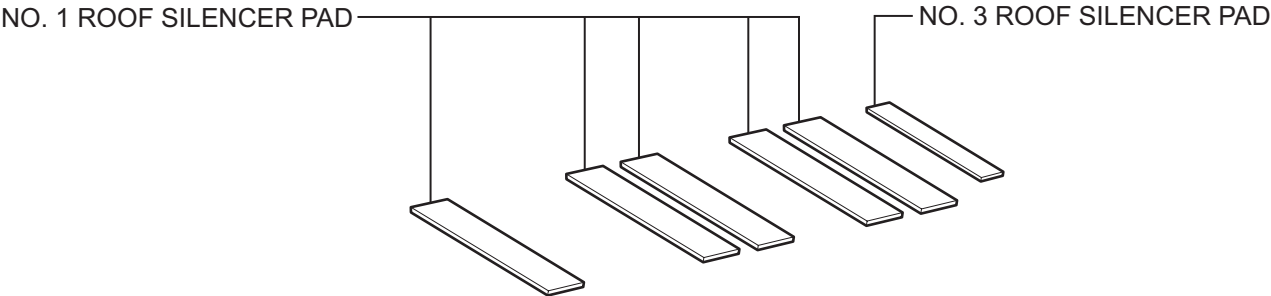

w/ Sliding Roof

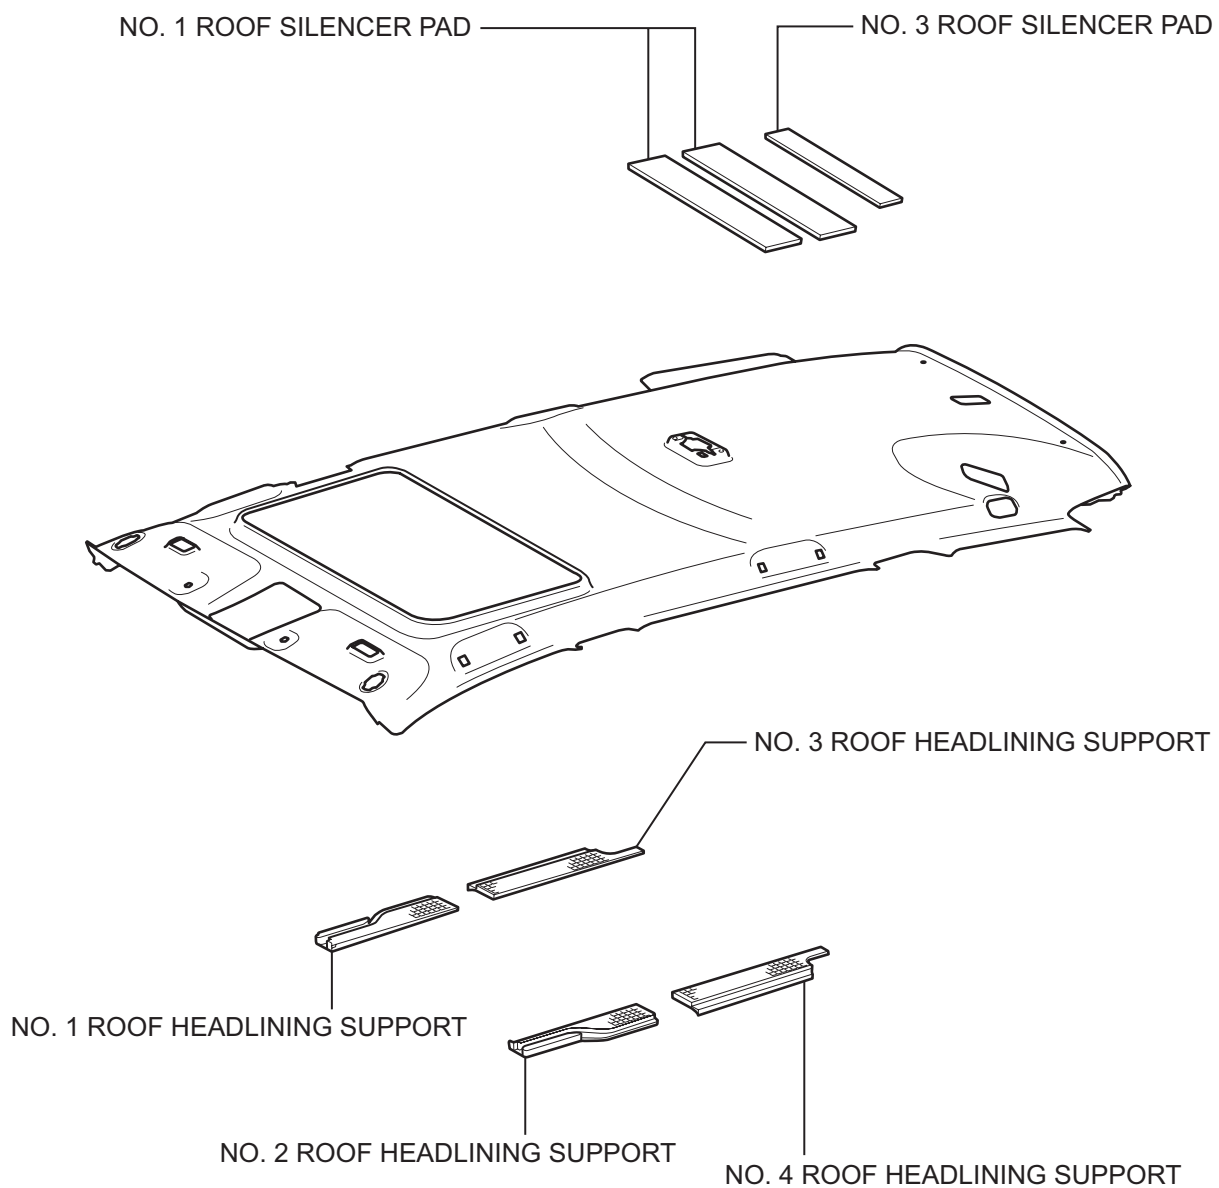

IR

REMOVAL

(2005/11-2006/01)

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE FRONT DOOR SCUFF PLATE LH**

(a) Using a screwdriver, detach the 10 claws and remove the scuff plate.



HINT:

Tape the screwdriver tip before use.

3. **REMOVE FRONT DOOR SCUFF PLATE RH**

HINT:

Use the same procedures described for the LH side.

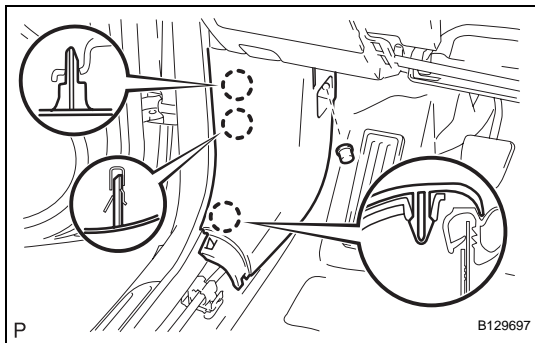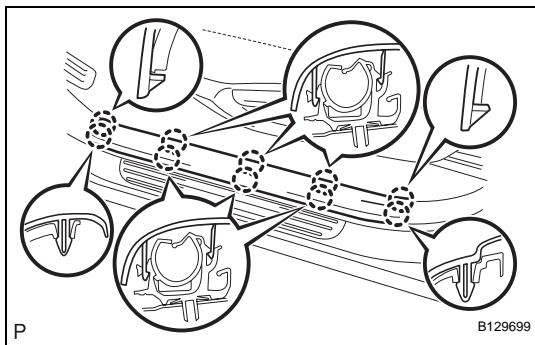

4. **REMOVE COWL SIDE TRIM BOARD LH**

(a) Remove the cap nut.

(b) Using a screwdriver, detach the 3 claws and remove the trim board.

HINT:

Tape the screwdriver tip before use.

5. **REMOVE COWL SIDE TRIM BOARD RH**

HINT:

Use the same procedures described for the LH side.

6. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH**

7. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH**

8. **REMOVE INSTRUMENT CLUSTER FINISH PANEL ASSEMBLY** (See page [IP-4](#))

9. **REMOVE COMBINATION METER ASSEMBLY** (See page [IP-5](#))


10. **REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL CENTER** (See page [IP-5](#))

11. **REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL CENTER** (See page [IP-5](#))

12. **REMOVE RADIO RECEIVER** (See page [IP-5](#))

13. **REMOVE INSTRUMENT PANEL REGISTER ASSEMBLY CENTER** (See page [IP-6](#))


14. **REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY** (See page [IP-20](#))

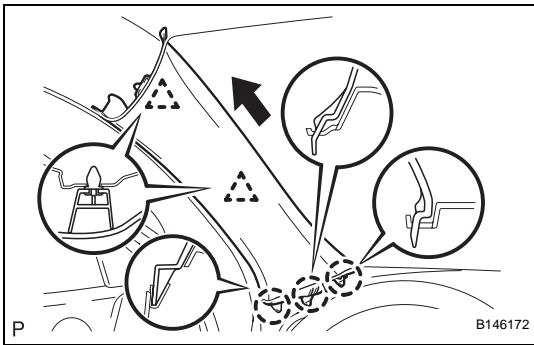

15. REMOVE FRONT PILLAR GARNISH LH


(a) w/o Curtain Shield Airbag:

- (1) Using a clip remover, detach the 2 clips.
- (2) Pull the garnish in the direction indicated by the arrow in the illustration to detach the 3 claws. Then remove the garnish.

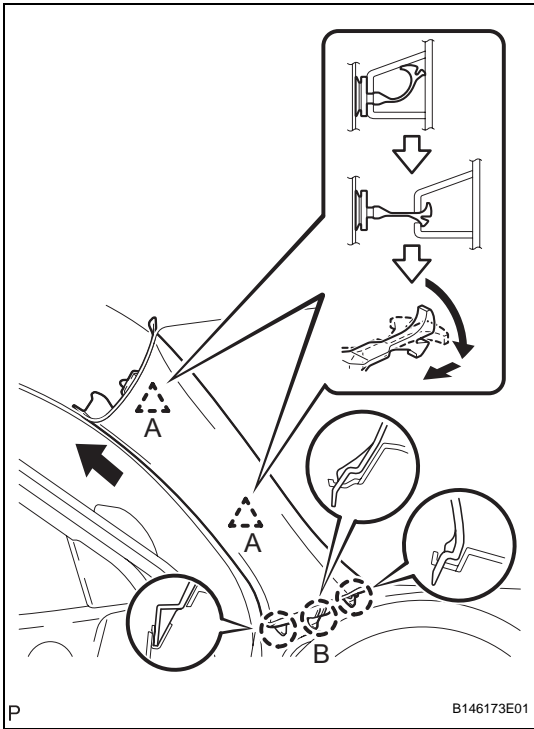


(b) w/ Curtain Shield Airbag:

- (1) Pull the pillar garnish so that the base of the 2 clips labeled A detach. Then pull until the tips of the 2 clips labeled A lock in the pillar garnish's holes.
- (2) Using needle-nose pliers, rotate the 2 clips labeled A 90°. Then pull the pillar garnish to release the tips of the 2 clips labeled A from the pillar garnish.
- (3) Pull the pillar garnish in the direction indicated by the arrow in the illustration to detach the 3 claws labeled B.
- (4) Remove the 2 clips labeled A from the vehicle body.

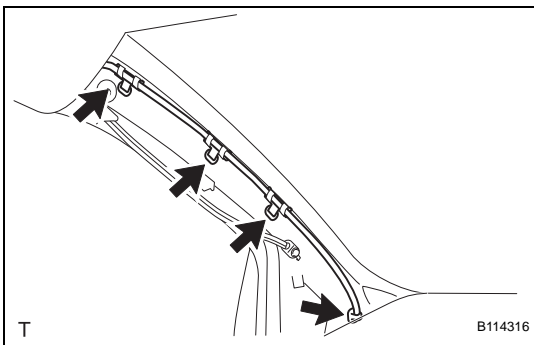

(c) Using a clip remover, remove the 4 wiring harness clamps.

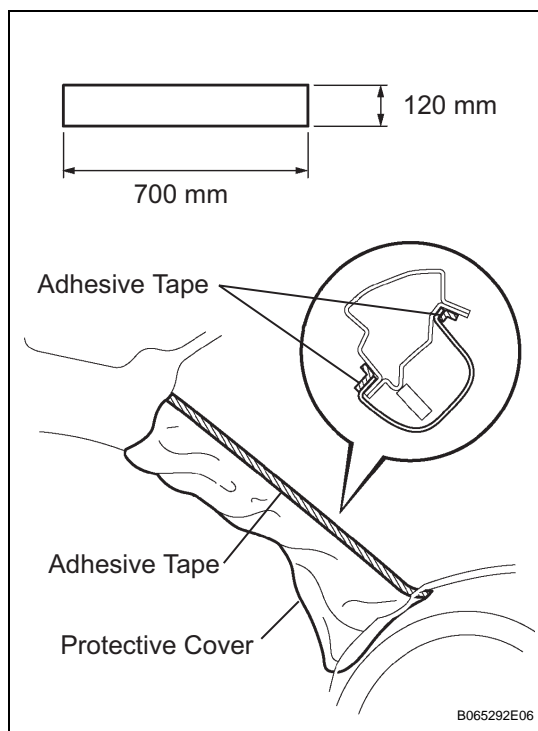


(d) w/ Curtain Shield Airbag:

- (1) Thoroughly cover the airbag with cloth or nylon of 700 mm (27.56 in.) x 120 mm (4.72 in.) and fix the ends of the cover with adhesive tape, as shown in the illustration.

NOTICE:

Cover the curtain shield airbag with a protective cover as soon as the front pillar garnish is removed.


IR

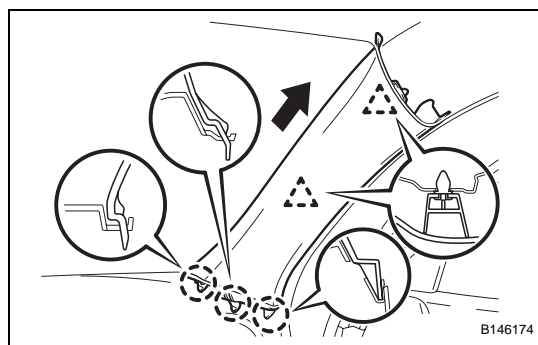

16. REMOVE FRONT PILLAR GARNISH RH


(a) w/o Curtain Shield Airbag:

- (1) Using a clip remover, detach the 2 clips.
 - (2) Pull the garnish in the direction indicated by the arrow in the illustration to detach the 3 claws.
- Then remove the garnish.

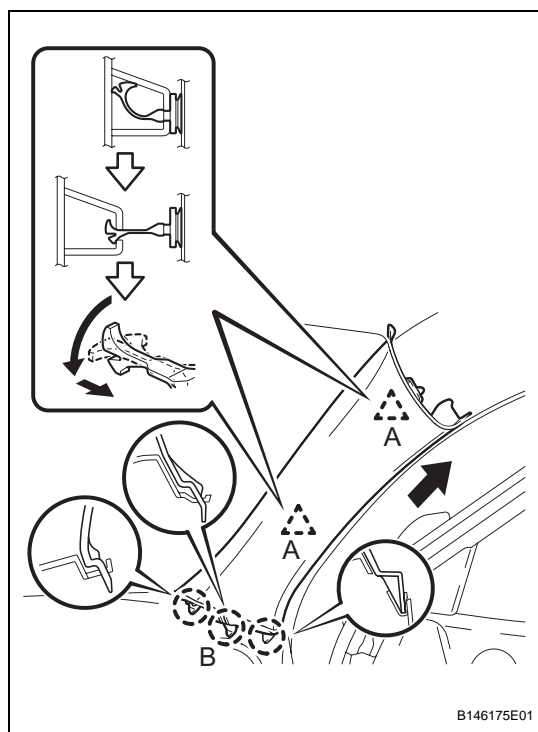

(b) w/ Curtain Shield Airbag:

- (1) Pull the pillar garnish so that the base of the 2 clips labeled A detach. Then pull until the tips of the 2 clips labeled A lock in the pillar garnish's holes.
- (2) Using needle-nose pliers, rotate the 2 clips labeled A 90°. Then pull the pillar garnish to release the tips of the 2 clips labeled A from the pillar garnish.
- (3) Pull the pillar garnish in the direction indicated by the arrow in the illustration to detach the 3 claws labeled B.
- (4) Remove the 2 clips labeled A from the vehicle body.

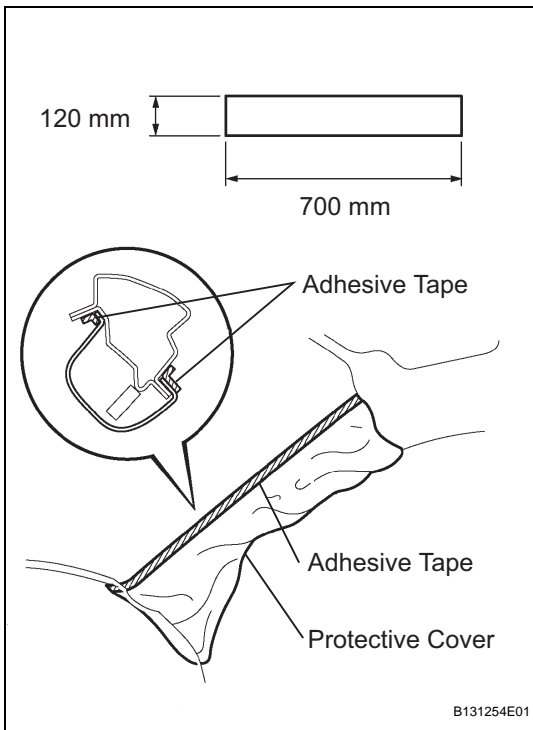


- (5) Thoroughly cover the airbag with cloth or nylon of 700 mm (27.56 in.) x 120 mm (4.72 in.) and fix the ends of the cover with adhesive tape, as shown in the illustration.

NOTICE:

Cover the curtain shield airbag with a protective cover as soon as the front pillar garnish is removed.

17. REMOVE INSTRUMENT PANEL SUB-ASSEMBLY
(See page [IP-6](#))

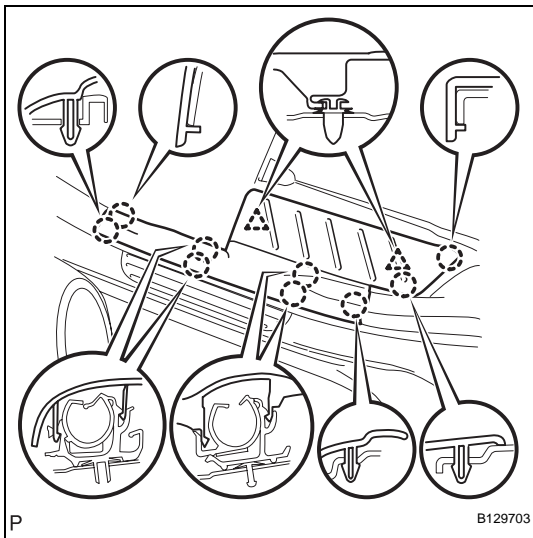

18. REMOVE REAR DOOR SCUFF PLATE LH

- (a) Using a screwdriver, detach the 9 claws.

HINT:

Tape the screwdriver tip before use.

- (b) Using a clip remover, detach the 2 clips and remove the garnish.

19. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.

20. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH


21. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH


22. REMOVE LOWER CENTER PILLAR GARNISH LH

- (a) Disconnect the front seat outer belt's floor anchor.

- (1) Remove the anchor cover.

- (2) Remove the bolt and disconnect the floor anchor.

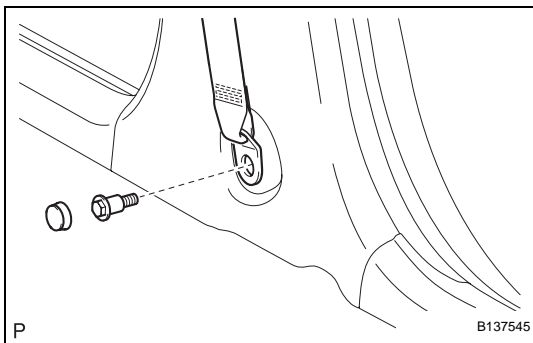

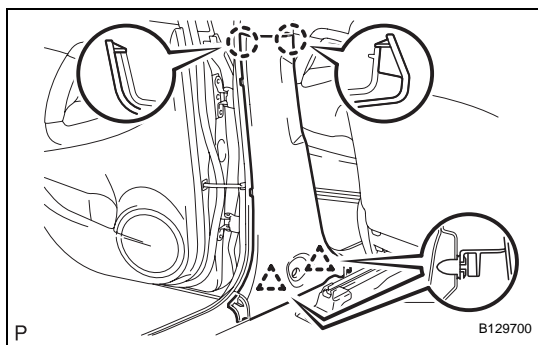

- (b) Using a screwdriver, detach the 2 claws.

HINT:


Tape the screwdriver tip before use.

- (c) Using a clip remover, detach the 2 clips and remove the garnish.

23. REMOVE LOWER CENTER PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

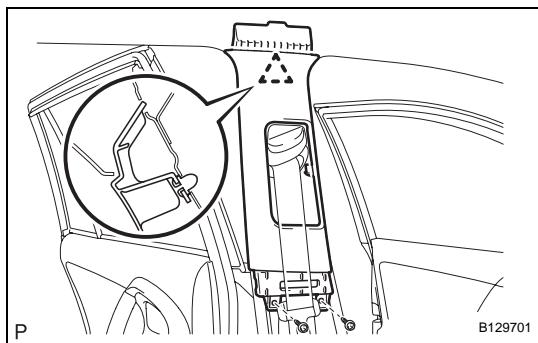

24. REMOVE CENTER PILLAR GARNISH LH

- (a) Remove the 2 screws.

- (b) Using a clip remover, detach the clip and remove the garnish.

25. REMOVE CENTER PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

26. REMOVE PACKAGE TRAY TRIM POCKET SUB-ASSEMBLY (w/o Rear No. 2 Seat)

27. REMOVE TONNEAU COVER ASSEMBLY (w/o Rear No. 2 Seat)

28. REMOVE REAR FLOOR NO. 1 BOARD (w/o Rear No. 2 Seat)

29. REMOVE DECK BOARD ASSEMBLY (w/o Rear No. 2 Seat)

30. REMOVE NO. 2 SEAT HINGE COVER LH (w/ Rear No. 2 Seat) (See page [SE-109](#))

31. REMOVE NO. 2 SEAT HINGE COVER RH (w/ Rear No. 2 Seat)

HINT:

Use the same procedures described for the LH side.

32. REMOVE NO. 2 SEAT LEG COVER LH (w/ Rear No. 2 Seat) (See page [SE-109](#))

33. REMOVE NO. 2 SEAT LEG COVER RH (w/ Rear No. 2 Seat)

HINT:

Use the same procedures described for the LH side.

34. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (w/ Rear No. 2 Seat) (See page [SE-110](#))


35. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (w/ Rear No. 2 Seat)

HINT:

Use the same procedures described for the LH side.


36. REMOVE REAR FLOOR NO. 3 BOARD

37. REMOVE REAR FLOOR NO. 2 BOARD

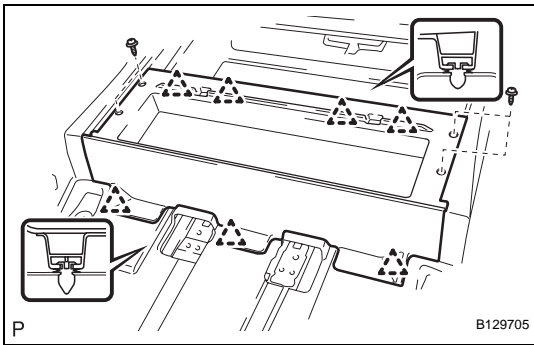


38. REMOVE REAR FLOOR NO. 1 MAT SUPPORT SIDE PLATE

- (a) w/o Rear No. 2 Seat:
 - (1) Remove the 4 screws.
 - (2) Using a clip remover, detach the 7 clips and remove the plate.

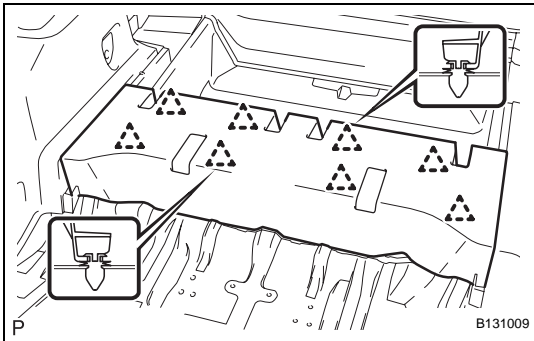


- (b) w/ Rear No. 2 Seat:
 - (1) Using a clip remover, detach the 8 clips and remove the plate.

39. REMOVE BACK DOOR WEATHERSTRIP

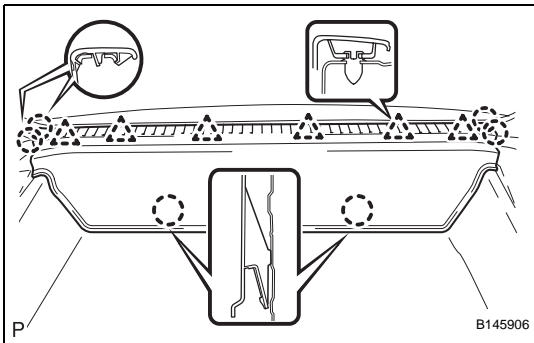

40. REMOVE REAR FLOOR FINISH PLATE

- (a) Using a clip remover, detach the 6 clips.
- (b) Detach the 6 claws and remove the finish plate.

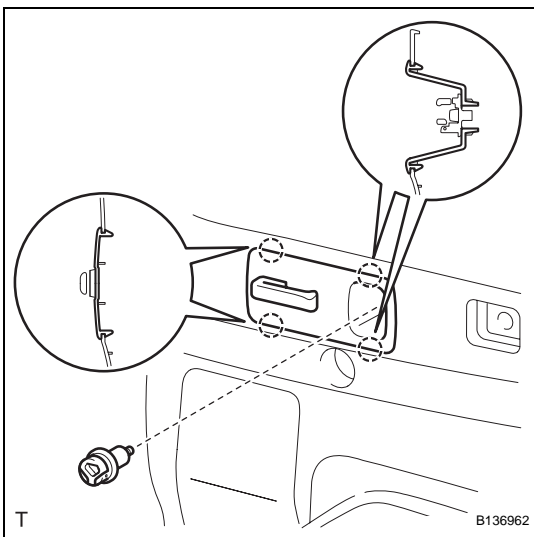

41. REMOVE REAR DECK TRIM COVER LH (w/ Rear No. 2 Seat)

- (a) Remove the bolt.
- (b) Using a screwdriver, detach the 4 claws and remove the trim cover.

HINT:

Tape the screwdriver tip before use.


42. REMOVE REAR DECK TRIM COVER RH (w/ Rear No. 2 Seat)

HINT:

Use the same procedures described for the LH side.


43. REMOVE RECLINING REMOTE CONTROL LEVER BEZEL LH (w/o Rear No. 2 Seat) (See page [SE-45](#))

44. REMOVE RECLINING REMOTE CONTROL LEVER BEZEL RH (w/o Rear No. 2 Seat) (See page [SE-80](#))

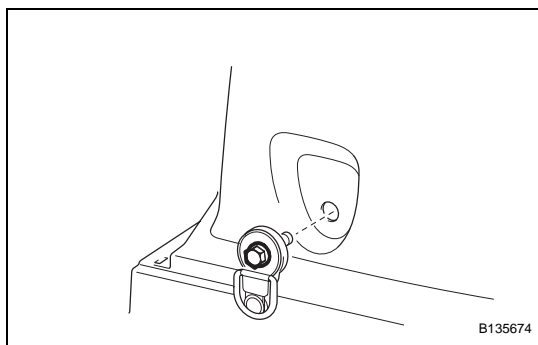


45. REMOVE TETHER ANCHOR BRACKET SUB-ASSEMBLY (w/o Rear No. 2 Seat)

- (a) Remove the bolt and tether anchor bracket.

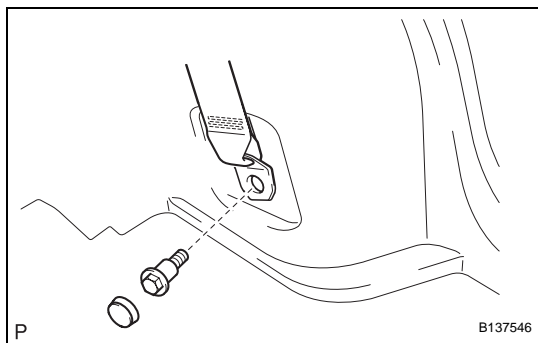


46. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH (w/o Rear No. 2 Seat)

- (a) Disconnect the rear No. 1 seat outer belt's floor anchor.
- (1) Remove the anchor cover.
 - (2) Remove the bolt and disconnect the floor anchor.

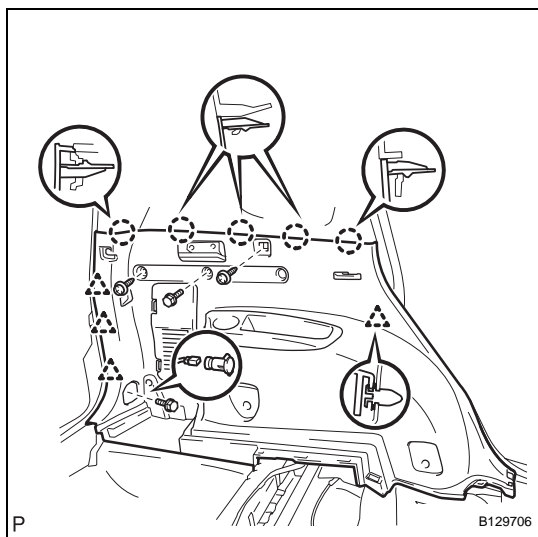


- (b) Remove the 2 screws and 2 bolts.
- (c) Using a screwdriver, detach the 5 claws.
- HINT:
Tape the screwdriver tip before use.
- (d) Using a clip remover, detach the 4 clips and remove the trim board.
- (e) Disconnect the power outlet socket connector.
- (f) Remove the belt hanger.

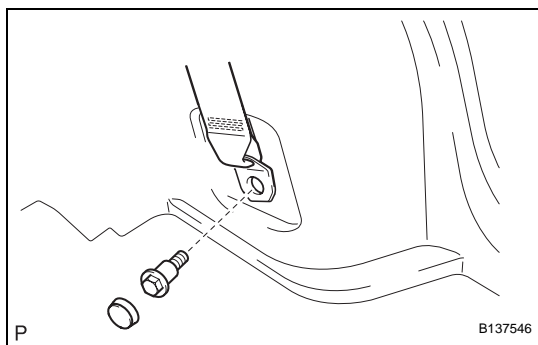


47. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH (w/ Rear No. 2 Seat)


- (a) Disconnect the rear No. 1 seat outer belt's floor anchor.
- (1) Remove the anchor cover.
 - (2) Remove the bolt and disconnect the floor anchor.

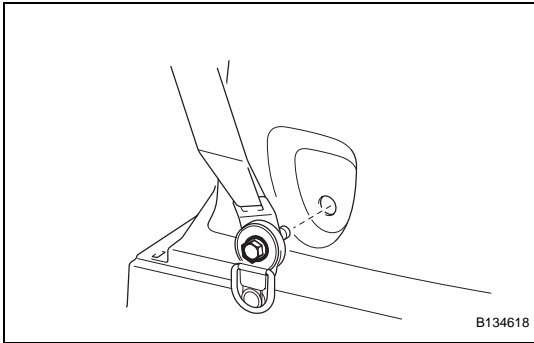

- (b) Disconnect the rear No. 2 seat outer belt's floor anchor.
 - (1) Remove the bolt and disconnect the floor anchor.

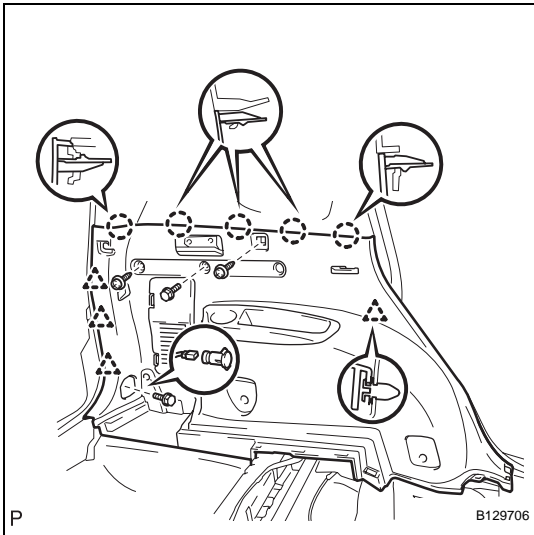


- (c) Remove the 2 screws and 2 bolts.
- (d) Using a screwdriver, detach the 5 claws.
 - HINT:
Tape the screwdriver tip before use.
- (e) Using a clip remover, detach the 4 clips and remove the trim board.
- (f) Disconnect the power outlet socket connector.
- (g) Remove the belt hanger.

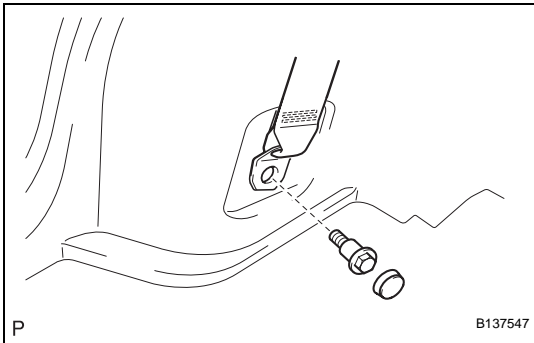


48. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH (w/o Rear No. 2 Seat)

- (a) Disconnect the rear No. 1 seat outer belt's floor anchor.
 - (1) Remove the anchor cover.
 - (2) Remove the bolt and disconnect the floor anchor.

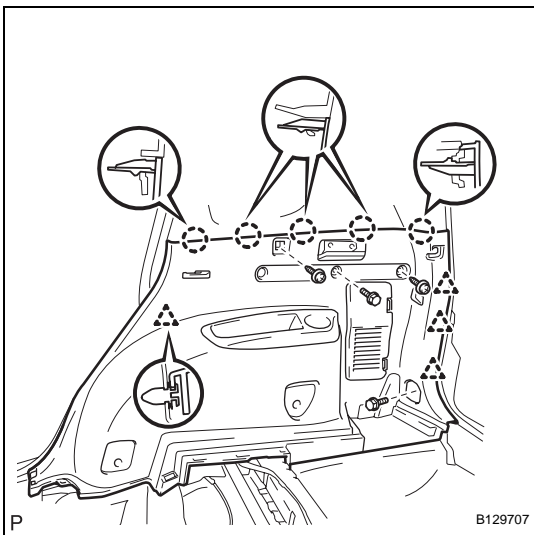

- (b) Remove the 2 screws and 2 bolts.
- (c) Using a screwdriver, detach the 5 claws.
 - HINT:
Tape the screwdriver tip before use.
- (d) Using a clip remover, detach the 4 clips and remove the trim board.
- (e) Remove the belt hanger.

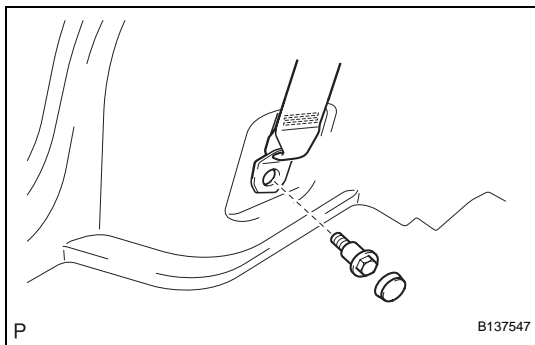

49. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH (w/ Rear No. 2 Seat)


- (a) Disconnect the rear No. 1 seat outer belt's floor anchor.
 - (1) Remove the anchor cover.
 - (2) Remove the bolt and disconnect the floor anchor.
- (b) Disconnect the rear No. 2 seat outer belt's floor anchor.
 - (1) Remove the bolt and disconnect the floor anchor.

- (c) Remove the 2 screws and 2 bolts.
- (d) Using a screwdriver, detach the 5 claws.

HINT:


Tape the screwdriver tip before use.


- (e) Using a clip remover, detach the 4 clips and remove the trim board.
- (f) Remove the belt hanger.

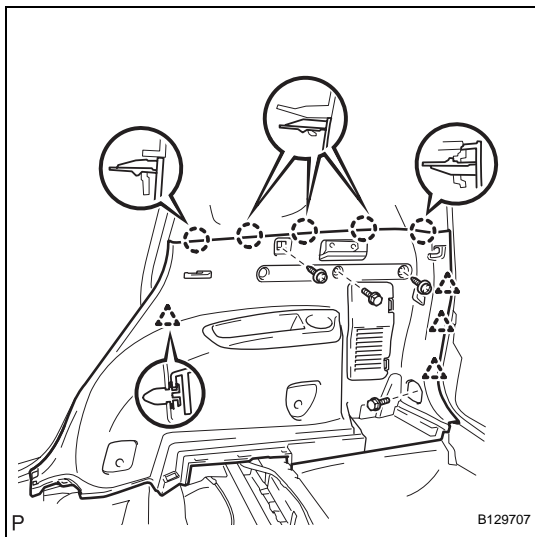

50. REMOVE INNER ROOF SIDE GARNISH ASSEMBLY LH (w/o Rear No. 2 Seat)


- (a) Using a clip remover, detach the 8 clips and remove the garnish.

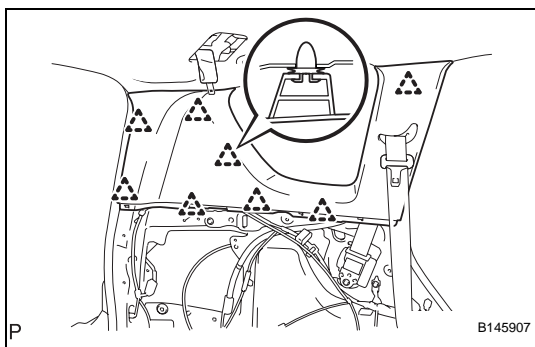

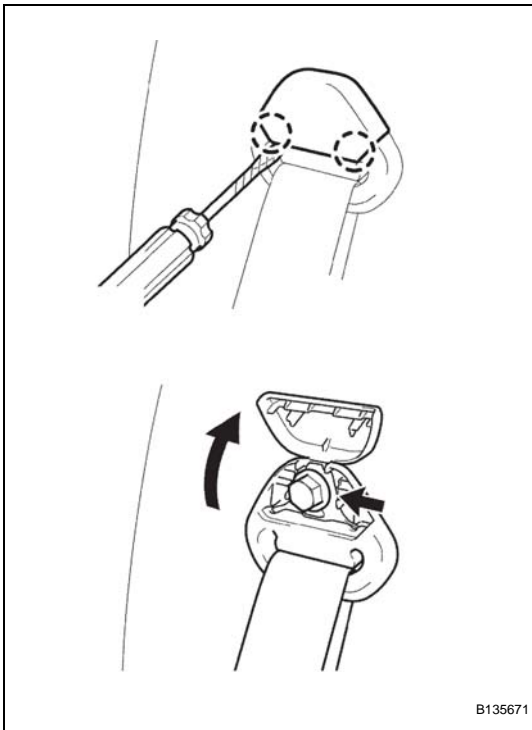

51. REMOVE INNER ROOF SIDE GARNISH ASSEMBLY LH (w/ Rear No. 2 Seat)


- (a) Disconnect the rear No. 2 seat outer belt's shoulder anchor.
 - (1) Using a screwdriver, detach the 2 claws and open the seat belt anchor cover.
HINT:
Tape the screwdriver tip before use.
 - (2) Remove the bolt and disconnect the shoulder anchor.

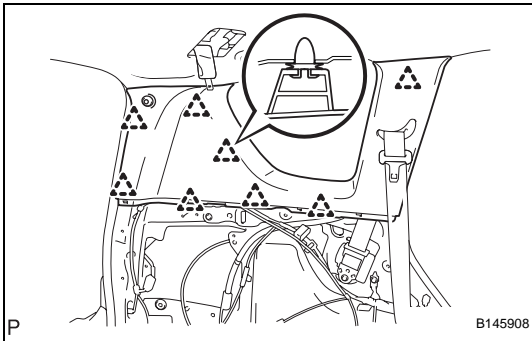

- (b) Using a clip remover, detach the 8 clips and remove the garnish.

52. REMOVE INNER ROOF SIDE GARNISH ASSEMBLY RH

- HINT:
Use the same procedures described for the LH side.

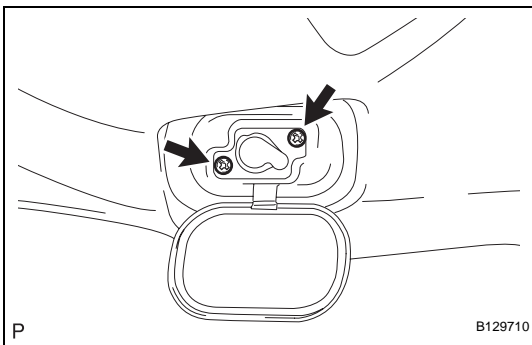


53. REMOVE REAR ROOM PARTITION NET HOOK LH

- (a) Remove the 2 screws and net hook.


54. REMOVE REAR ROOM PARTITION NET HOOK RH

- HINT:
Use the same procedures described for the LH side.

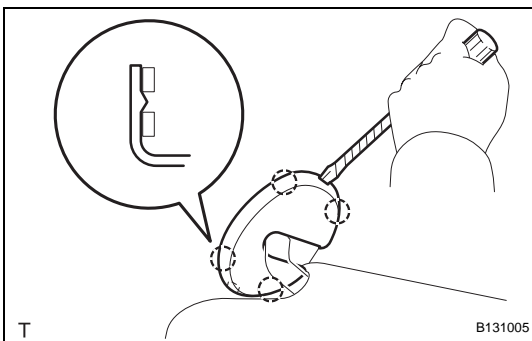

55. REMOVE VISOR ASSEMBLY LH

- (a) Using a screwdriver, detach the 4 claws and remove the visor bracket cover.
HINT:
Tape the screwdriver tip before use.

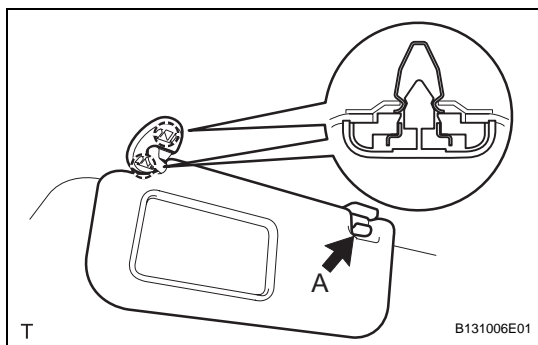


- (b) Remove portion A from the visor holder.
- (c) Detach the 2 claws and remove the visor.

56. REMOVE VISOR ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

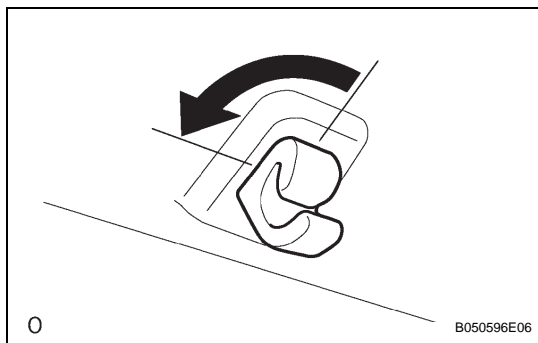


57. REMOVE VISOR HOLDER

- (a) Remove the visor holder by turning it counterclockwise.

58. REMOVE VANITY LIGHT ASSEMBLY (See page LI-128)

59. REMOVE MAP LIGHT ASSEMBLY (See page LI-115)

60. REMOVE ROOM LIGHT ASSEMBLY (See page LI-118)

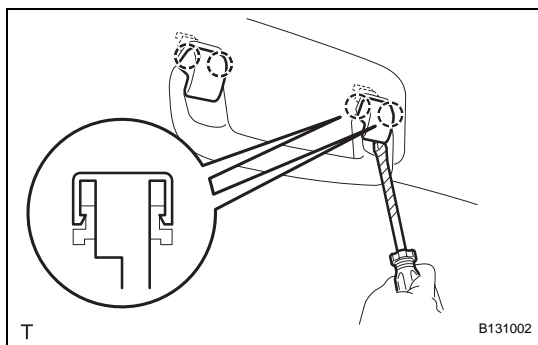


61. REMOVE ASSIST GRIP COVER (for Front Grip)

- (a) Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.


HINT:

Tape the screwdriver tip before use.

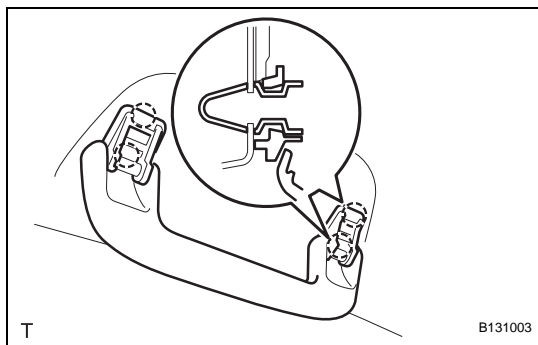

62. REMOVE ASSIST GRIP SUB-ASSEMBLY

- (a) Detach the 4 claws and remove the assist grip.

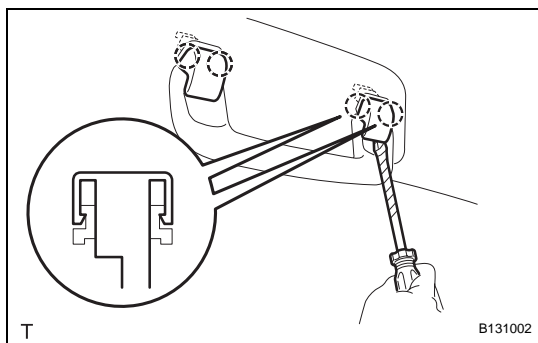


63. REMOVE ASSIST GRIP COVER (for Rear Grip)

- (a) Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.

HINT:

Tape the screwdriver tip before use.

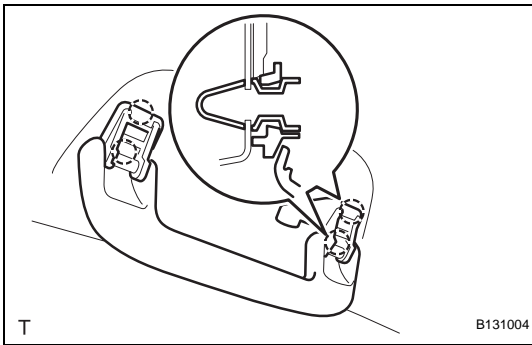


64. REMOVE REAR ASSIST GRIP ASSEMBLY

- (a) Detach the 4 claws and remove the assist grip.

65. REMOVE CHILD RESTRAINT SEAT TETHER ANCHOR COVER (See page SB-77)


66. REMOVE SHOULDER BELT ANCHOR COVER RH (See page SB-64)

67. REMOVE SUN ROOF OPENING TRIM MOULDING

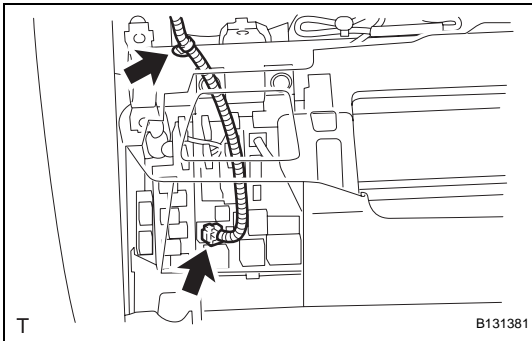

68. REMOVE ROOF HEADLINING ASSEMBLY

- (a) Using a screwdriver, remove the wire harness clamp.
(b) Disconnect the roof wire connector.

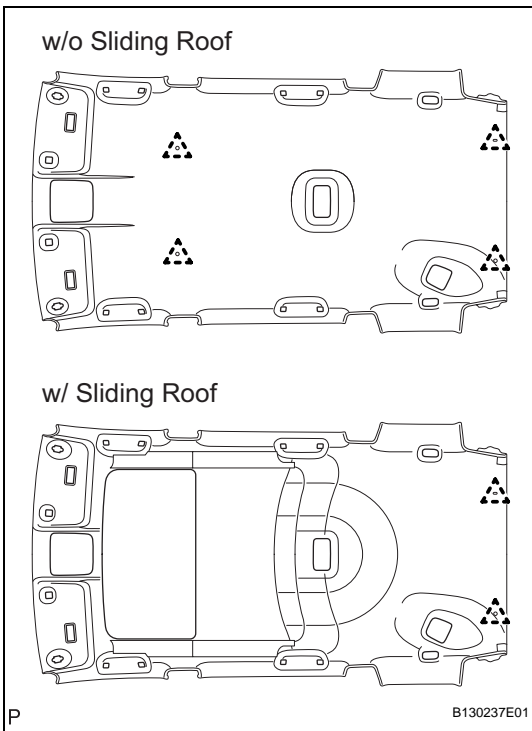

- (c) w/o Sliding Roof:

- (1) Using a clip remover, remove the 4 clips and headlining.

- (d) w/ Sliding Roof:

- (1) Disconnect the connector from the drive gear.
(2) Using a clip remover, remove the 2 clips and headlining.

69. REMOVE NO. 1 ROOF HEADLINING SUPPORT

70. REMOVE NO. 2 ROOF HEADLINING SUPPORT

71. REMOVE NO. 3 ROOF HEADLINING SUPPORT

72. REMOVE NO. 4 ROOF HEADLINING SUPPORT

73. REMOVE NO. 1 ROOF WIRE

- (a) Only when replacing the roof headlining:
(1) Remove the double-sided tape and roof wire.

74. REMOVE NO. 1 ROOF SILENCER PAD

- (a) w/o Sliding Roof:
(1) Remove the 5 silencer pads.
(b) w/ Sliding Roof:
(1) Remove the 2 silencer pads.

75. REMOVE NO. 3 ROOF SILENCER PAD

REMOVAL

(2006/01-)

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE FRONT DOOR SCUFF PLATE LH**

(a) Using a screwdriver, detach the 10 claws and remove the scuff plate.



HINT:

Tape the screwdriver tip before use.

3. **REMOVE FRONT DOOR SCUFF PLATE RH**

HINT:

Use the same procedures described for the LH side.

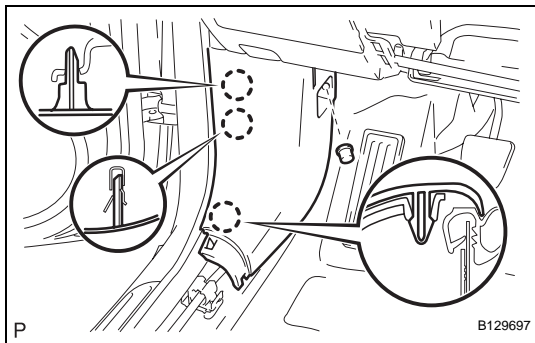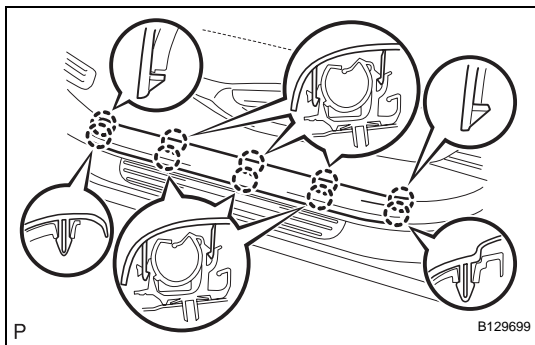

4. **REMOVE COWL SIDE TRIM BOARD LH**

(a) Remove the cap nut.

(b) Using a screwdriver, detach the 3 claws and remove the trim board.

HINT:

Tape the screwdriver tip before use.

5. **REMOVE COWL SIDE TRIM BOARD RH**

HINT:

Use the same procedures described for the LH side.

6. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH**

7. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH**

8. **REMOVE INSTRUMENT CLUSTER FINISH PANEL ASSEMBLY** (See page [IP-4](#))

9. **REMOVE COMBINATION METER ASSEMBLY** (See page [IP-5](#))


10. **REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL CENTER** (See page [IP-5](#))

11. **REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL CENTER** (See page [IP-5](#))

12. **REMOVE RADIO RECEIVER** (See page [IP-5](#))

13. **REMOVE INSTRUMENT PANEL REGISTER ASSEMBLY CENTER** (See page [IP-6](#))


14. **REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY** (See page [IP-20](#))

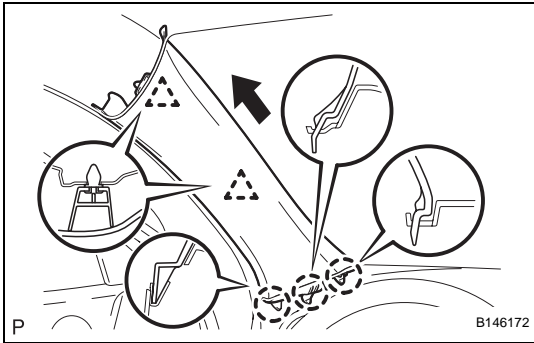

15. REMOVE FRONT PILLAR GARNISH LH


(a) w/o Curtain Shield Airbag:

- (1) Using a clip remover, detach the 2 clips.
- (2) Pull the garnish in the direction indicated by the arrow in the illustration to detach the 3 claws. Then remove the garnish.

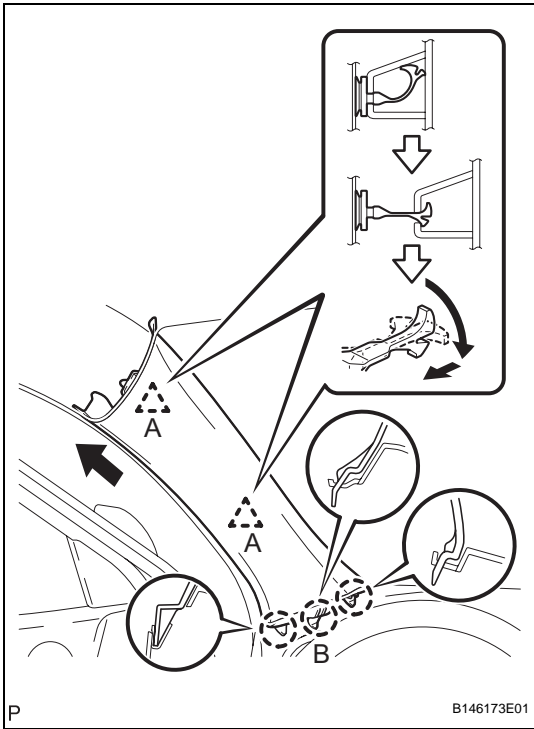


(b) w/ Curtain Shield Airbag:

- (1) Pull the pillar garnish so that the base of the 2 clips labeled A detach. Then pull until the tips of the 2 clips labeled A lock in the pillar garnish's holes.
- (2) Using needle-nose pliers, rotate the 2 clips labeled A 90°. Then pull the pillar garnish to release the tips of the 2 clips labeled A from the pillar garnish.
- (3) Pull the pillar garnish in the direction indicated by the arrow in the illustration to detach the 3 claws labeled B.
- (4) Remove the 2 clips labeled A from the vehicle body.

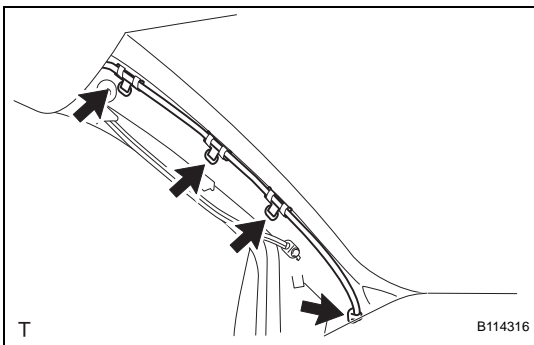

(c) Using a clip remover, remove the 4 wiring harness clamps.

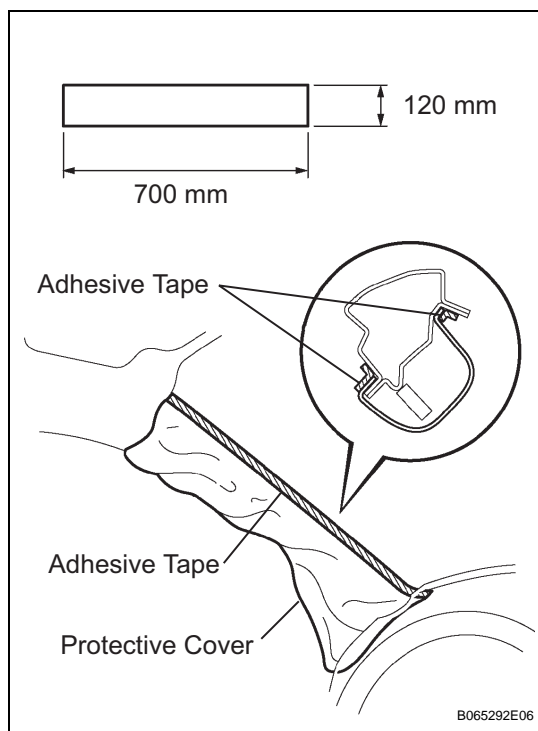


(d) w/ Curtain Shield Airbag:

- (1) Thoroughly cover the airbag with cloth or nylon of 700 mm (27.56 in.) x 120 mm (4.72 in.) and fix the ends of the cover with adhesive tape, as shown in the illustration.

NOTICE:

Cover the curtain shield airbag with a protective cover as soon as the front pillar garnish is removed.


IR

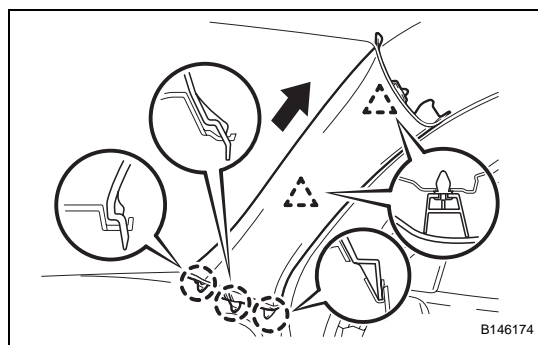

16. REMOVE FRONT PILLAR GARNISH RH


(a) w/o Curtain Shield Airbag:

- (1) Using a clip remover, detach the 2 clips.
 - (2) Pull the garnish in the direction indicated by the arrow in the illustration to detach the 3 claws.
- Then remove the garnish.

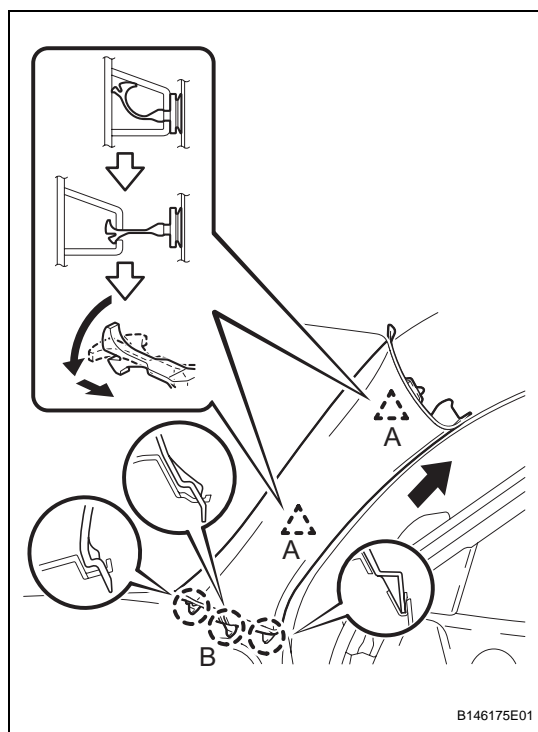

(b) w/ Curtain Shield Airbag:

- (1) Pull the pillar garnish so that the base of the 2 clips labeled A detach. Then pull until the tips of the 2 clips labeled A lock in the pillar garnish's holes.
- (2) Using needle-nose pliers, rotate the 2 clips labeled A 90°. Then pull the pillar garnish to release the tips of the 2 clips labeled A from the pillar garnish.
- (3) Pull the pillar garnish in the direction indicated by the arrow in the illustration to detach the 3 claws labeled B.
- (4) Remove the 2 clips labeled A from the vehicle body.

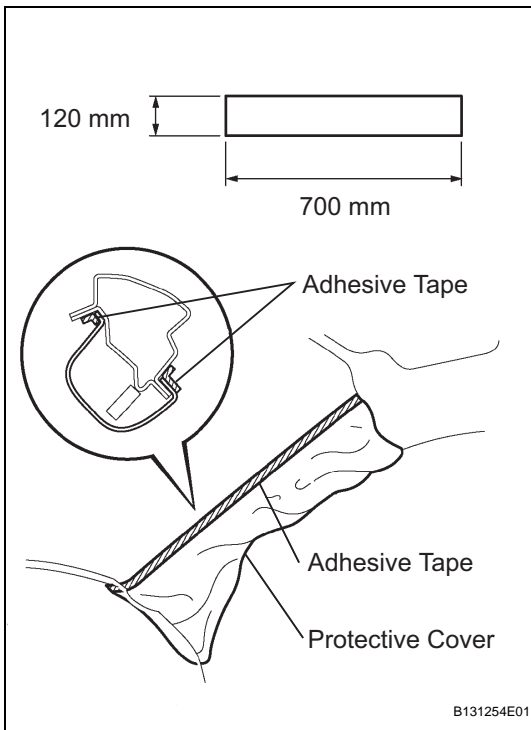


- (5) Thoroughly cover the airbag with cloth or nylon of 700 mm (27.56 in.) x 120 mm (4.72 in.) and fix the ends of the cover with adhesive tape, as shown in the illustration.

NOTICE:

Cover the curtain shield airbag with a protective cover as soon as the front pillar garnish is removed.

17. REMOVE INSTRUMENT PANEL SUB-ASSEMBLY
(See page [IP-6](#))

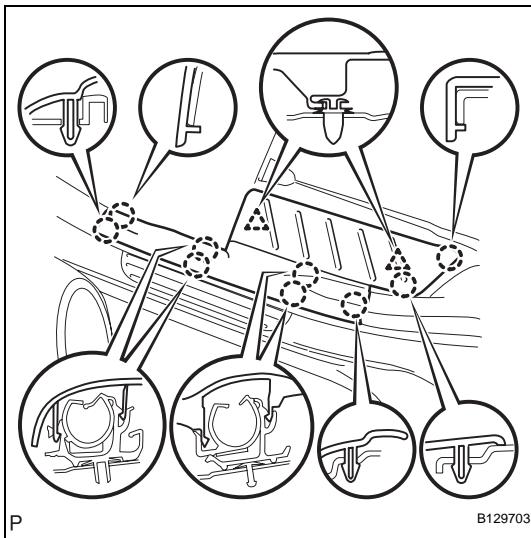

18. REMOVE REAR DOOR SCUFF PLATE LH

- (a) Using a screwdriver, detach the 9 claws.

HINT:

Tape the screwdriver tip before use.

- (b) Using a clip remover, detach the 2 clips and remove the garnish.

19. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.

20. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH


21. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH


22. REMOVE LOWER CENTER PILLAR GARNISH LH

- (a) Disconnect the front seat outer belt's floor anchor.

- (1) Remove the anchor cover.

- (2) Remove the bolt and disconnect the floor anchor.

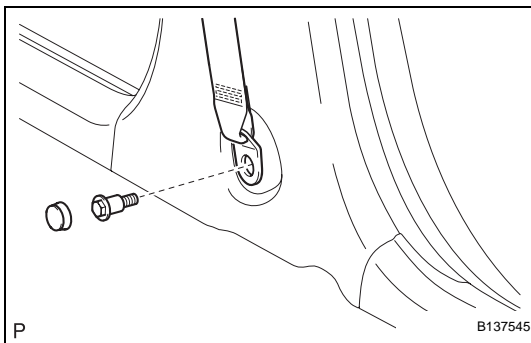

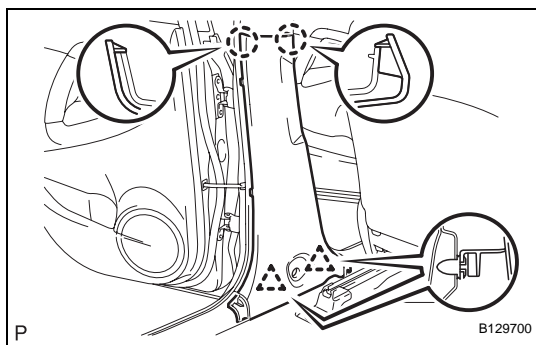

- (b) Using a screwdriver, detach the 2 claws.

HINT:


Tape the screwdriver tip before use.

- (c) Using a clip remover, detach the 2 clips and remove the garnish.

23. REMOVE LOWER CENTER PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

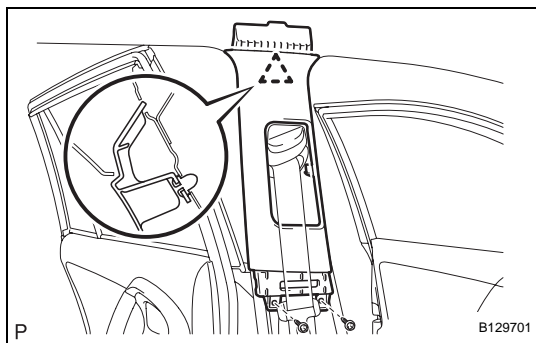

24. REMOVE CENTER PILLAR GARNISH LH

- (a) Remove the 2 screws.

- (b) Using a clip remover, detach the clip and remove the garnish.

25. REMOVE CENTER PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

26. REMOVE PACKAGE TRAY TRIM POCKET SUB-ASSEMBLY (w/o Rear No. 2 Seat)

27. REMOVE TONNEAU COVER ASSEMBLY (w/o Rear No. 2 Seat)

28. REMOVE REAR FLOOR NO. 1 BOARD (w/o Rear No. 2 Seat)

29. REMOVE DECK BOARD ASSEMBLY (w/o Rear No. 2 Seat)

30. REMOVE NO. 2 SEAT HINGE COVER LH (w/ Rear No. 2 Seat) (See page [SE-109](#))

31. REMOVE NO. 2 SEAT HINGE COVER RH (w/ Rear No. 2 Seat)

HINT:

Use the same procedures described for the LH side.

32. REMOVE NO. 2 SEAT LEG COVER LH (w/ Rear No. 2 Seat) (See page [SE-109](#))

33. REMOVE NO. 2 SEAT LEG COVER RH (w/ Rear No. 2 Seat)

HINT:

Use the same procedures described for the LH side.

34. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (w/ Rear No. 2 Seat) (See page [SE-110](#))


35. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (w/ Rear No. 2 Seat)

HINT:

Use the same procedures described for the LH side.


36. REMOVE REAR FLOOR NO. 3 BOARD

37. REMOVE REAR FLOOR NO. 2 BOARD

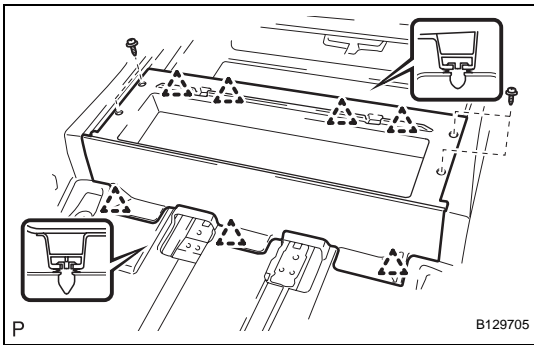


38. REMOVE REAR FLOOR NO. 1 MAT SUPPORT SIDE PLATE

- (a) w/o Rear No. 2 Seat:
 - (1) Remove the 4 screws.
 - (2) Using a clip remover, detach the 7 clips and remove the plate.

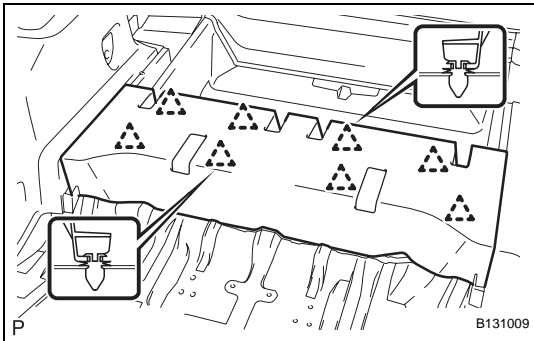


- (b) w/ Rear No. 2 Seat:
 - (1) Using a clip remover, detach the 8 clips and remove the plate.

39. REMOVE BACK DOOR WEATHERSTRIP

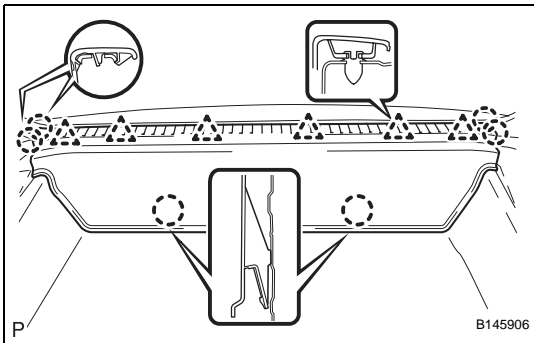

40. REMOVE REAR FLOOR FINISH PLATE

- (a) Using a clip remover, detach the 6 clips.
- (b) Detach the 6 claws and remove the finish plate.

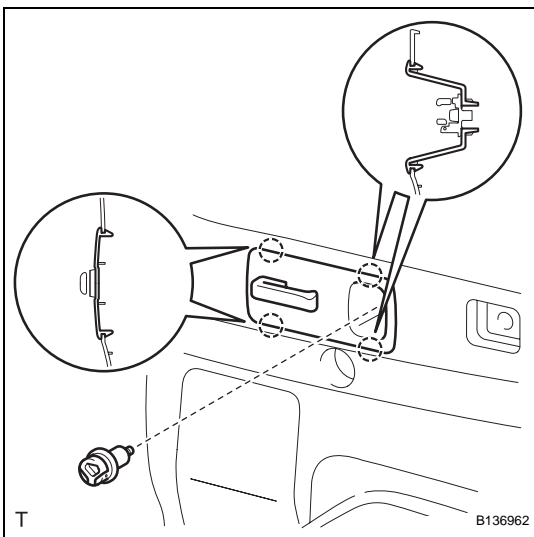

41. REMOVE REAR DECK TRIM COVER LH (w/ Rear No. 2 Seat)

- (a) Remove the bolt.
- (b) Using a screwdriver, detach the 4 claws and remove the trim cover.

HINT:

Tape the screwdriver tip before use.


42. REMOVE REAR DECK TRIM COVER RH (w/ Rear No. 2 Seat)

HINT:

Use the same procedures described for the LH side.


43. REMOVE RECLINING REMOTE CONTROL LEVER BEZEL LH (w/o Rear No. 2 Seat) (See page [SE-45](#))

44. REMOVE RECLINING REMOTE CONTROL LEVER BEZEL RH (w/o Rear No. 2 Seat) (See page [SE-80](#))

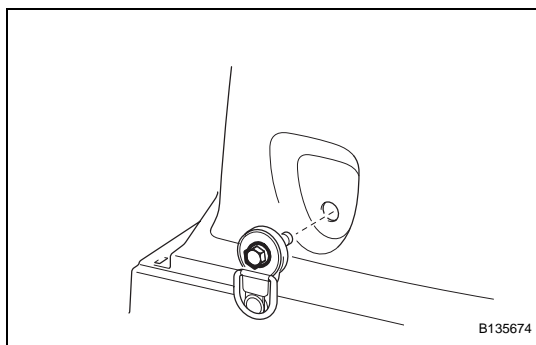


45. REMOVE TETHER ANCHOR BRACKET SUB-ASSEMBLY (w/o Rear No. 2 Seat)

- (a) Remove the bolt and tether anchor bracket.

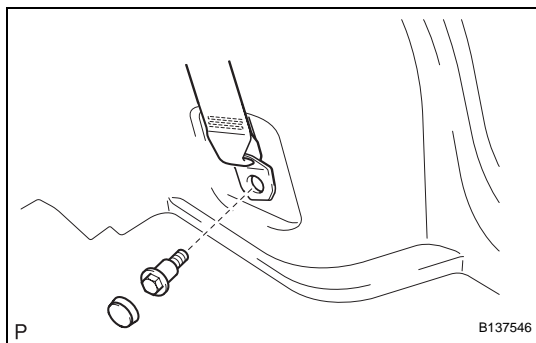


46. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH (w/o Rear No. 2 Seat)

- (a) Disconnect the rear No. 1 seat outer belt's floor anchor.
- (1) Remove the anchor cover.
 - (2) Remove the bolt and disconnect the floor anchor.

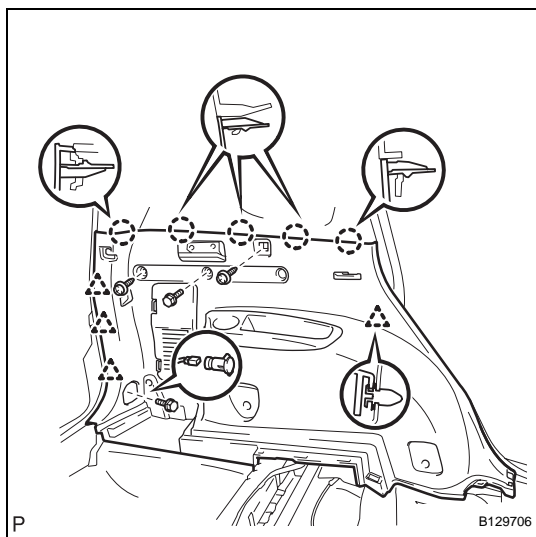


- (b) Remove the 2 screws and 2 bolts.
- (c) Using a screwdriver, detach the 5 claws.
- HINT:
Tape the screwdriver tip before use.
- (d) Using a clip remover, detach the 4 clips and remove the trim board.
- (e) Disconnect the power outlet socket connector.
- (f) Remove the belt hanger.

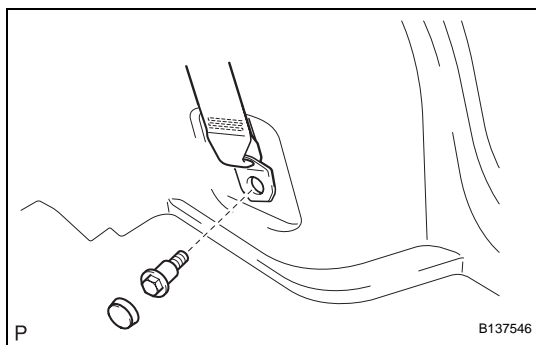


47. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH (w/ Rear No. 2 Seat)


- (a) Disconnect the rear No. 1 seat outer belt's floor anchor.
- (1) Remove the anchor cover.
 - (2) Remove the bolt and disconnect the floor anchor.

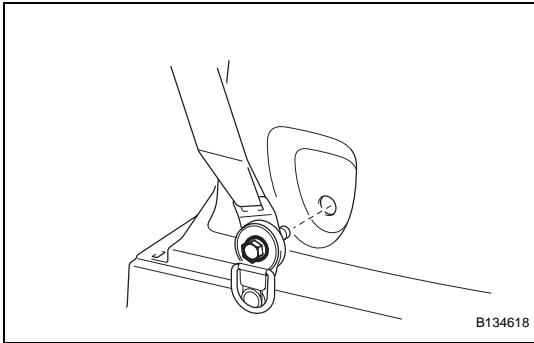

- (b) Disconnect the rear No. 2 seat outer belt's floor anchor.
 - (1) Remove the bolt and disconnect the floor anchor.

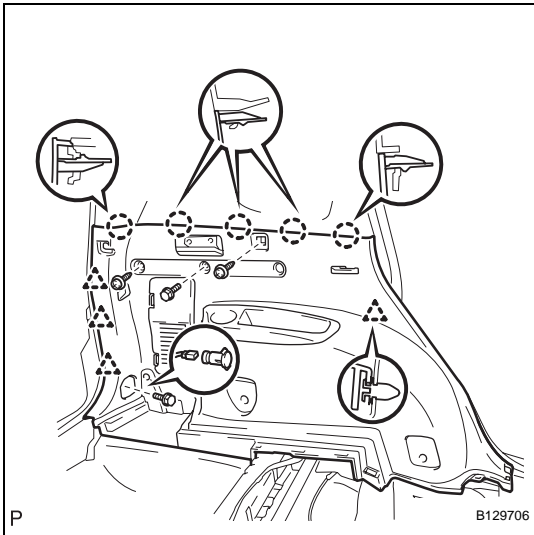


- (c) Remove the 2 screws and 2 bolts.
- (d) Using a screwdriver, detach the 5 claws.
 - HINT:
Tape the screwdriver tip before use.
- (e) Using a clip remover, detach the 4 clips and remove the trim board.
- (f) Disconnect the power outlet socket connector.
- (g) Remove the belt hanger.

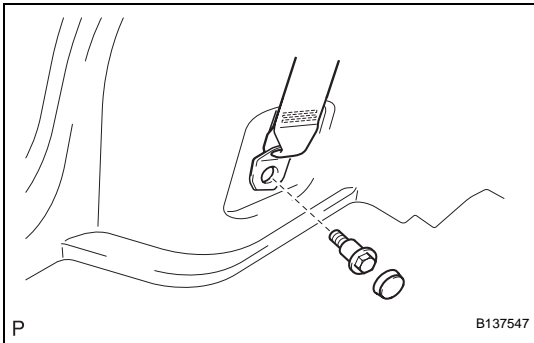


48. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH (w/o Rear No. 2 Seat)

- (a) Disconnect the rear No. 1 seat outer belt's floor anchor.
 - (1) Remove the anchor cover.
 - (2) Remove the bolt and disconnect the floor anchor.

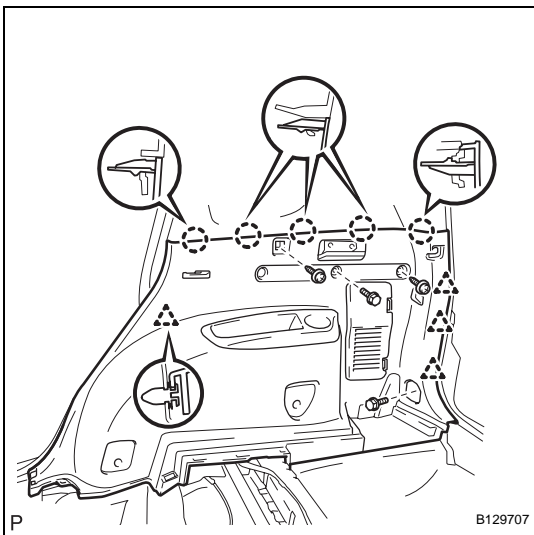

- (b) Remove the 2 screws and 2 bolts.
- (c) Using a screwdriver, detach the 5 claws.
 - HINT:
Tape the screwdriver tip before use.
- (d) Using a clip remover, detach the 4 clips and remove the trim board.
- (e) Remove the belt hanger.

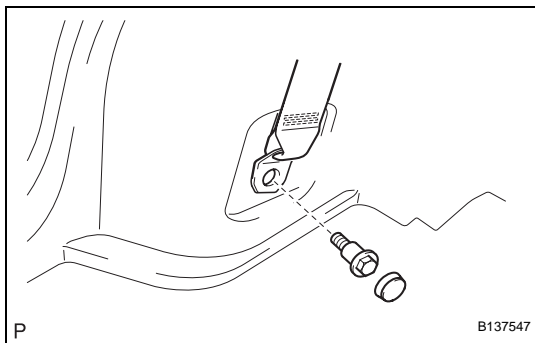

49. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH (w/ Rear No. 2 Seat)


- (a) Disconnect the rear No. 1 seat outer belt's floor anchor.
 - (1) Remove the anchor cover.
 - (2) Remove the bolt and disconnect the floor anchor.
- (b) Disconnect the rear No. 2 seat outer belt's floor anchor.
 - (1) Remove the bolt and disconnect the floor anchor.

- (c) Remove the 2 screws and 2 bolts.
- (d) Using a screwdriver, detach the 5 claws.

HINT:


Tape the screwdriver tip before use.


- (e) Using a clip remover, detach the 4 clips and remove the trim board.
- (f) Remove the belt hanger.

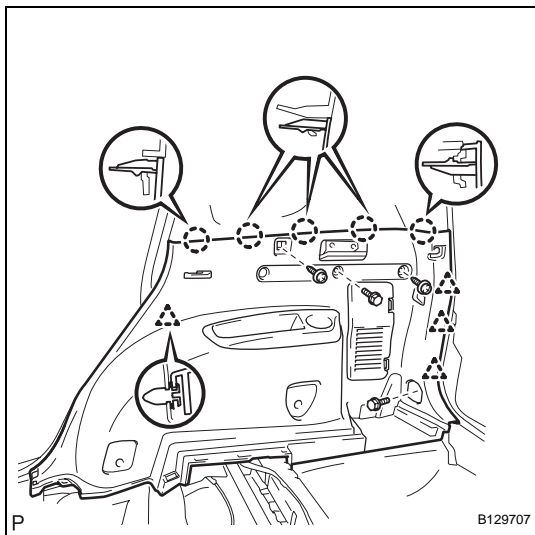

50. REMOVE INNER ROOF SIDE GARNISH ASSEMBLY LH (w/o Rear No. 2 Seat)


- (a) Using a clip remover, detach the 8 clips and remove the garnish.

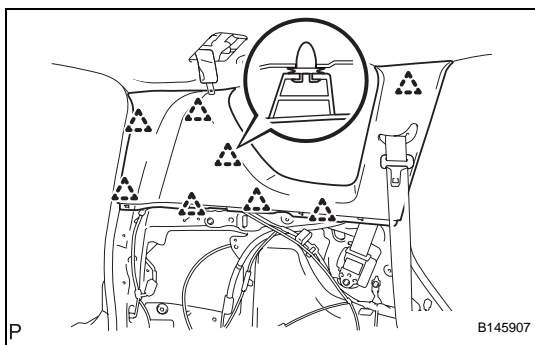

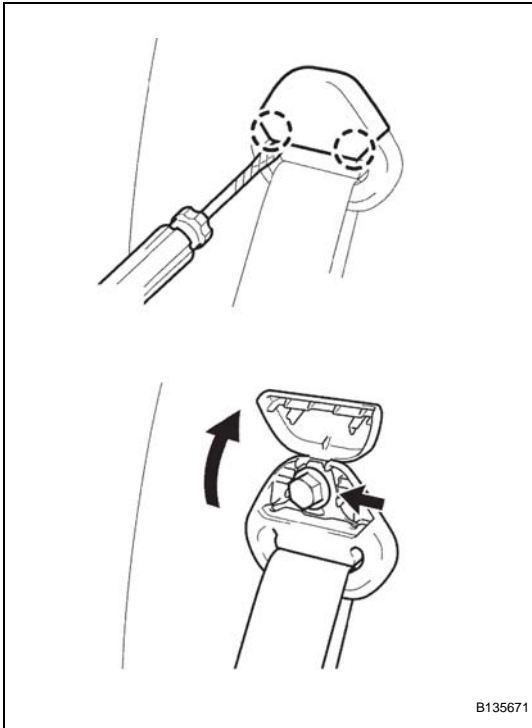

51. REMOVE INNER ROOF SIDE GARNISH ASSEMBLY LH (w/ Rear No. 2 Seat)

- (a) Disconnect the rear No. 2 seat outer belt's shoulder anchor.
 - (1) Using a screwdriver, detach the 2 claws and open the seat belt anchor cover.
HINT:
Tape the screwdriver tip before use.
 - (2) Remove the bolt and disconnect the shoulder anchor.

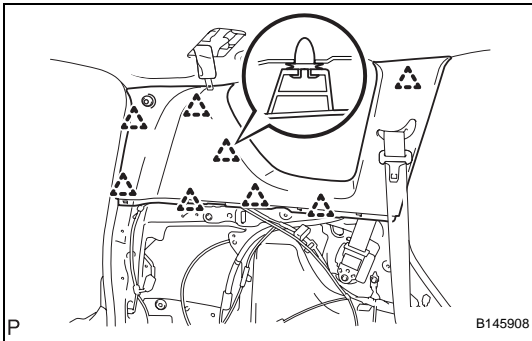


- (b) Using a clip remover, detach the 8 clips and remove the garnish.

52. REMOVE INNER ROOF SIDE GARNISH ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

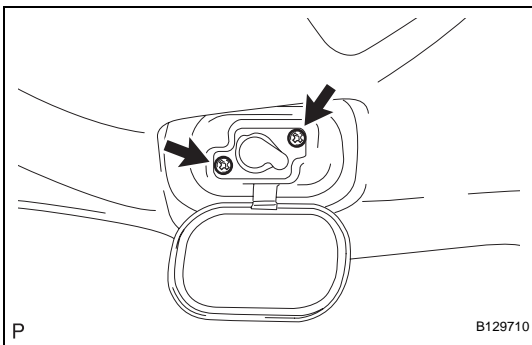


53. REMOVE REAR ROOM PARTITION NET HOOK LH

- (a) Remove the 2 screws and net hook.

54. REMOVE REAR ROOM PARTITION NET HOOK RH


HINT:

Use the same procedures described for the LH side.

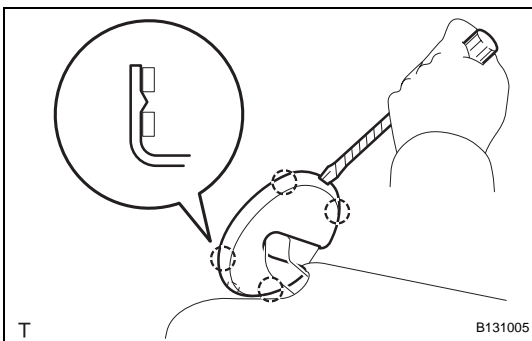

55. REMOVE VISOR ASSEMBLY LH

- (a) Using a screwdriver, detach the 4 claws and remove the visor bracket cover.
HINT:
Tape the screwdriver tip before use.

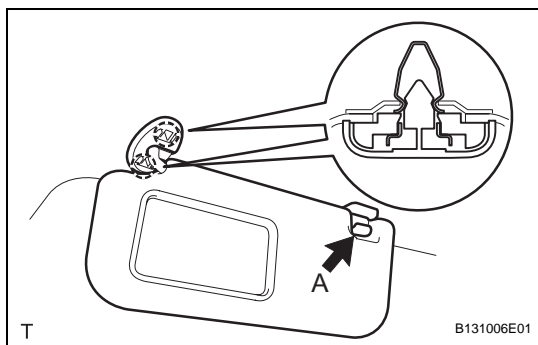


- (b) Remove portion A from the visor holder.
- (c) Detach the 2 claws and remove the visor.

56. REMOVE VISOR ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

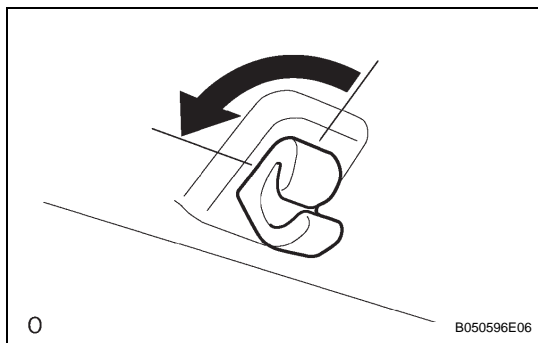

57. REMOVE VISOR HOLDER

- (a) Remove the visor holder by turning it counterclockwise.

58. REMOVE VANITY LIGHT ASSEMBLY (See page [LI-128](#))

59. REMOVE MAP LIGHT ASSEMBLY (See page [LI-115](#))

60. REMOVE ROOM LIGHT ASSEMBLY (See page [LI-118](#))

61. REMOVE TELEVISION GARNISH (w/ Television Display) (See page [AV-165](#))



62. REMOVE TELEVISION DISPLAY ASSEMBLY (w/ Television Display) (See page [AV-165](#))

63. REMOVE ASSIST GRIP COVER (for Front Grip)

- (a) Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.


HINT:

Tape the screwdriver tip before use.

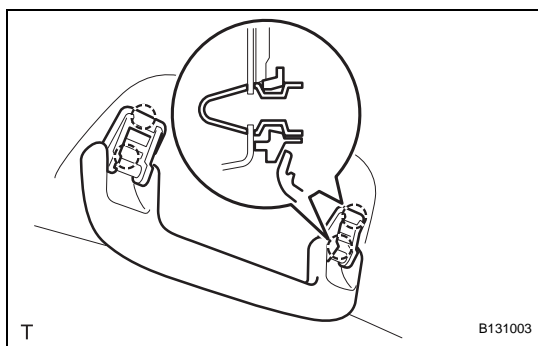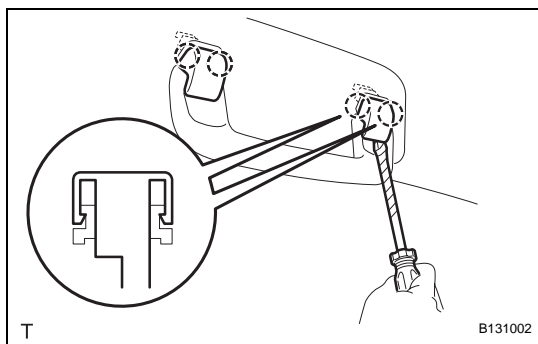

64. REMOVE ASSIST GRIP SUB-ASSEMBLY

- (a) Detach the 4 claws and remove the assist grip.

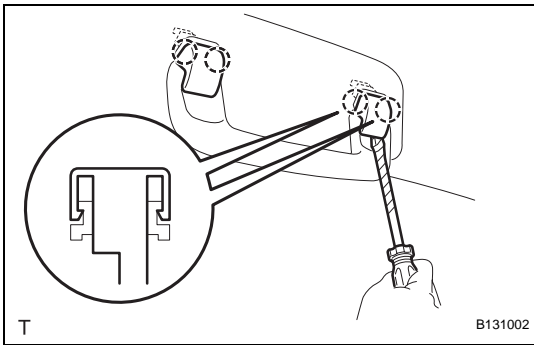


65. REMOVE ASSIST GRIP COVER (for Rear Grip)

- (a) Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.

HINT:

Tape the screwdriver tip before use.

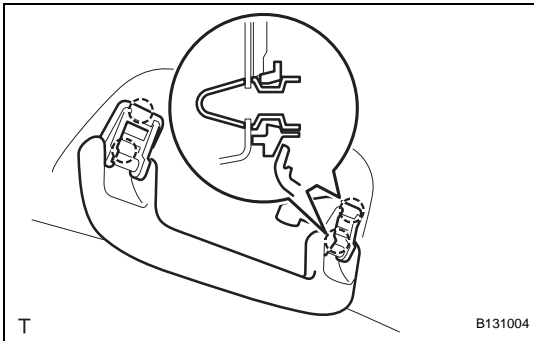


66. REMOVE REAR ASSIST GRIP ASSEMBLY

- (a) Detach the 4 claws and remove the assist grip.

67. REMOVE CHILD RESTRAINT SEAT TETHER ANCHOR COVER (See page [SB-77](#))


68. REMOVE SHOULDER BELT ANCHOR COVER RH (See page [SB-64](#))

69. REMOVE SUN ROOF OPENING TRIM MOULDING

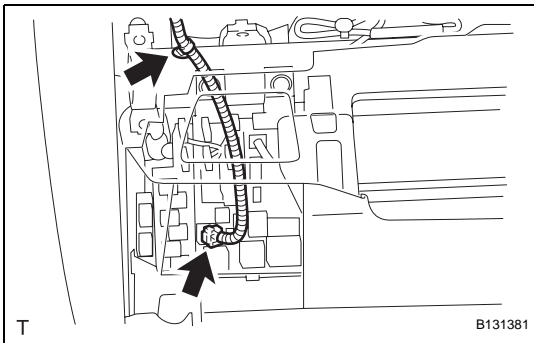

70. REMOVE ROOF HEADLINING ASSEMBLY

- (a) Using a screwdriver, remove the wire harness clamp.
(b) Disconnect the roof wire connector.

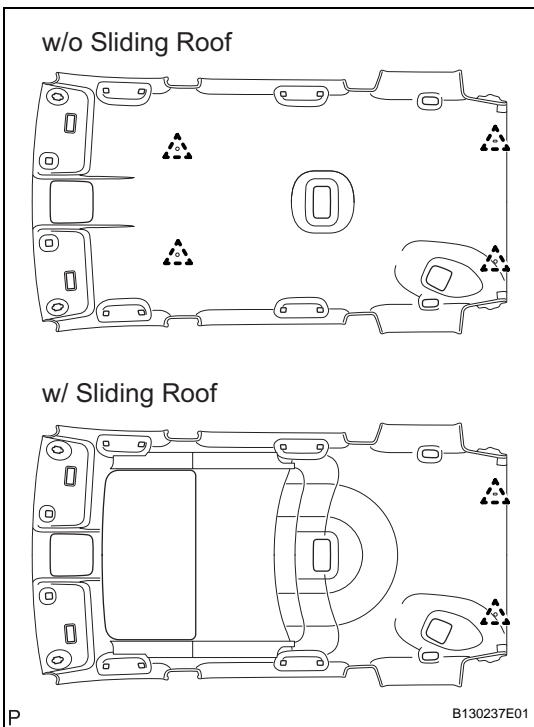

- (c) w/o Sliding Roof:

- (1) Using a clip remover, remove the 4 clips and headlining.

- (d) w/ Sliding Roof:

- (1) Disconnect the connector from the drive gear.
(2) Using a clip remover, remove the 2 clips and headlining.

71. REMOVE NO. 1 ROOF HEADLINING SUPPORT

72. REMOVE NO. 2 ROOF HEADLINING SUPPORT

73. REMOVE NO. 3 ROOF HEADLINING SUPPORT

74. REMOVE NO. 4 ROOF HEADLINING SUPPORT

75. REMOVE NO. 1 ROOF WIRE

- (a) Only when replacing the roof headlining:
(1) Remove the double-sided tape and roof wire.

76. REMOVE NO. 1 ROOF SILENCER PAD

- (a) w/o Sliding Roof:
(1) Remove the 5 silencer pads.
(b) w/ Sliding Roof:
(1) Remove the 2 silencer pads.

77. REMOVE NO. 3 ROOF SILENCER PAD

INSTALLATION

(2005/11-2006/01)

1. INSTALL NO. 1 ROOF SILENCER PAD

- (a) w/o Sliding Roof:
 - (1) Install the 5 silencer pads.
- (b) w/ Sliding Roof:
 - (1) Install the 2 silencer pads.

2. INSTALL NO. 3 ROOF SILENCER PAD

3. INSTALL NO. 1 ROOF WIRE

- (a) Only when replacing the roof headlining:
 - (1) Align the marking, and then install the wire harness with tape.

HINT:

Be careful that dirt or foreign objects do not stick to the adhesive part when peeling off the double-sided tape.

- (2) Attach the roof wire harness along the adhesive part.

NOTICE:

The roof wire harness should be attached securely.

4. INSTALL NO. 1 ROOF HEADLINING SUPPORT

5. INSTALL NO. 2 ROOF HEADLINING SUPPORT

6. INSTALL NO. 3 ROOF HEADLINING SUPPORT

7. INSTALL NO. 4 ROOF HEADLINING SUPPORT



8. INSTALL ROOF HEADLINING ASSEMBLY


- (a) w/o Sliding Roof:
 - (1) Install the headlining with the 4 clips.
- (b) w/ Sliding Roof:
 - (1) Install the headlining with the 2 clips.
 - (2) Connect the connector to the sliding roof drive gear.
- (c) Connect the connector to the roof wire.
- (d) Attach the clamp of the roof wire.

9. INSTALL SUN ROOF OPENING TRIM MOULDING

10. INSTALL SHOULDER BELT ANCHOR COVER RH (See page [SB-65](#))

11. INSTALL CHILD RESTRAINT SEAT TETHER ANCHOR COVER (See page [SB-77](#))

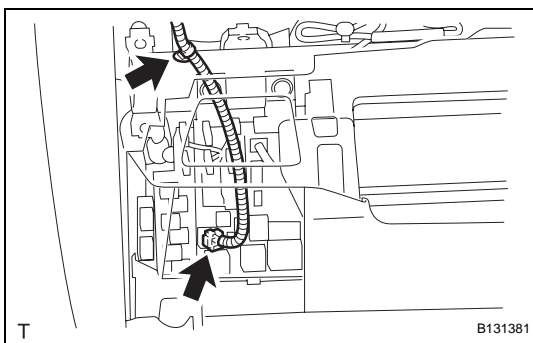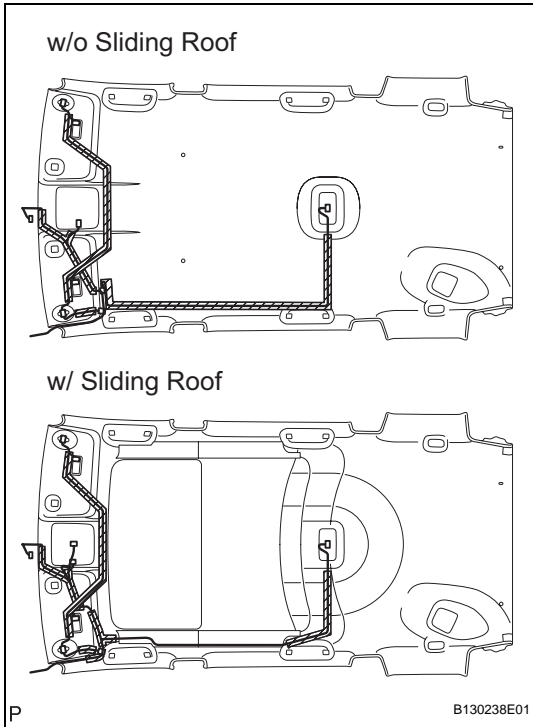


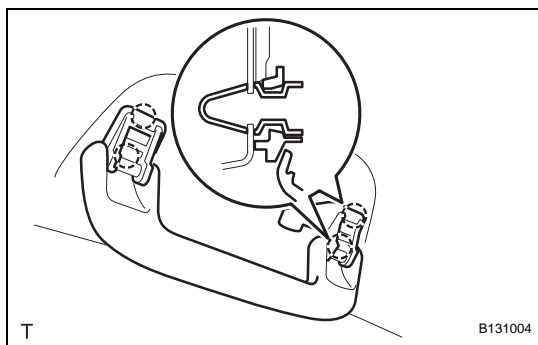**12. INSTALL REAR ASSIST GRIP ASSEMBLY**

- (a) Attach the 4 claws to install the assist grip.

13. INSTALL ASSIST GRIP COVER (for Rear Grip)


- (a) Attach the 4 claws to install the 2 assist grip covers.

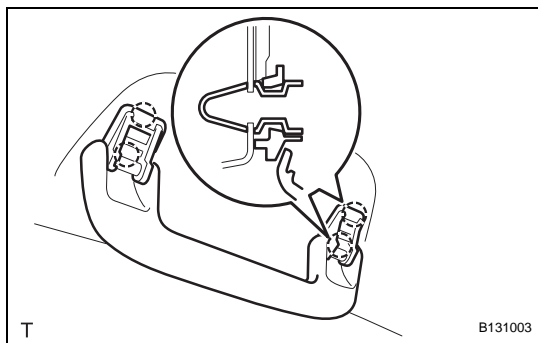**14. INSTALL ASSIST GRIP SUB-ASSEMBLY**


- (a) Attach the 4 claws to install the assist grip.

15. INSTALL ASSIST GRIP COVER (for Front Grip)

- (a) Attach the 4 claws to install the 2 assist grip covers.

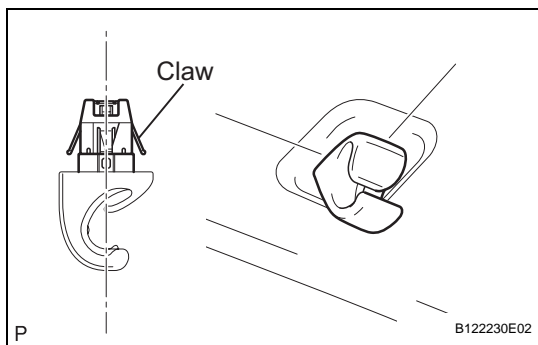16. INSTALL ROOM LIGHT ASSEMBLY (See page LI-119)**17. INSTALL MAP LIGHT ASSEMBLY (See page LI-116)****18. INSTALL VANITY LIGHT ASSEMBLY (See page LI-129)****19. INSTALL VISOR HOLDER**

- (a) Set the claws of the visor holder as shown in the illustration.
(b) Insert the visor holder to install it.

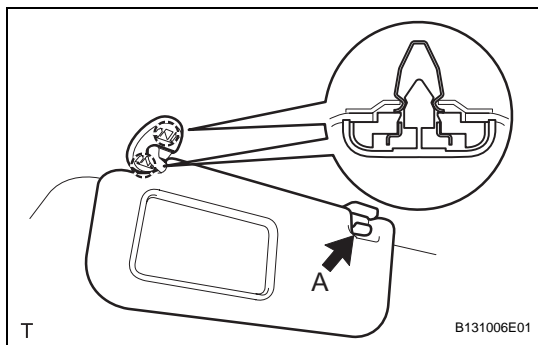
**20. INSTALL VISOR ASSEMBLY LH**

- (a) Attach the 2 claws to install the visor.
(b) Install portion A of the visor onto the visor holder.
(c) Attach the 4 claws to install the visor bracket cover.

21. INSTALL VISOR ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

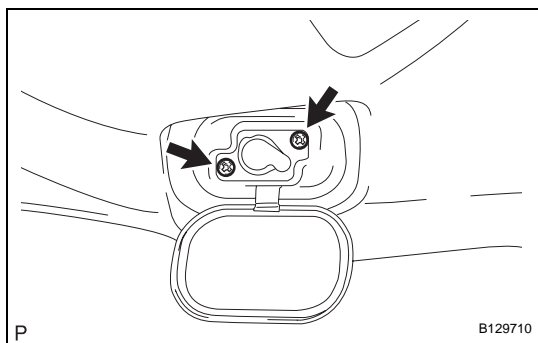
**22. INSTALL REAR ROOM PARTITION NET HOOK LH**

- (a) Install the net hook with the 2 screws.

23. INSTALL REAR ROOM PARTITION NET HOOK RH


HINT:

Use the same procedures described for the LH side.

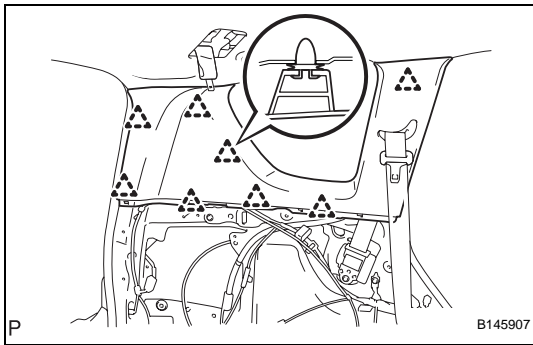


24. INSTALL INNER ROOF SIDE GARNISH ASSEMBLY LH (w/o Rear No. 2 Seat)

- (a) Attach the 8 clips to install the garnish.

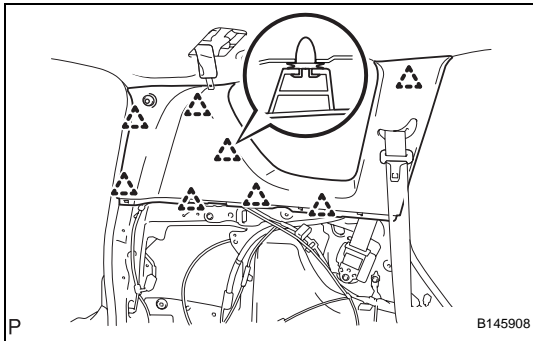

25. INSTALL INNER ROOF SIDE GARNISH ASSEMBLY LH (w/ Rear No. 2 Seat)

- (a) Attach the 8 clips to install the garnish.

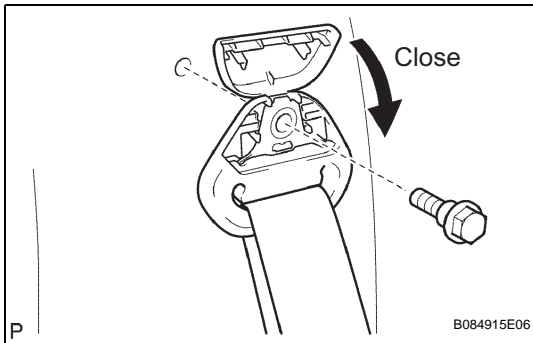


- (b) Connect the rear No. 2 seat belt's shoulder anchor.
 (1) Connect the shoulder anchor with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
 (2) Attach the 2 claws to close the seat belt anchor cover.

26. INSTALL INNER ROOF SIDE GARNISH ASSEMBLY RH


HINT:

Use the same procedures described for the LH side.

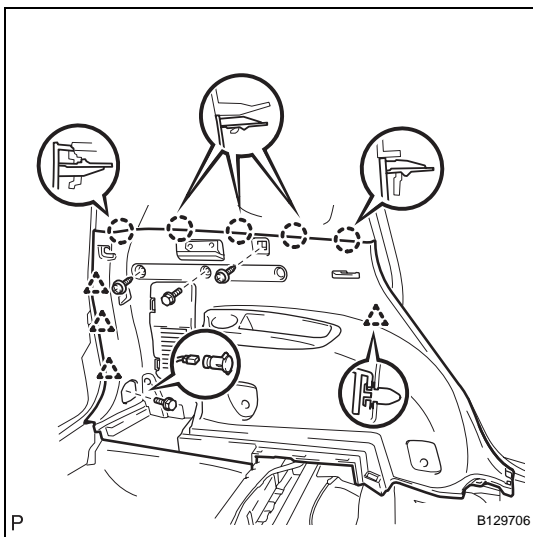


27. INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH (w/o Rear No. 2 Seat)

- (a) Install the belt hanger to the trim board.
 (b) Connect the power outlet socket connector.
 (c) Attach the 4 clips and 5 claws to install the trim board.
 (d) Install the 2 screws and 2 bolts.

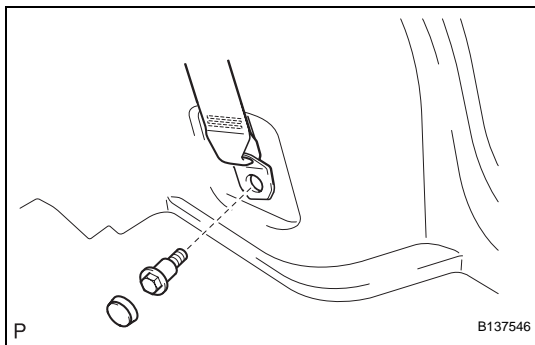


- (e) Connect the rear No. 1 seat belt's floor anchor.
 (1) Connect the floor anchor with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
 (2) Install the anchor cover.

IR

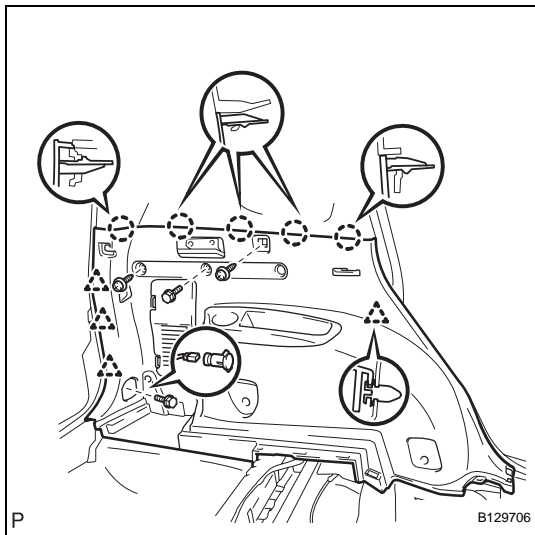


28. INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH (w/ Rear No. 2 Seat)


- (a) Install the belt hanger to the trim board.
 (b) Connect the power outlet socket connector.
 (c) Attach the 4 clips and 5 claws to install the trim board.
 (d) Install the 2 screws and 2 bolts.

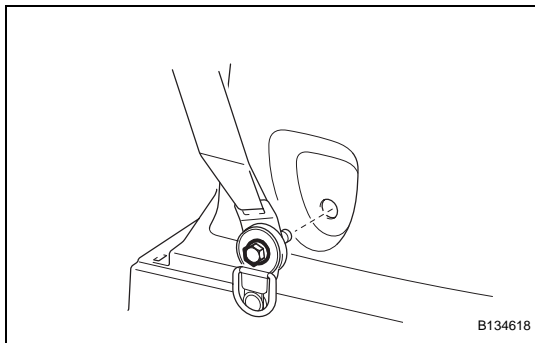

- (e) Connect the rear No. 2 seat belt's floor anchor.
 (1) Connect the floor anchor with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

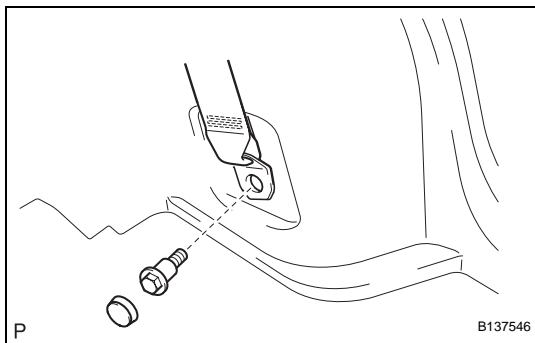


- (f) Connect the rear No. 1 seat belt's floor anchor.
 (1) Connect the floor anchor with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
 (2) Install the anchor cover.

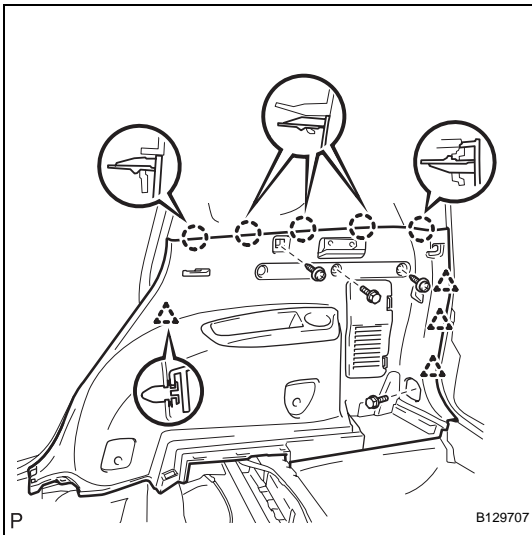


29. INSTALL DECK TRIM SIDE PANEL ASSEMBLY RH (w/o Rear No. 2 Seat)

- (a) Install the belt hanger to the trim board.
- (b) Attach the 4 clips and 5 claws to install the trim board.
- (c) Install the 2 screws and 2 bolts.

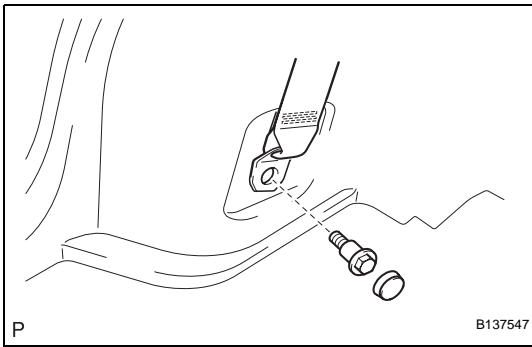


- (d) Connect the rear No. 1 seat belt's floor anchor.
 - (1) Connect the floor anchor with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
 - (2) Install the anchor cover.

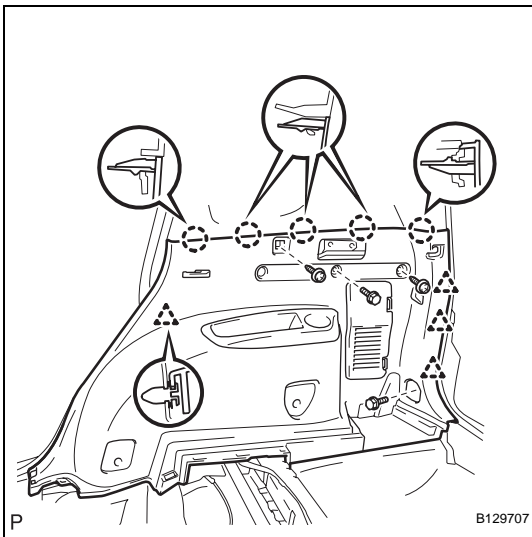


30. INSTALL DECK TRIM SIDE PANEL ASSEMBLY RH (w/ Rear No. 2 Seat)

- (a) Install the belt hanger to the trim board.
- (b) Attach the 4 clips and 5 claws to install the trim board.
- (c) Install the 2 screws and 2 bolts.
- (d) Connect the rear No. 2 seat belt's floor anchor.
 - (1) Connect the floor anchor with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

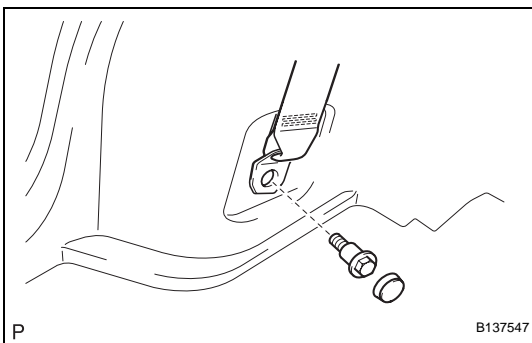

- (e) Connect the rear No. 1 seat belt's floor anchor.
 - (1) Connect the floor anchor with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
 - (2) Install the anchor cover.

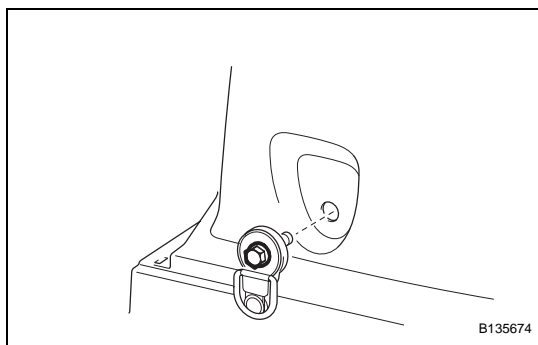


31. INSTALL TETHER ANCHOR BRACKET SUB-ASSEMBLY (w/o Rear No. 2 Seat)

- (a) Install the tether anchor bracket with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

32. INSTALL RECLINING REMOTE CONTROL LEVER BEZEL LH (w/o Rear No. 2 Seat) (See page [SE-73](#))

33. INSTALL RECLINING REMOTE CONTROL LEVER BEZEL RH (w/o Rear No. 2 Seat) (See page [SE-105](#))

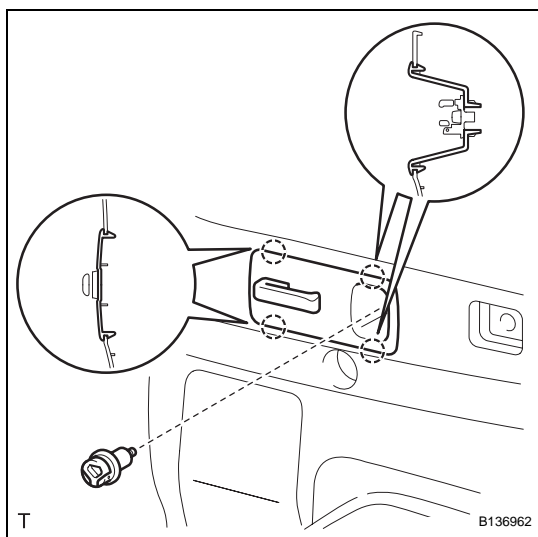


34. INSTALL REAR DECK TRIM COVER LH (w/ Rear No. 2 Seat)

- (a) Attach the 4 claws to install the trim cover.
(b) Install the bolt.

35. INSTALL REAR DECK TRIM COVER RH (w/ Rear No. 2 Seat)

HINT:


Use the same procedures described for the LH side.

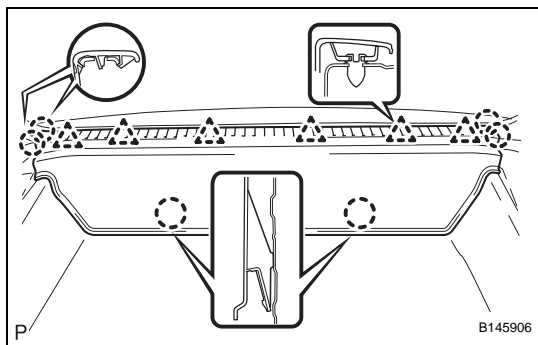

36. INSTALL REAR FLOOR FINISH PLATE


- (a) Attach the 6 claws and 6 clips to install the finish plate.

37. INSTALL BACK DOOR WEATHERSTRIP

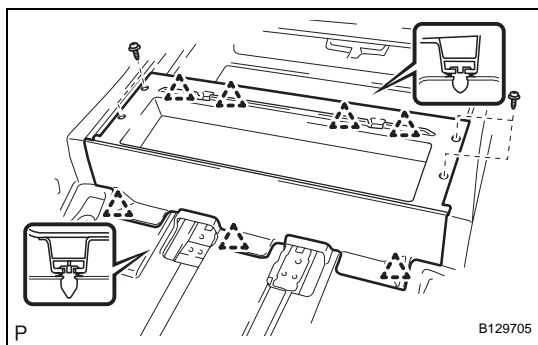

38. INSTALL REAR FLOOR NO. 1 MAT SUPPORT SIDE PLATE

- (a) w/o Rear No. 2 Seat:
(1) Attach the 7 clips to install the side plate.
(2) Install the 4 screws.

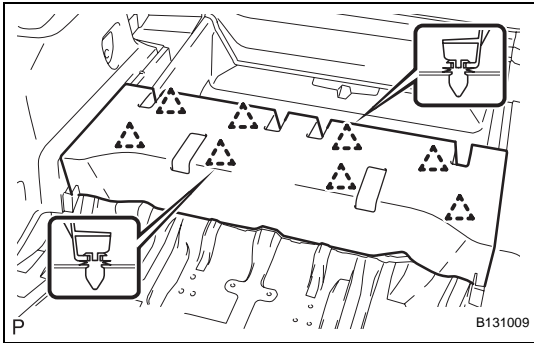

(b) w/ Rear No. 2 Seat:

(1) Attach the 8 clips to install the side plate.

39. INSTALL REAR FLOOR NO. 3 BOARD

40. INSTALL REAR FLOOR NO. 2 BOARD

41. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (w/ Rear No. 2 Seat) (See page [SE-121](#))

42. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (w/ Rear No. 2 Seat)

HINT:

Use the same procedures described for the LH side.

43. INSTALL NO. 2 SEAT LEG COVER LH (w/ Rear No. 2 Seat) (See page [SE-123](#))

44. INSTALL NO. 2 SEAT LEG COVER RH (w/ Rear No. 2 Seat)

HINT:

Use the same procedures described for the LH side.

45. INSTALL NO. 2 SEAT HINGE COVER LH (w/ Rear No. 2 Seat) (See page [SE-123](#))

46. INSTALL NO. 2 SEAT HINGE COVER RH (w/ Rear No. 2 Seat)

HINT:

Use the same procedures described for the LH side.

47. INSTALL DECK BOARD ASSEMBLY (w/o Rear No. 2 Seat)

48. INSTALL REAR FLOOR NO. 1 BOARD (w/o Rear No. 2 Seat)

49. INSTALL TONNEAU COVER ASSEMBLY (w/o Rear No. 2 Seat)

50. INSTALL PACKAGE TRAY TRIM POCKET SUB-ASSEMBLY (w/o Rear No. 2 Seat)

51. INSTALL CENTER PILLAR GARNISH LH


(a) Attach the clip to install the garnish.


(b) Install the 2 screws.

52. INSTALL CENTER PILLAR GARNISH RH


HINT:

Use the same procedures described for the LH side.

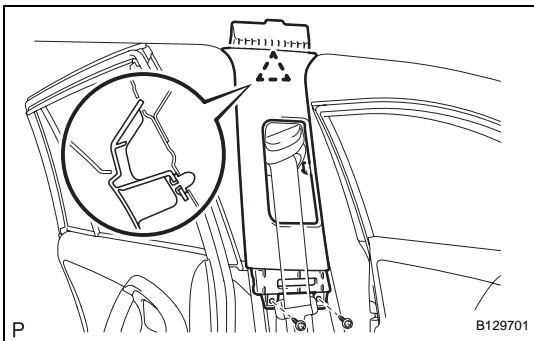

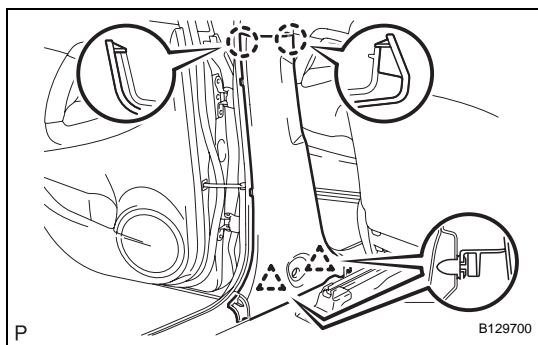**53. INSTALL LOWER CENTER PILLAR GARNISH LH**

- (a) Attach the 2 claws and 2 clips to install the garnish.

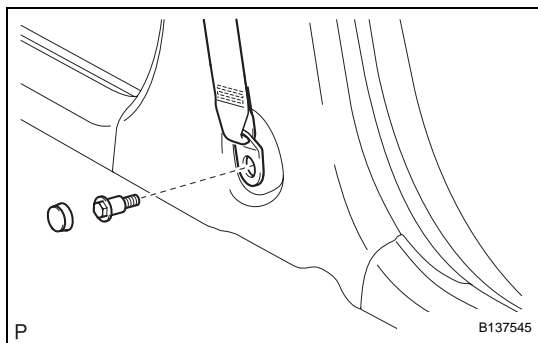

- (b) Connect the front seat outer belt's floor anchor.

- (1) Connect the floor anchor with the bolt.

Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

- (2) Install the anchor cover.

54. INSTALL LOWER CENTER PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

55. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP LH**56. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP RH****57. INSTALL REAR DOOR SCUFF PLATE LH**

- (a) Attach the 9 claws and 2 clips to install the scuff plate.

58. INSTALL REAR DOOR SCUFF PLATE RH



HINT:

Use the same procedures described for the LH side.


59. INSTALL INSTRUMENT PANEL SUB-ASSEMBLY (See page IP-9)**60. INSTALL FRONT PILLAR GARNISH LH**

- (a) w/ Curtain Shield Airbag:


- (1) Remove the piece of cloth or nylon.

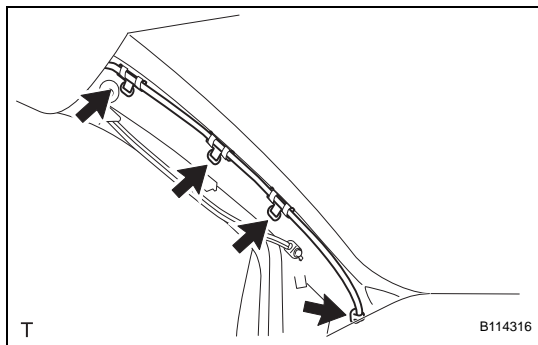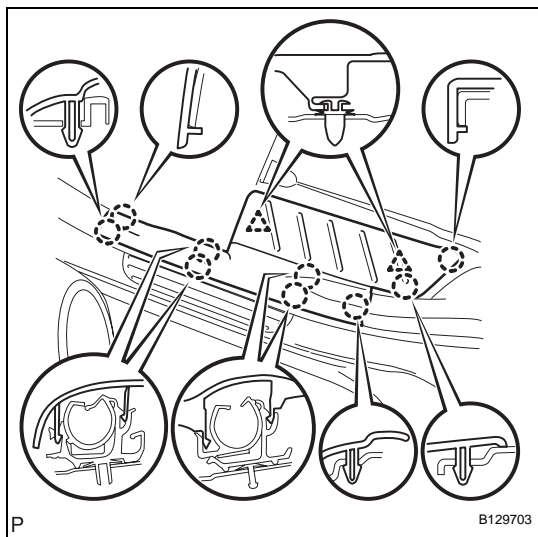

- (b) Install the 4 wire harness clamps.

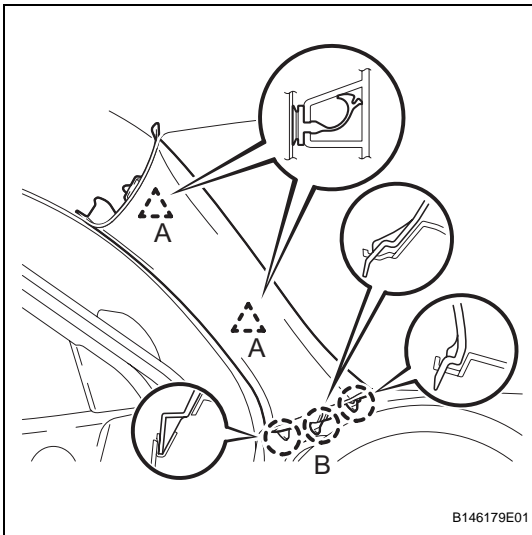


- (c) w/ Curtain Shield Airbag:
- (1) Install 2 new clips labeled A to the vehicle body.
 - (2) Set the 3 claws of the pillar garnish to the area labeled B.
 - (3) Insert the tips of the clips labeled A into the pillar garnish's holes.
 - (4) Using needle-nose pliers, rotate the tips of clips labeled A 90°. Then push the pillar garnish toward the vehicle body to attach the base of the 2 clips labeled A.

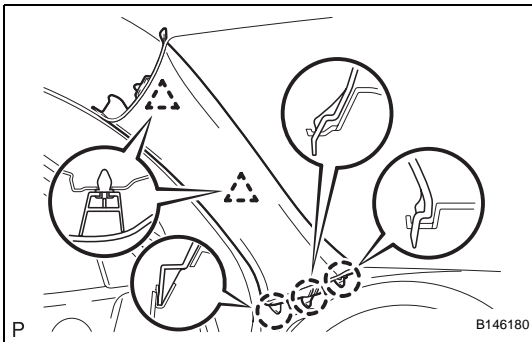


- (d) w/o Curtain Shield Airbag:
- (1) Attach the 2 clips and 3 claws to install the garnish.

61. INSTALL FRONT PILLAR GARNISH RH

- (a) w/ Curtain Shield Airbag:
- (1) Remove the piece of cloth or nylon.

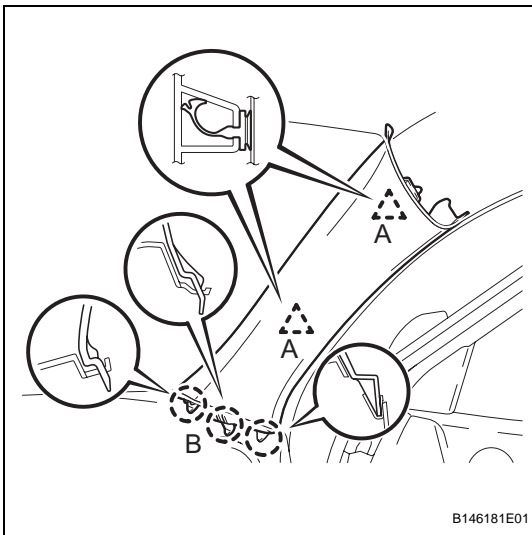

- (b) w/ Curtain Shield Airbag:
- (1) Install 2 new clips labeled A to the vehicle body.
 - (2) Set the 3 claws of the pillar garnish to the area labeled B.
 - (3) Insert the tips of the clips labeled A into the pillar garnish's holes.
 - (4) Using needle-nose pliers, rotate the tips of clips labeled A 90°. Then push the pillar garnish toward the vehicle body to attach the base of the 2 clips labeled A.

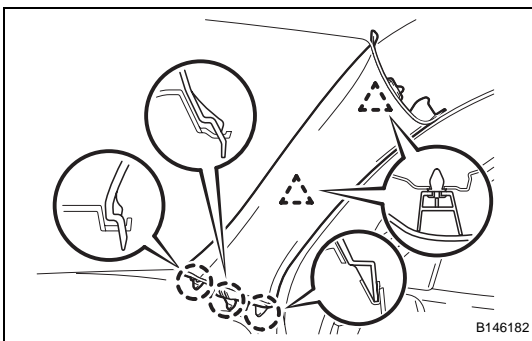

- (c) w/o Curtain Shield Airbag:
- (1) Attach the 2 clips and 3 claws to install the garnish.


62. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-25](#))

63. INSTALL INSTRUMENT PANEL REGISTER ASSEMBLY CENTER (See page [IP-10](#))


64. INSTALL RADIO RECEIVER (See page [IP-10](#))

IR

- 65. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL CENTER (See page [IP-10](#))
- 66. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL CENTER (See page [IP-10](#))
- 67. INSTALL COMBINATION METER ASSEMBLY (See page [IP-11](#))
- 68. INSTALL INSTRUMENT CLUSTER FINISH PANEL ASSEMBLY (See page [IP-11](#))
- 69. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH
- 70. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH

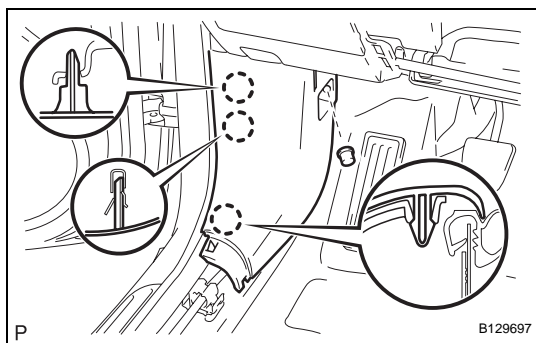

- 71. INSTALL COWL SIDE TRIM BOARD LH
 - (a) Attach the 3 claws to install the trim board.
 - (b) Install the cap nut.
 - 72. INSTALL COWL SIDE TRIM BOARD RH
- HINT:
Use the same procedures described for the LH side.

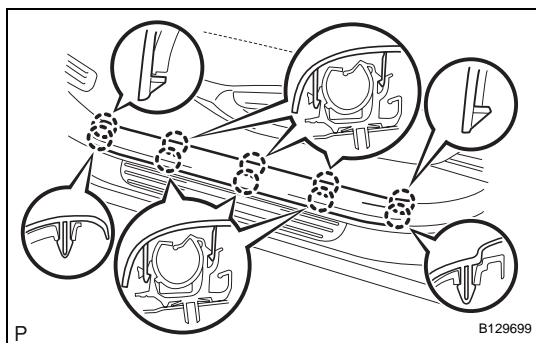

- 73. INSTALL FRONT DOOR SCUFF PLATE LH
 - (a) Attach the 10 claws to install the scuff plate.
 - 74. INSTALL FRONT DOOR SCUFF PLATE RH
- HINT:
Use the same procedures described for the LH side.
- 75. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

INSTALLATION

(2006/01-)

1. INSTALL NO. 1 ROOF SILENCER PAD

- (a) w/o Sliding Roof:
 - (1) Install the 5 silencer pads.
- (b) w/ Sliding Roof:
 - (1) Install the 2 silencer pads.

2. INSTALL NO. 3 ROOF SILENCER PAD

3. INSTALL NO. 1 ROOF WIRE

- (a) Only when replacing the roof headlining:
 - (1) Align the marking, and then install the wire harness with tape.

HINT:

Be careful that dirt or foreign objects do not stick to the adhesive part when peeling off the double-sided tape.

- (2) Attach the roof wire harness along the adhesive part.

NOTICE:

The roof wire harness should be attached securely.

4. INSTALL NO. 1 ROOF HEADLINING SUPPORT

5. INSTALL NO. 2 ROOF HEADLINING SUPPORT

6. INSTALL NO. 3 ROOF HEADLINING SUPPORT

7. INSTALL NO. 4 ROOF HEADLINING SUPPORT



8. INSTALL ROOF HEADLINING ASSEMBLY


- (a) w/o Sliding Roof:
 - (1) Install the headlining with the 4 clips.
- (b) w/ Sliding Roof:
 - (1) Install the headlining with the 2 clips.
 - (2) Connect the connector to the sliding roof drive gear.
- (c) Connect the connector to the roof wire.
- (d) Attach the clamp of the roof wire.

9. INSTALL SUN ROOF OPENING TRIM MOULDING

10. INSTALL SHOULDER BELT ANCHOR COVER RH (See page [SB-65](#))

11. INSTALL CHILD RESTRAINT SEAT TETHER ANCHOR COVER (See page [SB-77](#))

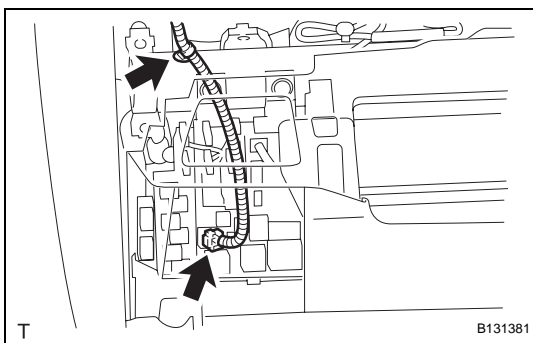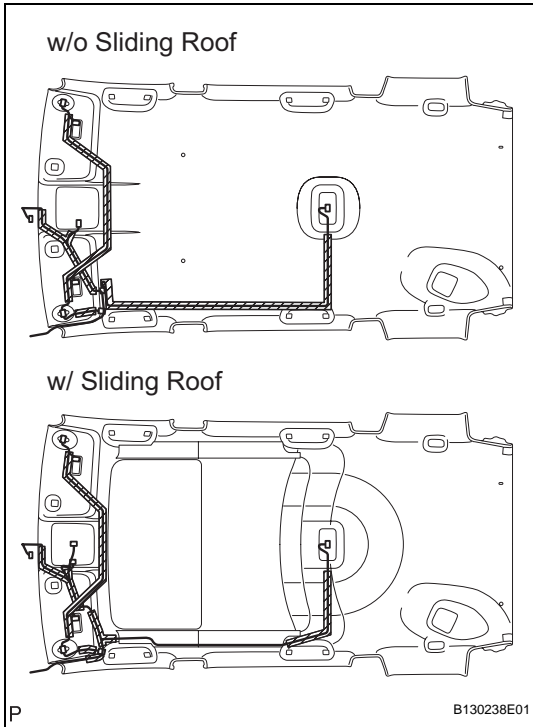


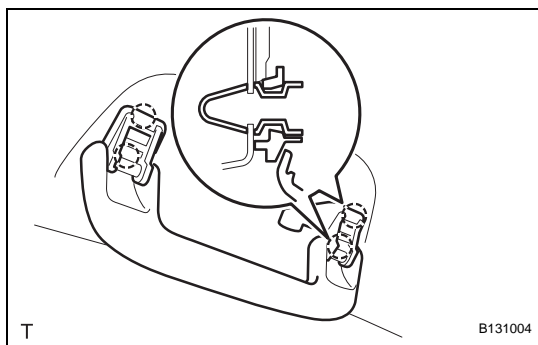**12. INSTALL REAR ASSIST GRIP ASSEMBLY**

- (a) Attach the 4 claws to install the assist grip.

13. INSTALL ASSIST GRIP COVER (for Rear Grip)

- (a) Attach the 4 claws to install the 2 assist grip covers.

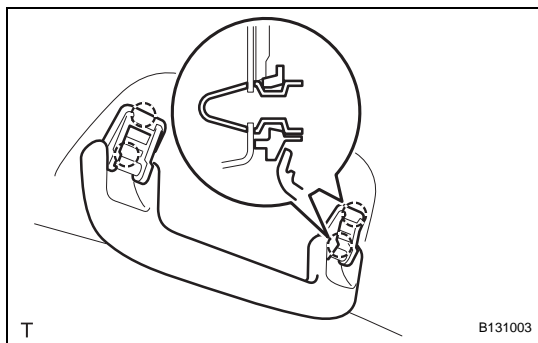**14. INSTALL ASSIST GRIP SUB-ASSEMBLY**


- (a) Attach the 4 claws to install the assist grip.

15. INSTALL ASSIST GRIP COVER (for Front Grip)

- (a) Attach the 4 claws to install the 2 assist grip covers.

16. INSTALL TELEVISION DISPLAY ASSEMBLY (w/ Television Display) (See page AV-166)**17. INSTALL TELEVISION GARNISH (w/ Television Display) (See page AV-166)****18. INSTALL ROOM LIGHT ASSEMBLY (See page LI-119)****19. INSTALL MAP LIGHT ASSEMBLY (See page LI-116)****20. INSTALL VANITY LIGHT ASSEMBLY (See page LI-129)****21. INSTALL VISOR HOLDER**

- (a) Set the claws of the visor holder as shown in the illustration.
(b) Insert the visor holder to install it.

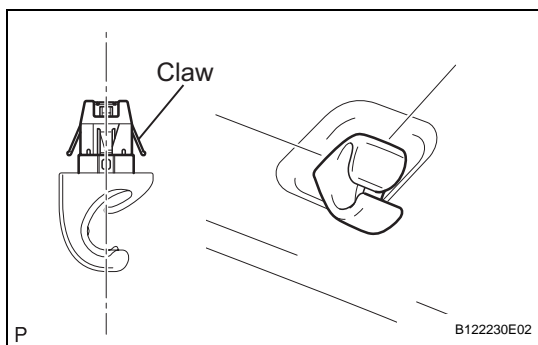
**22. INSTALL VISOR ASSEMBLY LH**


- (a) Attach the 2 claws to install the visor.
(b) Install portion A of the visor onto the visor holder.
(c) Attach the 4 claws to install the visor bracket cover.

23. INSTALL VISOR ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

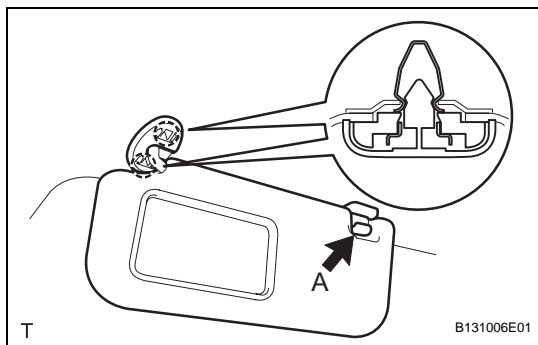

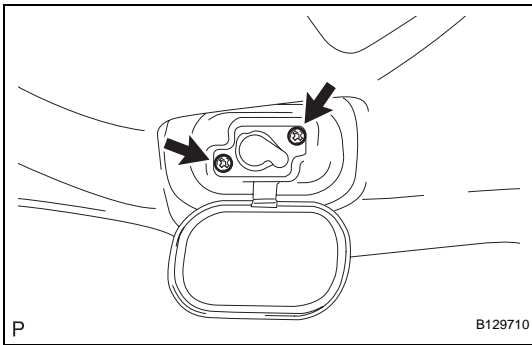


24. INSTALL REAR ROOM PARTITION NET HOOK LH

- (a) Install the net hook with the 2 screws.

25. INSTALL REAR ROOM PARTITION NET HOOK RH


HINT:

Use the same procedures described for the LH side.

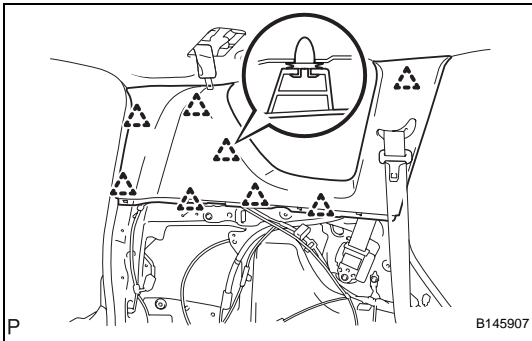


26. INSTALL INNER ROOF SIDE GARNISH ASSEMBLY LH (w/o Rear No. 2 Seat)

- (a) Attach the 8 clips to install the garnish.

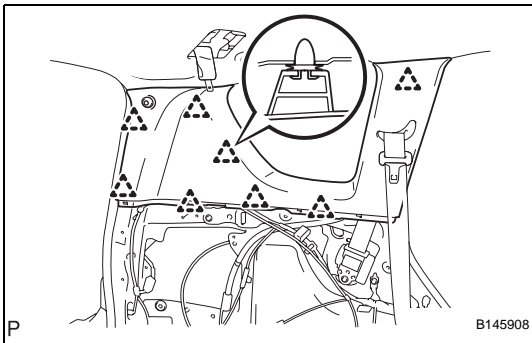

27. INSTALL INNER ROOF SIDE GARNISH ASSEMBLY LH (w/ Rear No. 2 Seat)

- (a) Attach the 8 clips to install the garnish.

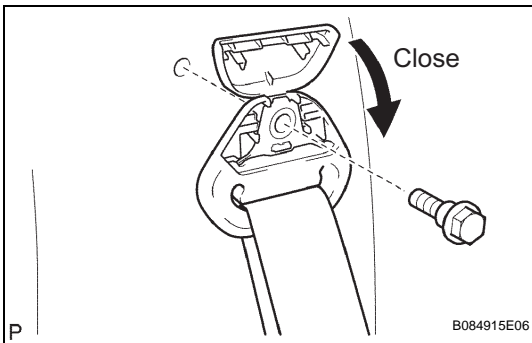

- (b) Connect the rear No. 2 seat belt's shoulder anchor.

- (1) Connect the shoulder anchor with the bolt.


Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

- (2) Attach the 2 claws to close the seat belt anchor cover.

28. INSTALL INNER ROOF SIDE GARNISH ASSEMBLY RH


HINT:

Use the same procedures described for the LH side.

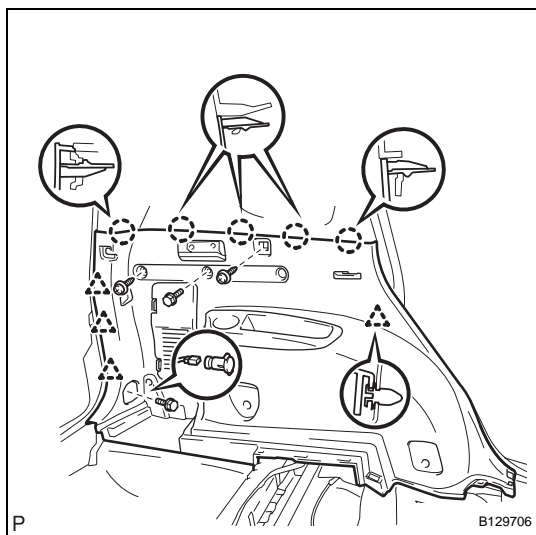


29. INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH (w/ o Rear No. 2 Seat)

- Install the belt hanger to the trim board.
- Connect the power outlet socket connector.
- Attach the 4 clips and 5 claws to install the trim board.
- Install the 2 screws and 2 bolts.

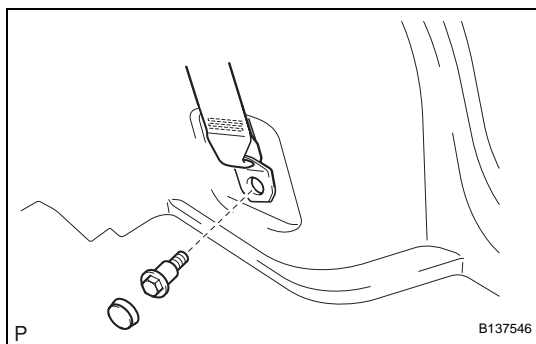


- Connect the rear No. 1 seat belt's floor anchor.
 - Connect the floor anchor with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
 - Install the anchor cover.

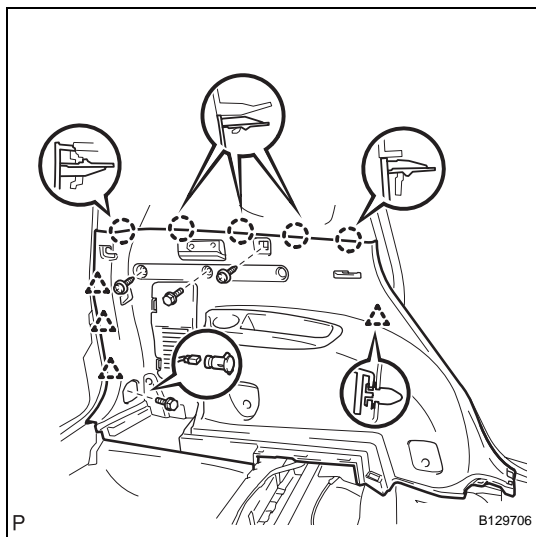


30. INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH (w/ Rear No. 2 Seat)


- Install the belt hanger to the trim board.
- Connect the power outlet socket connector.
- Attach the 4 clips and 5 claws to install the trim board.
- Install the 2 screws and 2 bolts.

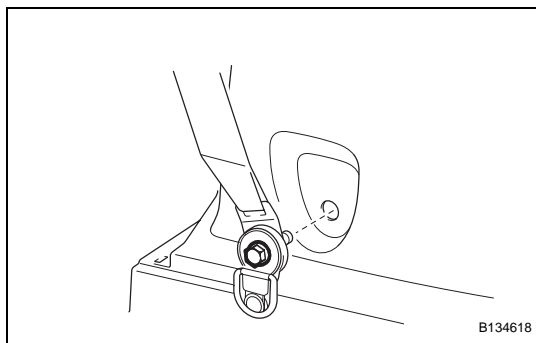

- Connect the rear No. 2 seat belt's floor anchor.
 - Connect the floor anchor with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

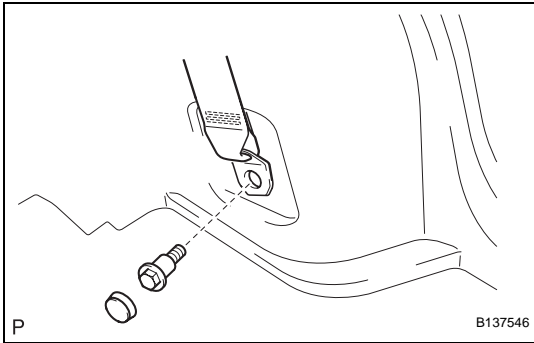


- (f) Connect the rear No. 1 seat belt's floor anchor.
- (1) Connect the floor anchor with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
 - (2) Install the anchor cover.

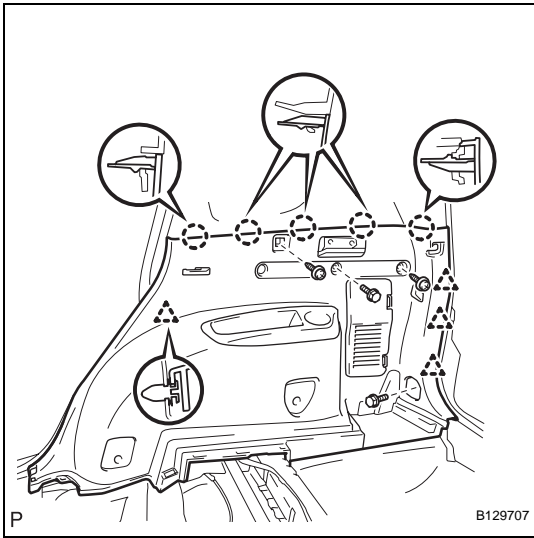


31. INSTALL DECK TRIM SIDE PANEL ASSEMBLY RH (w/o Rear No. 2 Seat)

- (a) Install the belt hanger to the trim board.
- (b) Attach the 4 clips and 5 claws to install the trim board.
- (c) Install the 2 screws and 2 bolts.

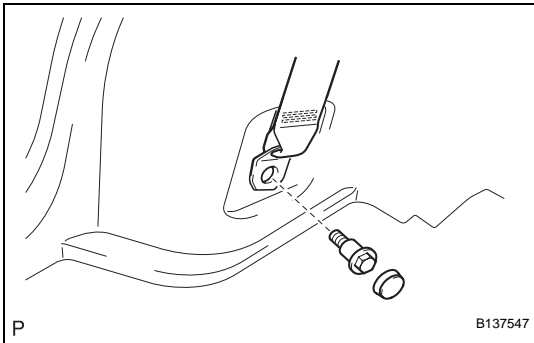


- (d) Connect the rear No. 1 seat belt's floor anchor.
- (1) Connect the floor anchor with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
 - (2) Install the anchor cover.

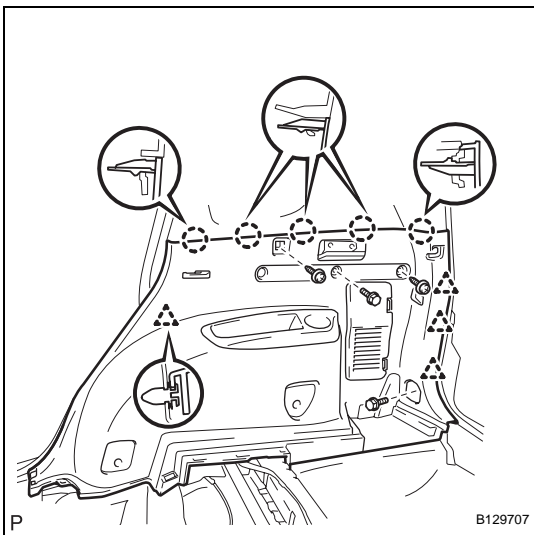


32. INSTALL DECK TRIM SIDE PANEL ASSEMBLY RH (w/ Rear No. 2 Seat)

- (a) Install the belt hanger to the trim board.
- (b) Attach the 4 clips and 5 claws to install the trim board.
- (c) Install the 2 screws and 2 bolts.
- (d) Connect the rear No. 2 seat belt's floor anchor.
- (1) Connect the floor anchor with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

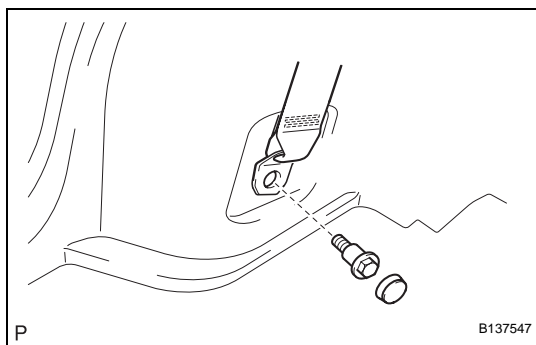

- (e) Connect the rear No. 1 seat belt's floor anchor.
- (1) Connect the floor anchor with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
 - (2) Install the anchor cover.

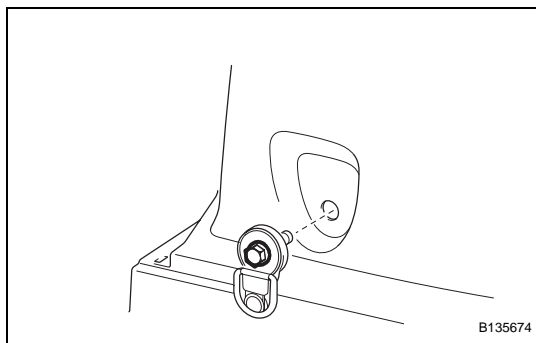


33. INSTALL TETHER ANCHOR BRACKET SUB-ASSEMBLY (w/o Rear No. 2 Seat)

- (a) Install the tether anchor bracket with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

34. INSTALL RECLINING REMOTE CONTROL LEVER BEZEL LH (w/o Rear No. 2 Seat) (See page [SE-73](#))

35. INSTALL RECLINING REMOTE CONTROL LEVER BEZEL RH (w/o Rear No. 2 Seat) (See page [SE-105](#))

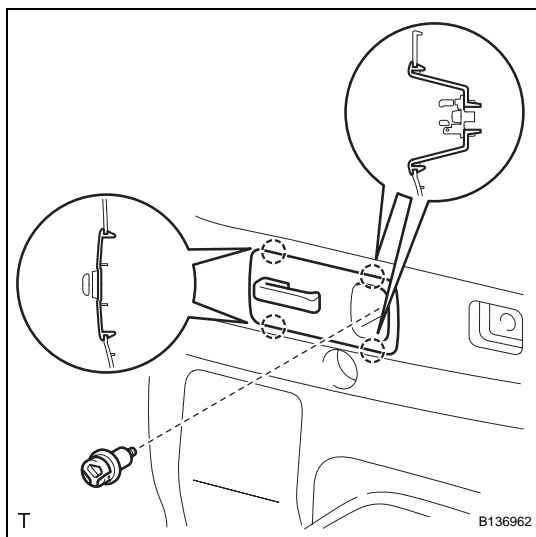


36. INSTALL REAR DECK TRIM COVER LH (w/ Rear No. 2 Seat)

- (a) Attach the 4 claws to install the trim cover.
(b) Install the bolt.

37. INSTALL REAR DECK TRIM COVER RH (w/ Rear No. 2 Seat)

HINT:


Use the same procedures described for the LH side.

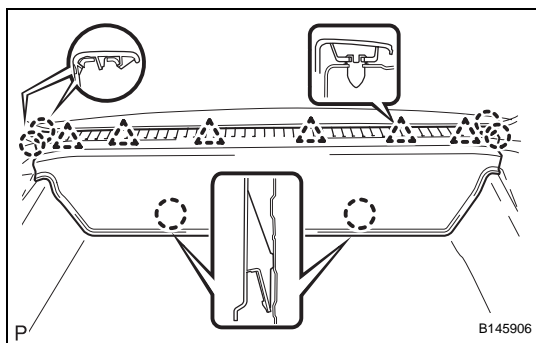

38. INSTALL REAR FLOOR FINISH PLATE

- (a) Attach the 6 claws and 6 clips to install the finish plate.


39. INSTALL BACK DOOR WEATHERSTRIP

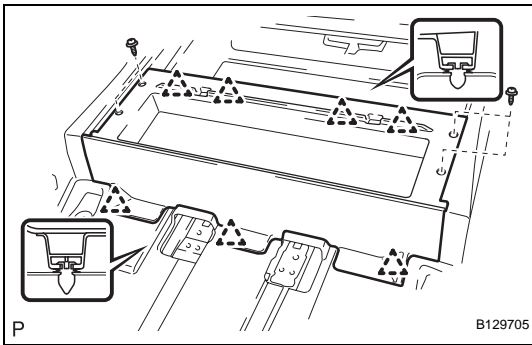

40. INSTALL REAR FLOOR NO. 1 MAT SUPPORT SIDE PLATE

(a) w/o Rear No. 2 Seat:

- (1) Attach the 7 clips to install the side plate.
- (2) Install the 4 screws.

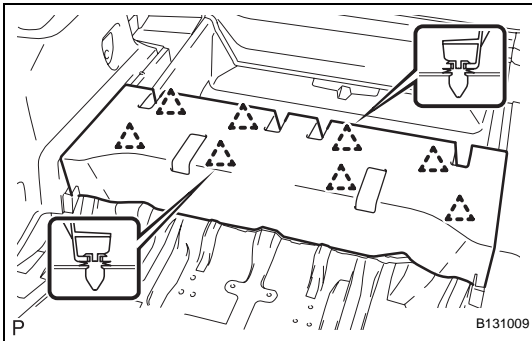

(b) w/ Rear No. 2 Seat:

- (1) Attach the 8 clips to install the side plate.

41. INSTALL REAR FLOOR NO. 3 BOARD

42. INSTALL REAR FLOOR NO. 2 BOARD

43. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (w/ Rear No. 2 Seat) (See page [SE-121](#))

44. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (w/ Rear No. 2 Seat)

HINT:

Use the same procedures described for the LH side.

45. INSTALL NO. 2 SEAT LEG COVER LH (w/ Rear No. 2 Seat) (See page [SE-123](#))

46. INSTALL NO. 2 SEAT LEG COVER RH (w/ Rear No. 2 Seat)

HINT:

Use the same procedures described for the LH side.

47. INSTALL NO. 2 SEAT HINGE COVER LH (w/ Rear No. 2 Seat) (See page [SE-123](#))

48. INSTALL NO. 2 SEAT HINGE COVER RH (w/ Rear No. 2 Seat)

HINT:


Use the same procedures described for the LH side.

49. INSTALL DECK BOARD ASSEMBLY (w/o Rear No. 2 Seat)

50. INSTALL REAR FLOOR NO. 1 BOARD (w/o Rear No. 2 Seat)

51. INSTALL TONNEAU COVER ASSEMBLY (w/o Rear No. 2 Seat)

52. INSTALL PACKAGE TRAY TRIM POCKET SUB-ASSEMBLY (w/o Rear No. 2 Seat)

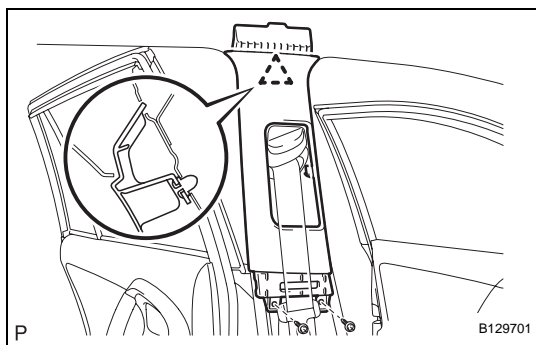
**53. INSTALL CENTER PILLAR GARNISH LH**

- (a) Attach the clip to install the garnish.
- (b) Install the 2 screws.


54. INSTALL CENTER PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

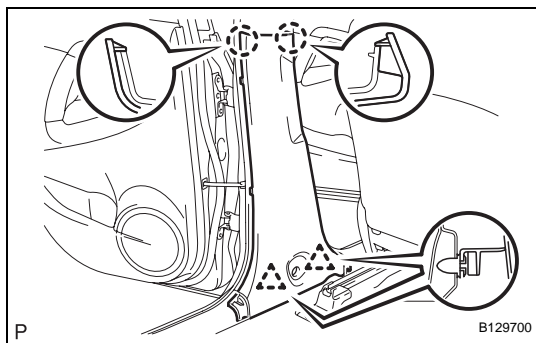**55. INSTALL LOWER CENTER PILLAR GARNISH LH**

- (a) Attach the 2 claws and 2 clips to install the garnish.

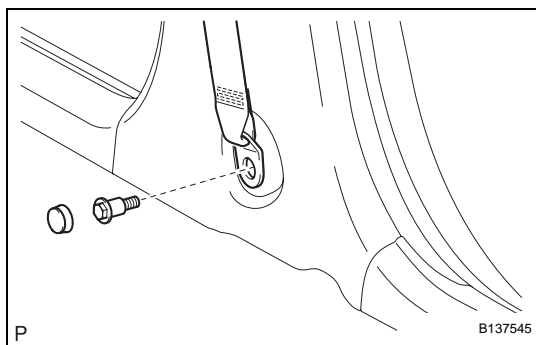

- (b) Connect the front seat outer belt's floor anchor.

- (1) Connect the floor anchor with the bolt.

Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

- (2) Install the anchor cover.

56. INSTALL LOWER CENTER PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

57. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP LH**58. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP RH****59. INSTALL REAR DOOR SCUFF PLATE LH**

- (a) Attach the 9 claws and 2 clips to install the scuff plate.

60. INSTALL REAR DOOR SCUFF PLATE RH


HINT:


Use the same procedures described for the LH side.

61. INSTALL INSTRUMENT PANEL SUB-ASSEMBLY (See page IP-9)**62. INSTALL FRONT PILLAR GARNISH LH**


- (a) w/ Curtain Shield Airbag:

- (1) Remove the piece of cloth or nylon.

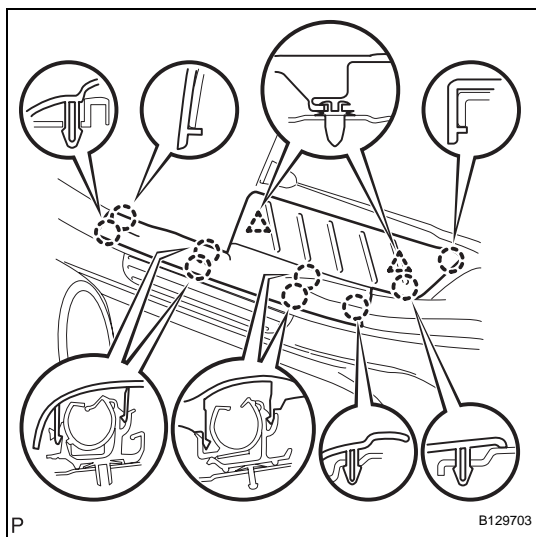


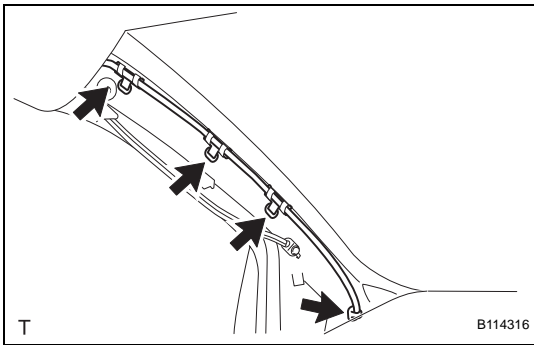

- (b) Install the 4 wire harness clamps.

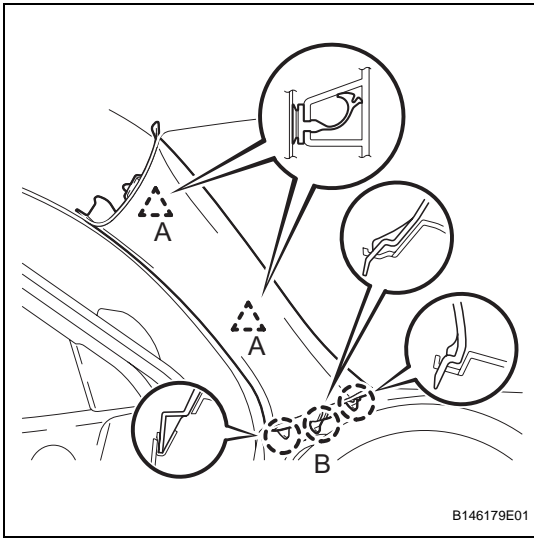


- (c) w/ Curtain Shield Airbag:
- (1) Install 2 new clips labeled A to the vehicle body.
 - (2) Set the 3 claws of the pillar garnish to the area labeled B.
 - (3) Insert the tips of the clips labeled A into the pillar garnish's holes.
 - (4) Using needle-nose pliers, rotate the tips of clips labeled A 90°. Then push the pillar garnish toward the vehicle body to attach the base of the 2 clips labeled A.

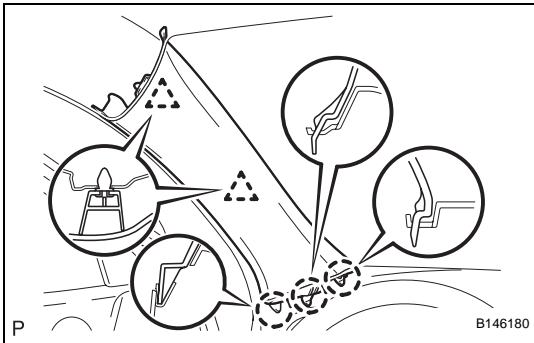


- (d) w/o Curtain Shield Airbag:
- (1) Attach the 2 clips and 3 claws to install the garnish.

63. INSTALL FRONT PILLAR GARNISH RH

- (a) w/ Curtain Shield Airbag:
- (1) Remove the piece of cloth or nylon.

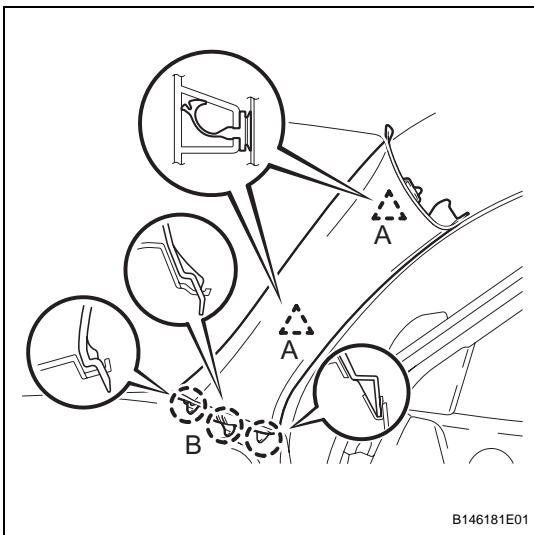

- (b) w/ Curtain Shield Airbag:
- (1) Install 2 new clips labeled A to the vehicle body.
 - (2) Set the 3 claws of the pillar garnish to the area labeled B.
 - (3) Insert the tips of the clips labeled A into the pillar garnish's holes.
 - (4) Using needle-nose pliers, rotate the tips of clips labeled A 90°. Then push the pillar garnish toward the vehicle body to attach the base of the 2 clips labeled A.

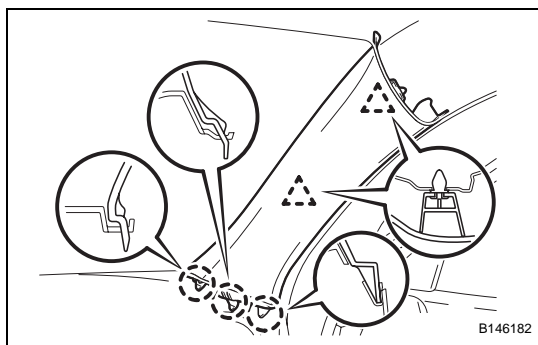

- (c) w/o Curtain Shield Airbag:
 (1) Attach the 2 clips and 3 claws to install the garnish.

64. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY
 (See page [IP-25](#))

65. INSTALL INSTRUMENT PANEL REGISTER ASSEMBLY CENTER (See page [IP-10](#))

66. INSTALL RADIO RECEIVER (See page [IP-10](#))

67. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL CENTER (See page [IP-10](#))

68. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL CENTER (See page [IP-10](#))

69. INSTALL COMBINATION METER ASSEMBLY (See page [IP-11](#))


70. INSTALL INSTRUMENT CLUSTER FINISH PANEL ASSEMBLY (See page [IP-11](#))

71. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH

72. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH

73. INSTALL COWL SIDE TRIM BOARD LH
 (a) Attach the 3 claws to install the trim board.
 (b) Install the cap nut.

74. INSTALL COWL SIDE TRIM BOARD RH
 HINT:
 Use the same procedures described for the LH side.

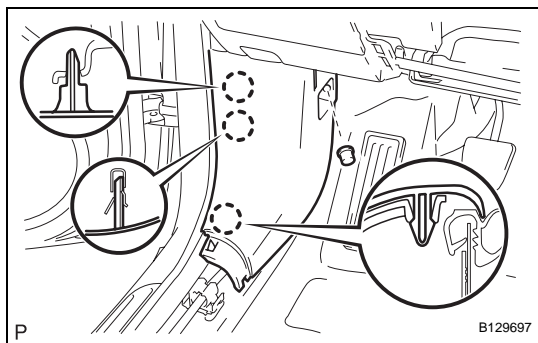

75. INSTALL FRONT DOOR SCUFF PLATE LH
 (a) Attach the 10 claws to install the scuff plate.

76. INSTALL FRONT DOOR SCUFF PLATE RH
 HINT:
 Use the same procedures described for the LH side.

77. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

